




How to Get Rid of Fan Clicking Noises on a Toshiba TDP-XP2

This guide shows how to remedy excessively loud clicking noises on a Toshiba XP2 projector.

Written By: Bryan Underwood

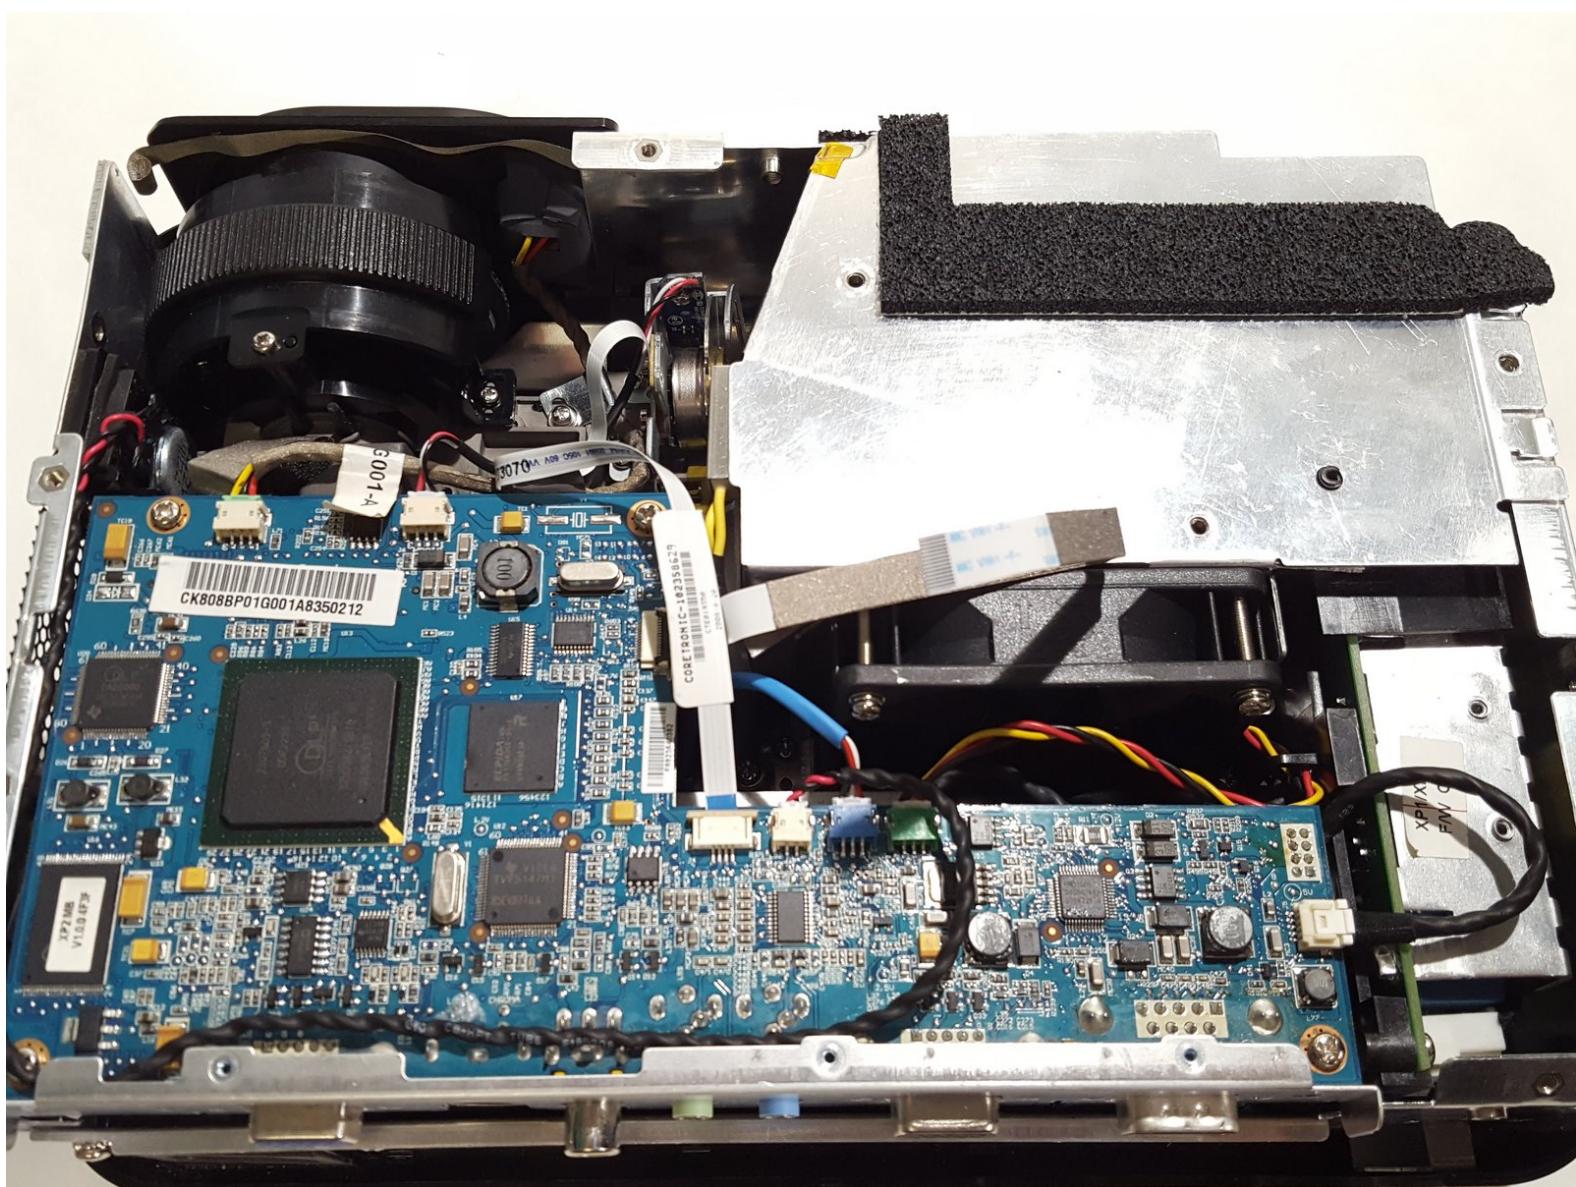

INTRODUCTION

Sometimes cables can get in the way of the internal fan and will grind against it creating a moderate clicking sound. This guide will show how to get rid of that noise.

TOOLS:


- 1 x PH0 screw bit (1)
- Phillips #2 Screwdriver (1)
- Metal Spudger (1)

Step 1 — How to Get Rid of Fan Clicking Noises on a Toshiba TDP-XP2



- Start by removing the two screws on the bottom of the device as shown.



Step 2

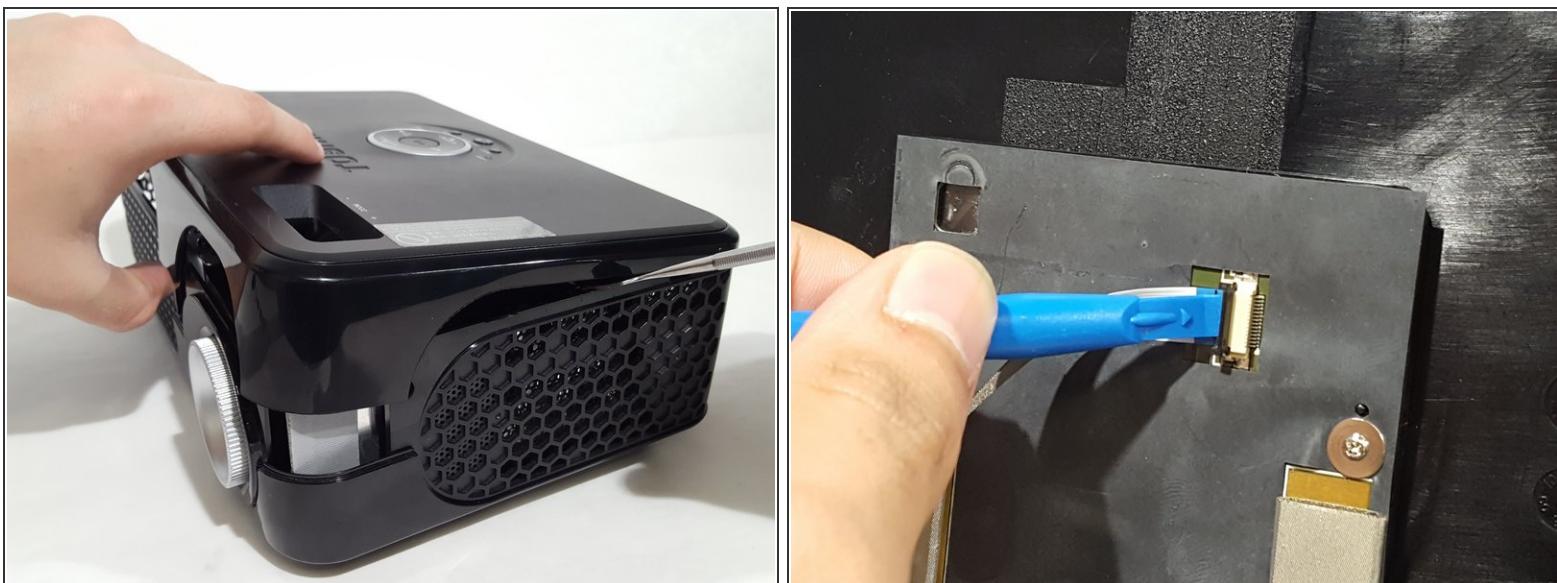

- Remove the top plastic cover from the device. The back is snapped on so it would help to have leverage from a prying tool.
- Remove the ribbon cable attached to the plastic piece just removed. Remember its orientation for re-assembling later.


This document was generated on 2019-09-28 06:31:37 AM (MST).

Step 3

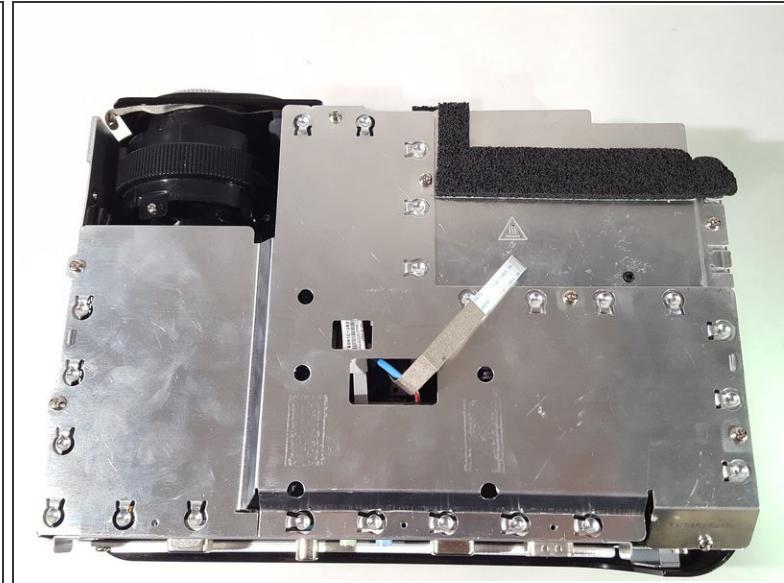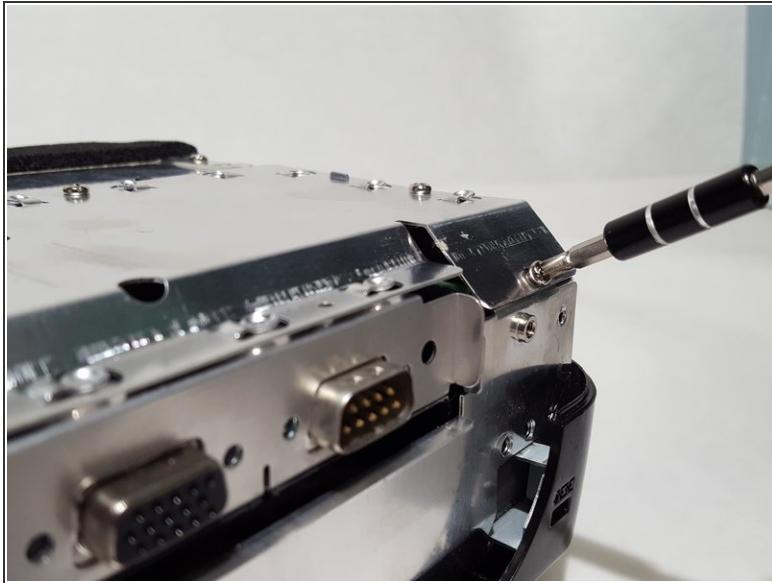

- Unscrew the screws from the metal shielding to remove it.

Step 4

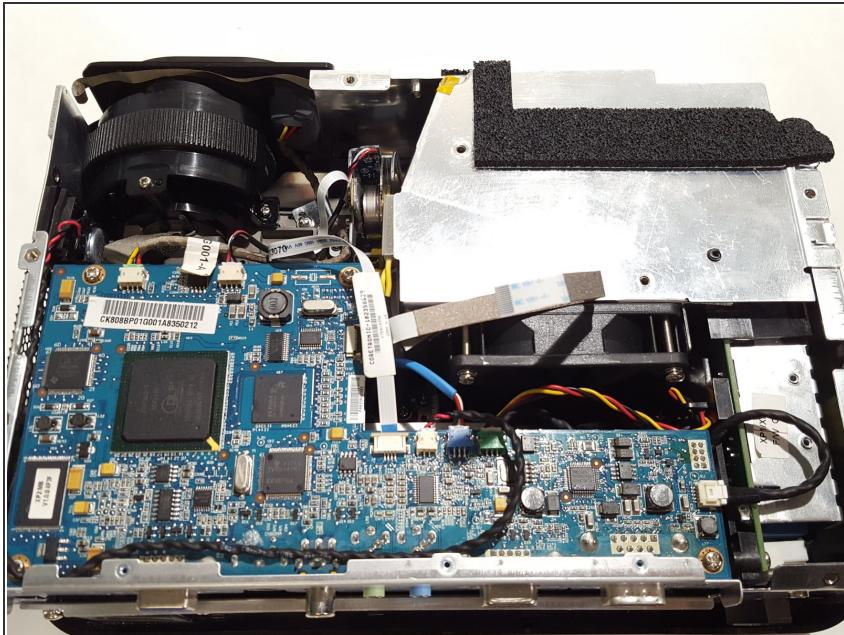

- Move any wires out of the way of the fan so they won't grind up on it during operation.
- If the cables do not stay out of the way, tape them down away from the fan.

To reassemble your device, follow these instructions in reverse order.