



# How to HP Photosmart Premium e-All-in-One C310a

Steps for cleaning the Photosmart C310a head

Written By: Fer Rod



## INTRODUCTION

It is necessary to have a container with hot water to clean the head

## Step 1 — Clean printer head



- Steps for cleaning the Photosmart C310a head

## Step 2



- Step 2.
- 1. Turn on the printer and open the front cover 2. Remove the cartridges. Remove the cartridge Image: Remove the cartridge 3. Then, just as the printer is turned on, unplug the printer from the back of the power cord. 4. Remove the head. Lift the handle of the latch
- New line.
- New line.

To reassemble your device, follow these instructions in reverse order.