



# How to: Linksys Wireless-G Print Server

This guide will demonstrate the installation, configuration, and use of the Linksys Wireless-G Print Server.

Written By: Scott Rosen



## Step 1 — Connecting the Print Server



- 1. Use the USB cable to connect your USB printer to the PrintServer's USB Printer port. Plug the Type A connector end into the PrintServer and the Type B connector end into the printer.
- 2. If you are connecting the PrintServer to your wired network, then plug one end of the Ethernet network cable into the PrintServer's Ethernet port. Then connect the other end of the cable to your router or switch. The distance between the PrintServer and the other device should not exceed 328 feet (100 meters).

To reassemble your device, follow these instructions in reverse order.