



How to Open Logitech Harmony 1100

This guide explains how to get inside the Logitech Harmony 1100

Written By: Keegan Williams



 **TOOLS:**

- [iFixit Opening Tools \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)
- [JIS Driver Set \(1\)](#)

Step 1 — How to Open Logitech Harmony 1100




- Remove battery cover, pushing down on circled areas and pushing outward
- Remove battery by lifting up on corner exposed by indent in case

Step 2



- Use a J0 screwdriver head
- Remove 3 screws from battery compartment

Step 3

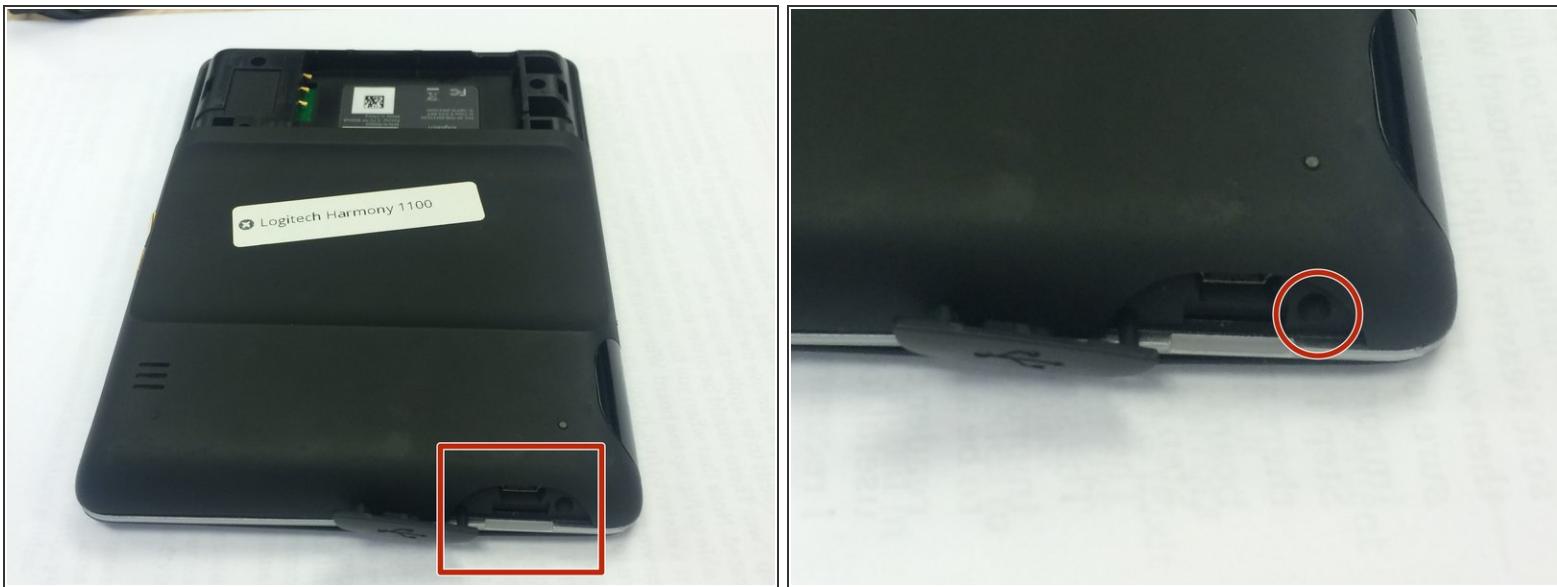

- Open connector port on side
- Remove screw with PH00 screwdriver head

Step 4



- Use plastic opening tool to pry at the open slits on the side.

⚠ One or two silver foam cubes may pop out of the device. These belong in the slots shown in the third picture. They do not need to go back until reassembly.

⚠ Also the plastic connector door will fall off. It will need to be put back upon reassembly.

To reassemble your device, follow these instructions in reverse order.