


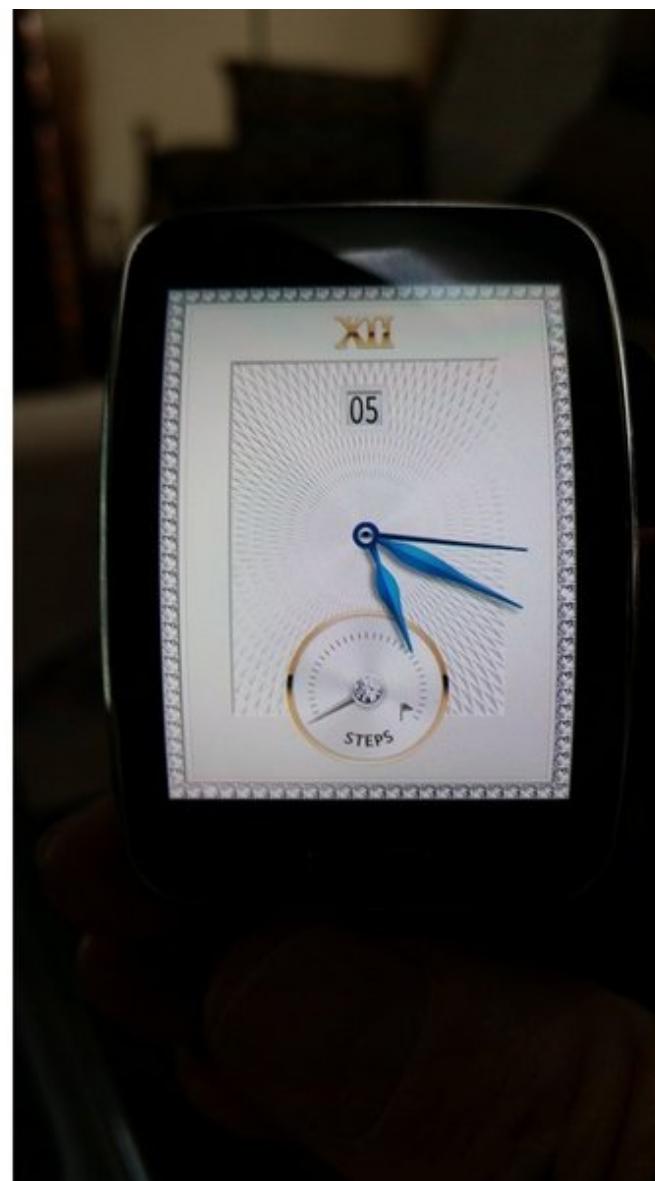

How to Reboot your Gear 2 if screens keep rotating automatically.

Your watch face on the Gear 2 keeps switching from one screen to another without stopping.
Rebooting the Gear 2 will fix this.

Written By: George Richards



This document was generated on 2019-09-23 04:14:14 AM (MST).

INTRODUCTION

How to reboot the gear 2 so screen switching automatically will stop.

Step 1 — Look at Watch Face



- Any of your selected watch faces will do.

Step 2



- Select Settings

Step 3 — Select Reset Gear from the choices.



- Remember to synch your contacts from your Smart phones directory or you may need to redo that again. Resetting will take approximately 2 minutes.

Step 4 — Scroll up from the watch face and select Settings.



- Select Settings by scrolling up on the watch face.

Step 5 — Select Reset Gear



- Be sure that you have synched your contacts to your phone, otherwise you will lose all of that information and will have to re-synch your phone's contacts to the watch. Watch will reset within 2 minutes.

To reassemble your device, follow these instructions in reverse order.