


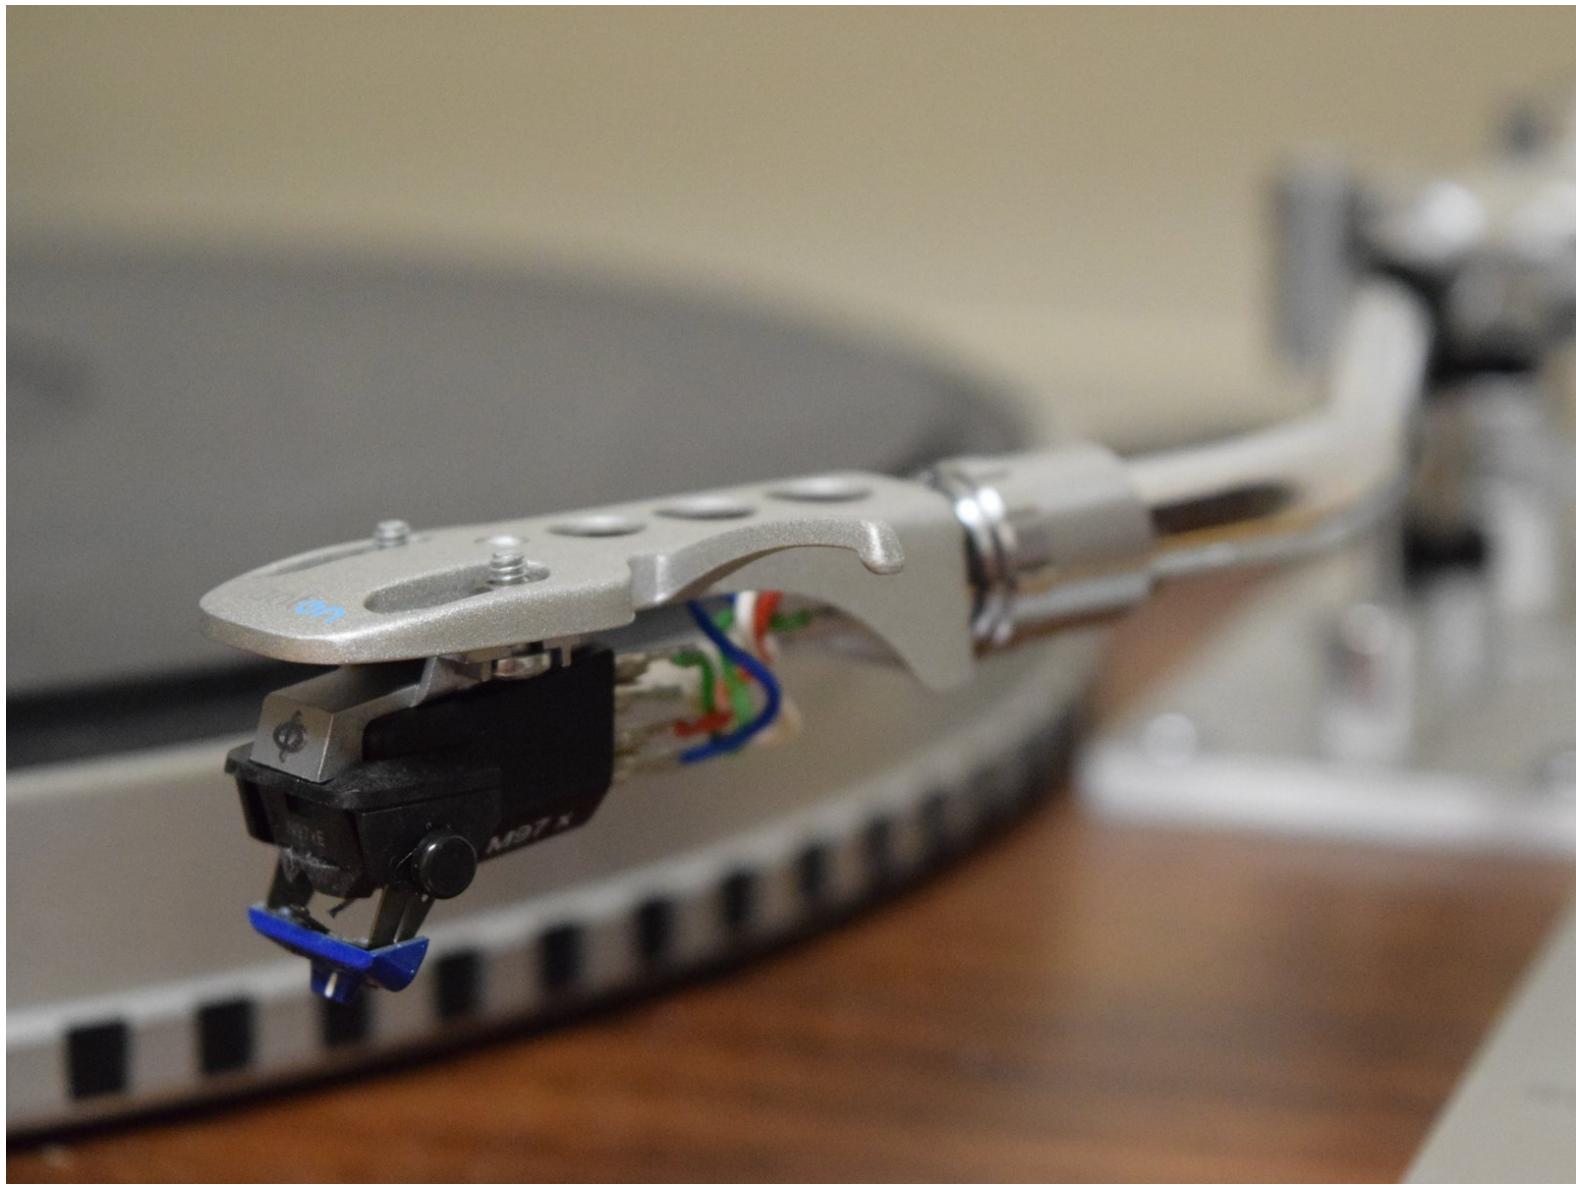

# How to Replace a Turntable Cartridge, Stylus, and Headshell

Learn how to replace your turntable's headshell, cartridge, and stylus.

Written By: Javier Torres



## INTRODUCTION

High quality turntables are only as good as the stylus and cartridge actually playing the records. Learn how to replace these components as they wear out over time.

### TOOLS:


- Phillips #0 Screwdriver (1)

## Step 1 — Cartridge, Stylus, Headshell



- Identify headshell by opening the turntable dustcover.


## Step 2

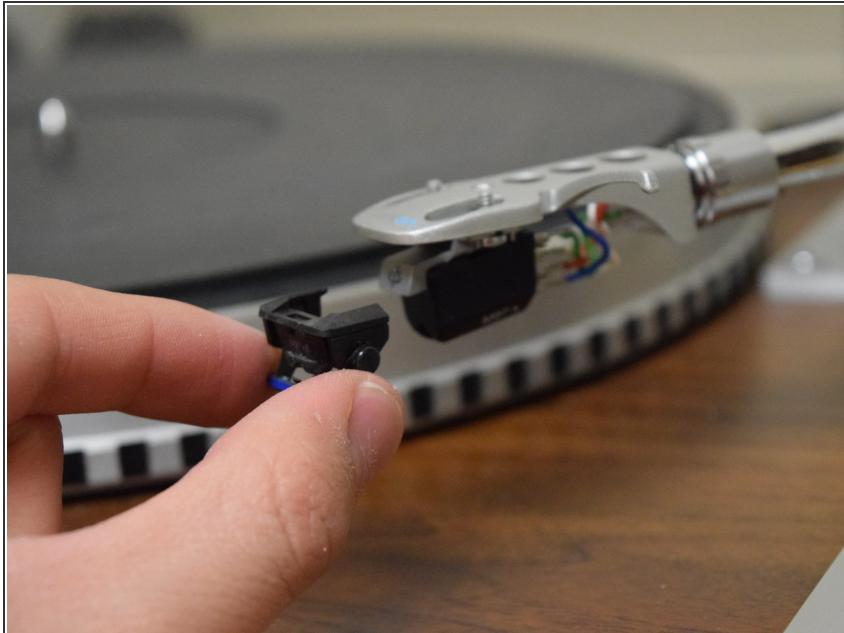

- Remove stylus from cartridge.

⚠ Do not pull aggressively as to break the plastic.

## Step 3

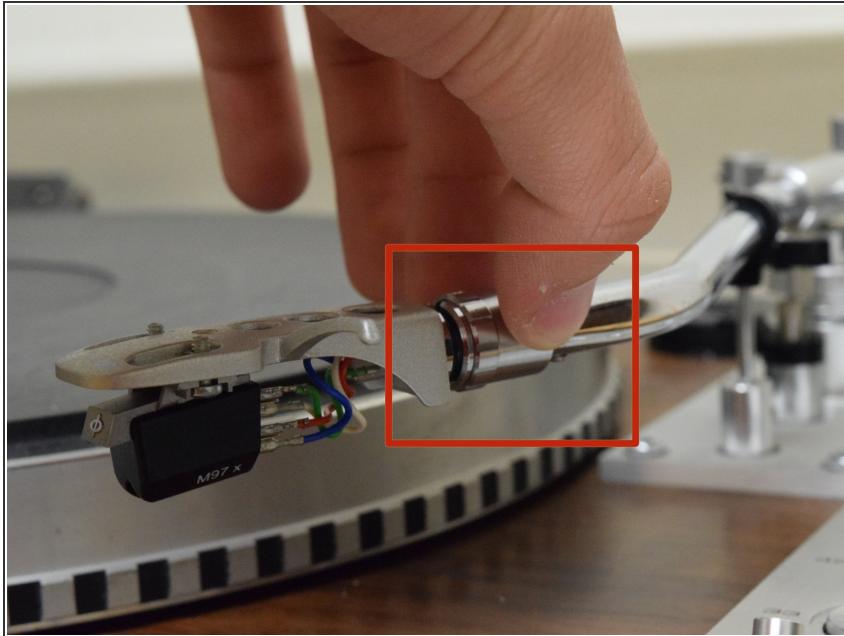

- Turn tonearm nut toward you to release headshell from the tonearm.


## Step 4



- Remove screws with phillips screwdriver #0 to release the cartridge.


*ⓘ Use standard turntable head screws found at a local audio shop if missing*

## Step 5

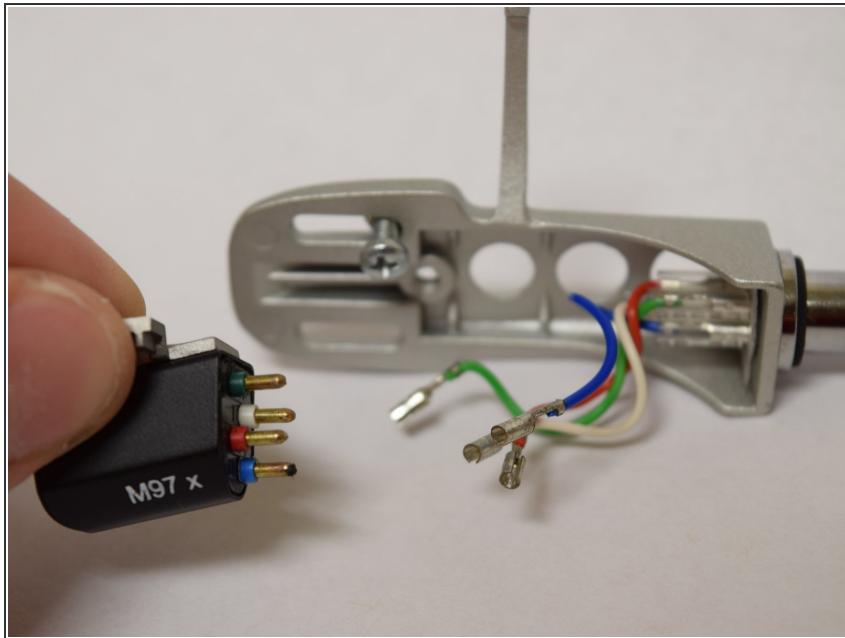


- Unplug wires from pins.

## Step 6

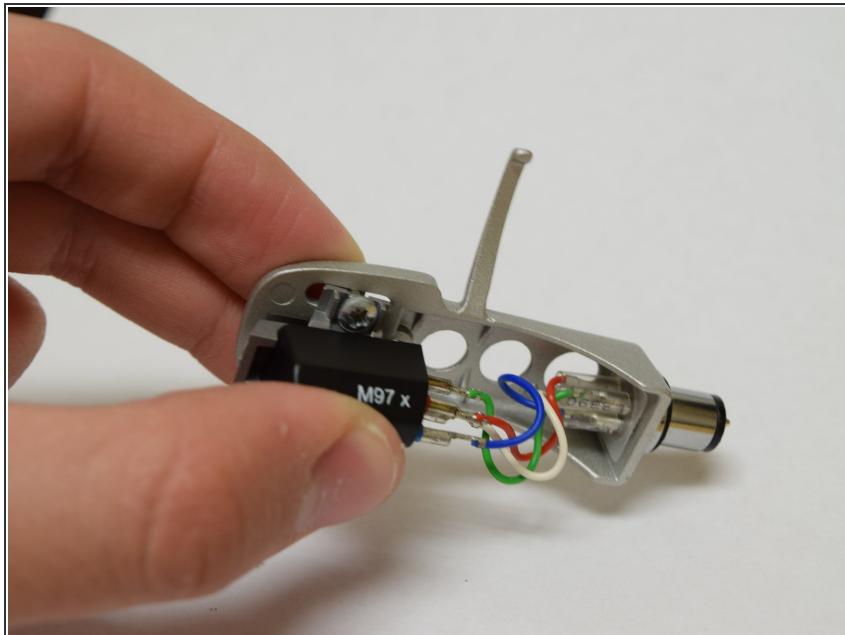

- Replace with new cartridge
  - Plug pins in reverse from removal
  - *(i)* Pay attention to matching the colors from wire to pin
  - Screw cartridge in in the same way it was removed.

## Step 7

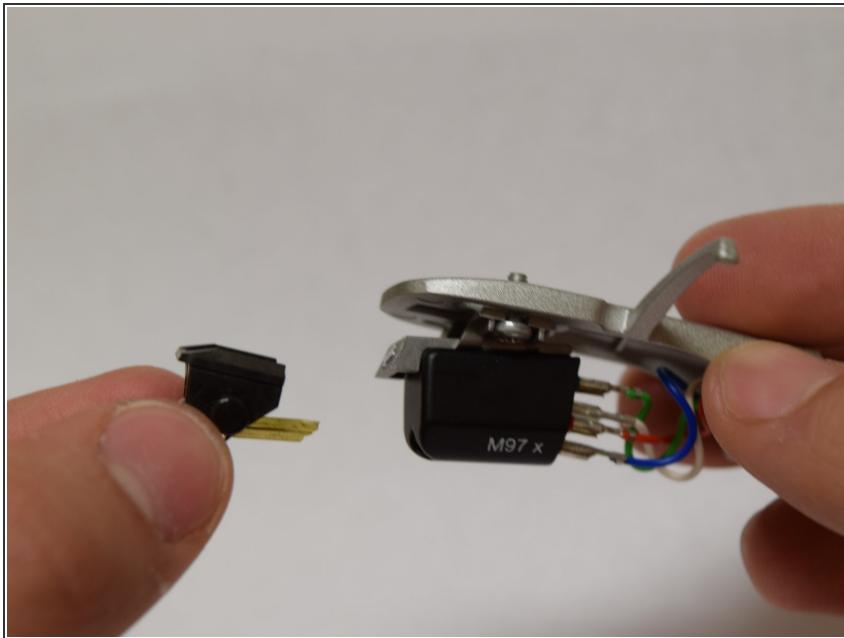

- Insert new stylus into cartridge before mounting headshell

## Step 8



- Screw assembled headshell onto tonearm.

## Step 9



- Test new needle and allow for a break-in period.