



How to Replace the Battery of a TI-Nspire CX

Learn how to replace the battery in a TI-Nspire CX.

Written By: Jim Kerman



INTRODUCTION

The rechargeable battery in the TI-Nspire CX can lose its ability to hold charge over time. Use this guide to replace the battery and return your calculator to optimum condition.


TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)

PARTS:

- [TI-Nspire Rechargeable Battery](#) (1)


Step 1 — Rechargeable Battery

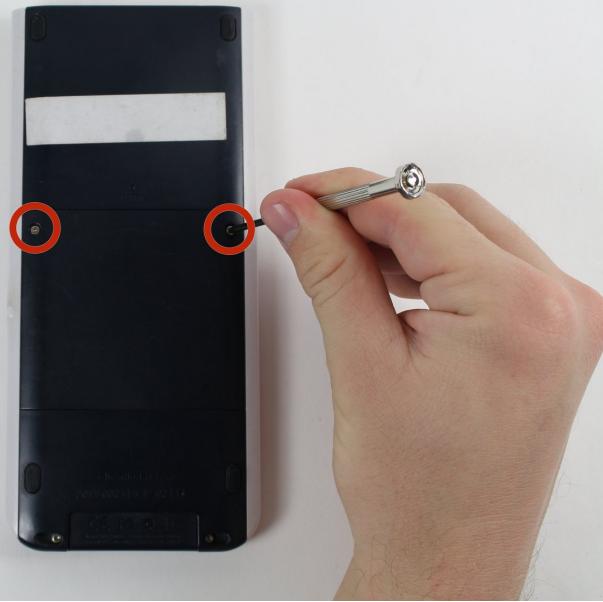

- Unscrew the 2 Phillips #0 screws from the back plate of the calculator.


(i) The screws do not come all the way out. Simply twist them until you are able to remove the back plate.

Step 2

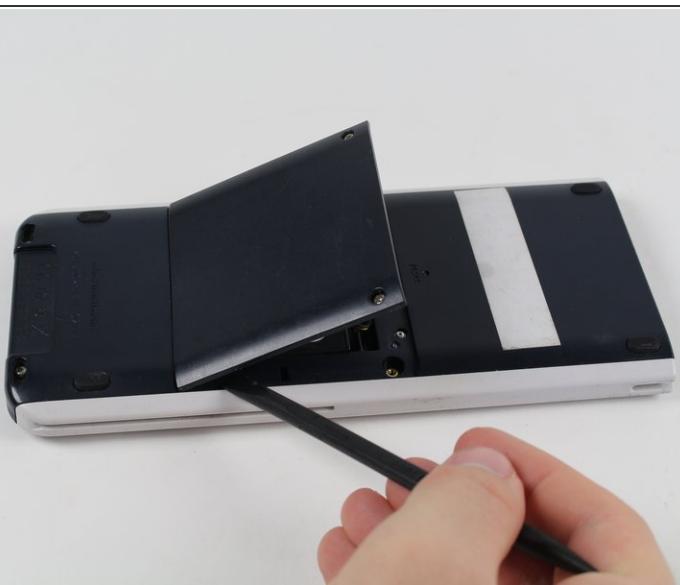

- Remove the back plate using the spudger or by hand.

Step 3

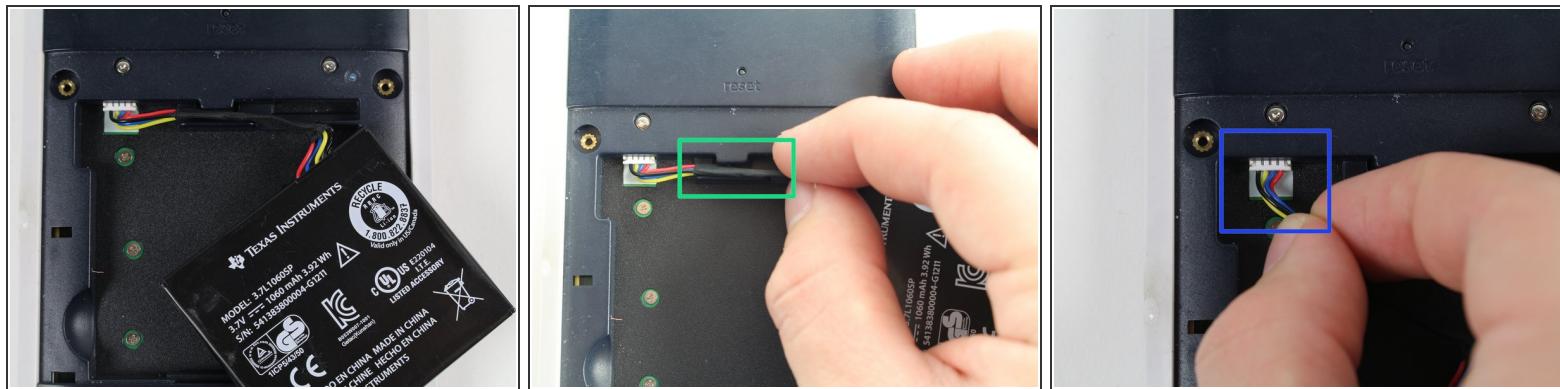

- Carefully disconnect and remove the old battery.
- Unhook the wire from the tab.
- Carefully pull out the wire.
- *(i)* Grip the wire close to the top and pull away.

Step 4



- Plug in the new battery.
-  Make sure to put the wire back in the same way. You should see 4 metal connections on top

Step 5



- Position the new battery and tuck the wire under the tab.

Step 6



- Replace the back plate and the 2 screws.

Now charge your calculator and power it up. If replacing the battery does not solve your problem, it may be a problem with your charging cord or the internal sockets.

