



# How to boot Intel Desktop Board D945PSN in Maintenance Mode

This will guide you on Intel mainboard D945PSN (possibly all the D945 array) on how to enter recovery/maintenance mode - if you are experiencing boot failure with no setup screen.

Written By: Sebastian

## INTRODUCTION

After spending half the day looking for how to reset CMOS, nothing worked.

Issue symptoms - after setting RAM mode to aggressive, system went into ram failure (3 long beeps with no possibility to enter setup). Nothing worked - tried removing the battery, shorting battery pins, nothing happened, same 3 long beeps.

- **So, near the battery there is the CMOS Jumper - 3 pins, last two of them from left to right are connected with a jumper.**
- Turn off the power source or unplug it, take the jumper out and place it on the first two pins (from left to right).
- Then plug the computer to power and start the system. It will take you to maintenance mode where you can change the faulty settings (in my case RAM management).
- After you save the settings, bios will let you notice that you need to put the pins in the normal position in order to boot.
- Power off, unplug the power, put the Jumper back, and you're set. You can safely turn on.

## TOOLS:


- Pro Tech Toolkit (1)

## Step 1 — D945PSN RAM Failure example. Fix in step 2 and 3




- The beeping RAM Failure wouldn't let me boot since mainboard needs at least 128 mb of ram installed and with the "Agressive" ram setting it wouldn't see any of the RAM disks.
- It beeped for hours without any real conventional (short battery pins or remove battery) fixes

## Step 2 — Locate CMOS Jumper and follow the instructions (adnotations on second pic)

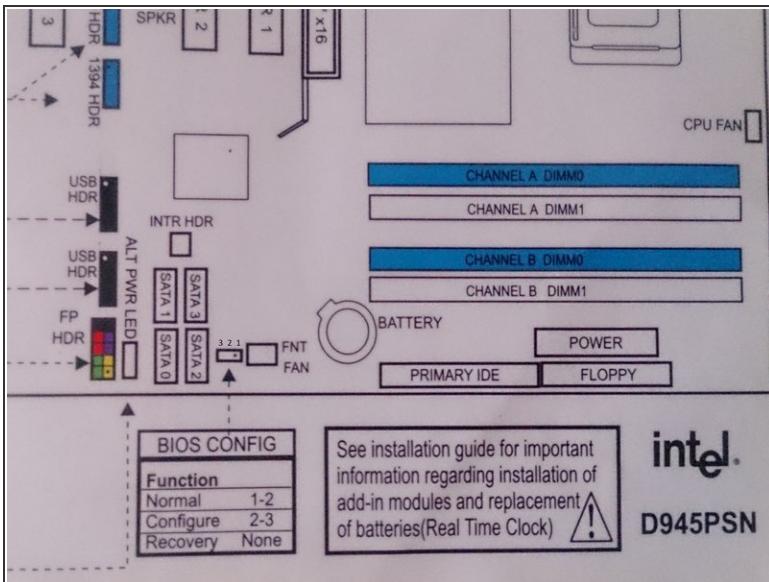

- Switch jumper from normal position to "configure position" and start the system - it will go to maintenance mode.

## Step 3

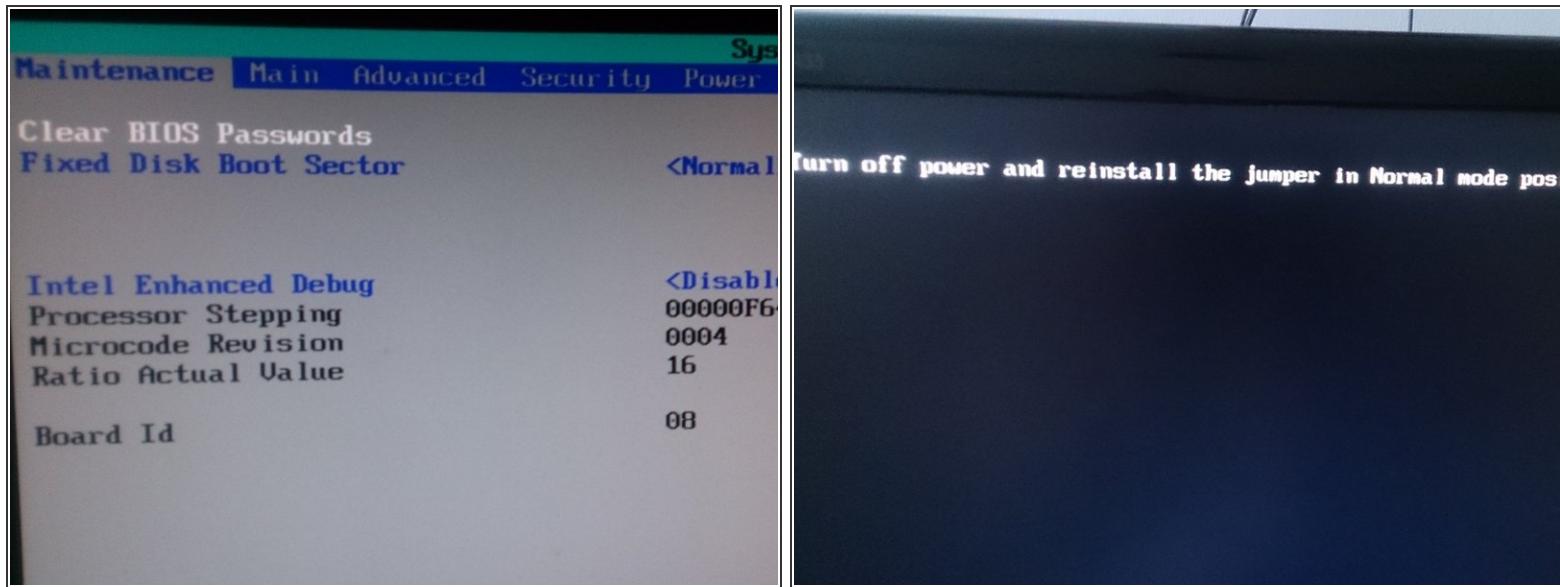

- After you change the faulty settings, turn off and reinstall the jumper in Normal mode position as the Bios mentions.
- After that see if the settings helped (i had to switch from aggressive mode to Automatic Ram management) and computer should boot up normally.

That's the guide on how to reset CMOS or enter Maintenance mode on Intel mainboard D945PSN