




How to clean Lite-On LightScribe SHM-165H6S lens

Cleaning lens of the drive.

Written By: aaa

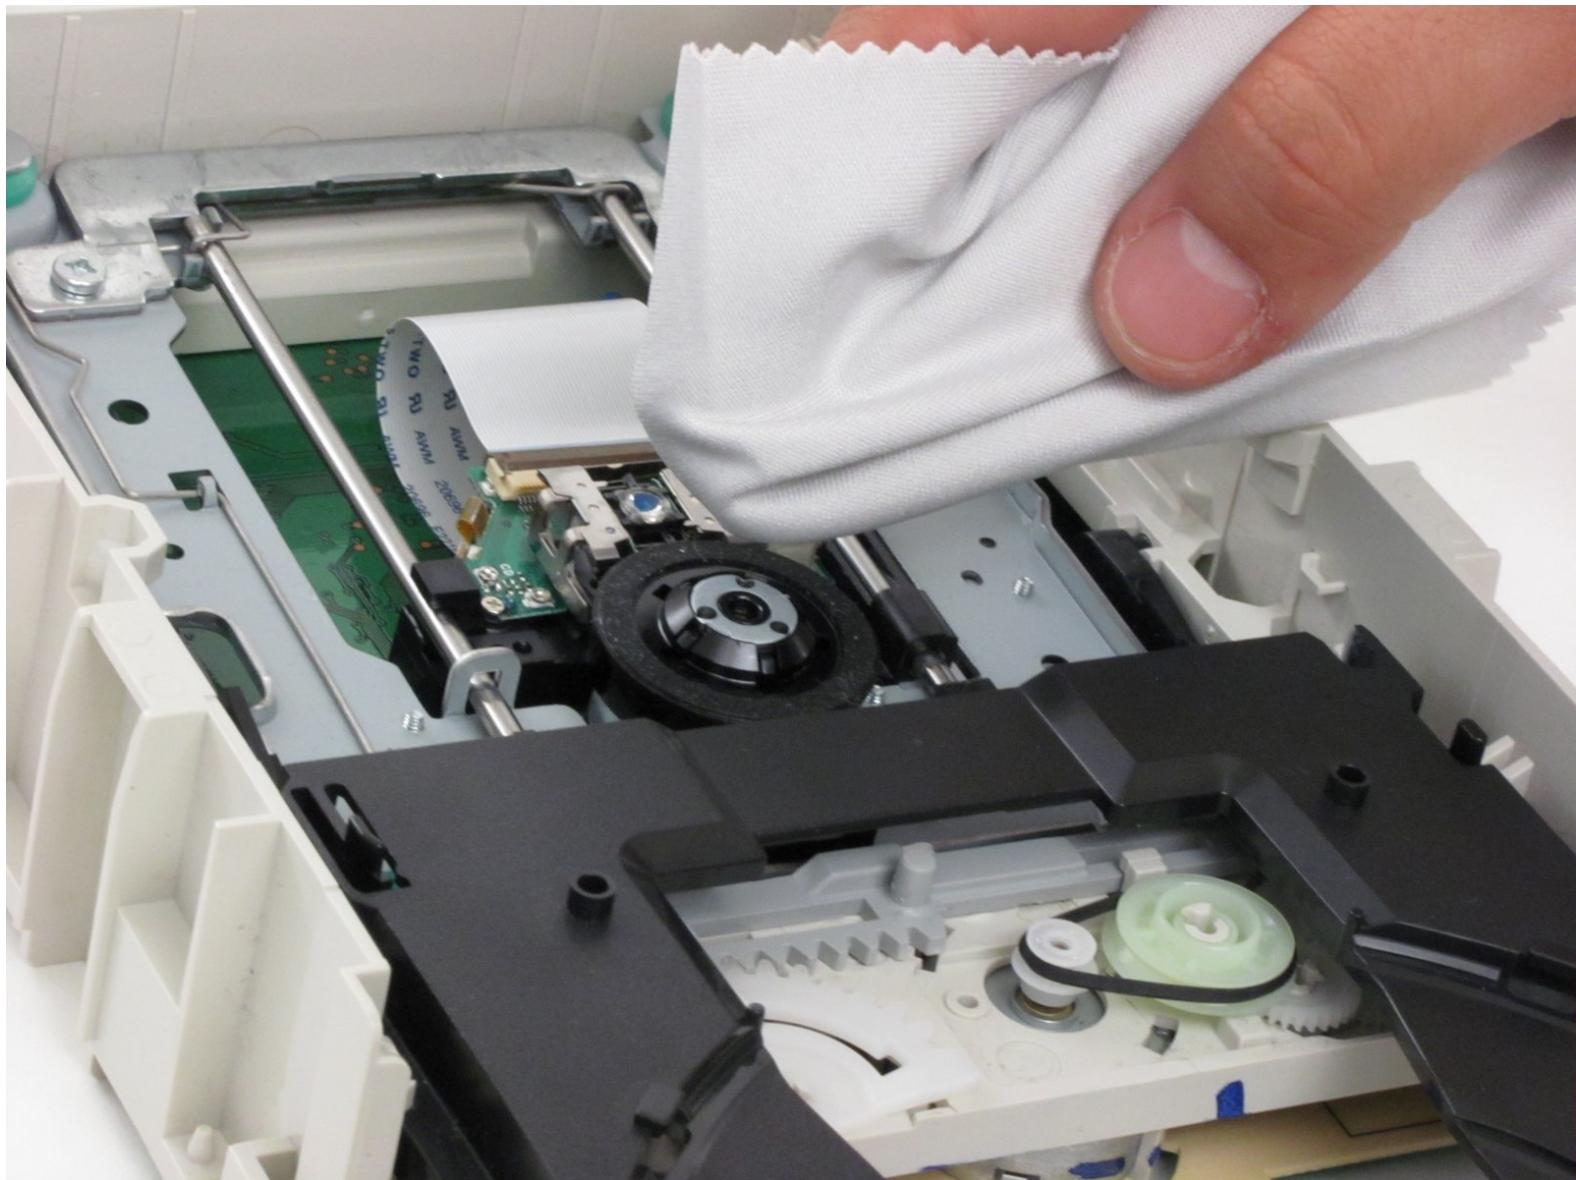


INTRODUCTION

If your drive is having problems reading or writing a disk, dust may have collected on the lens, which will need to be cleaned.

TOOLS:


- [Paper Clip \(1\)](#)
- [Phillips #2 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Soft Cloth \(1\)](#)

Step 1 — Chassis

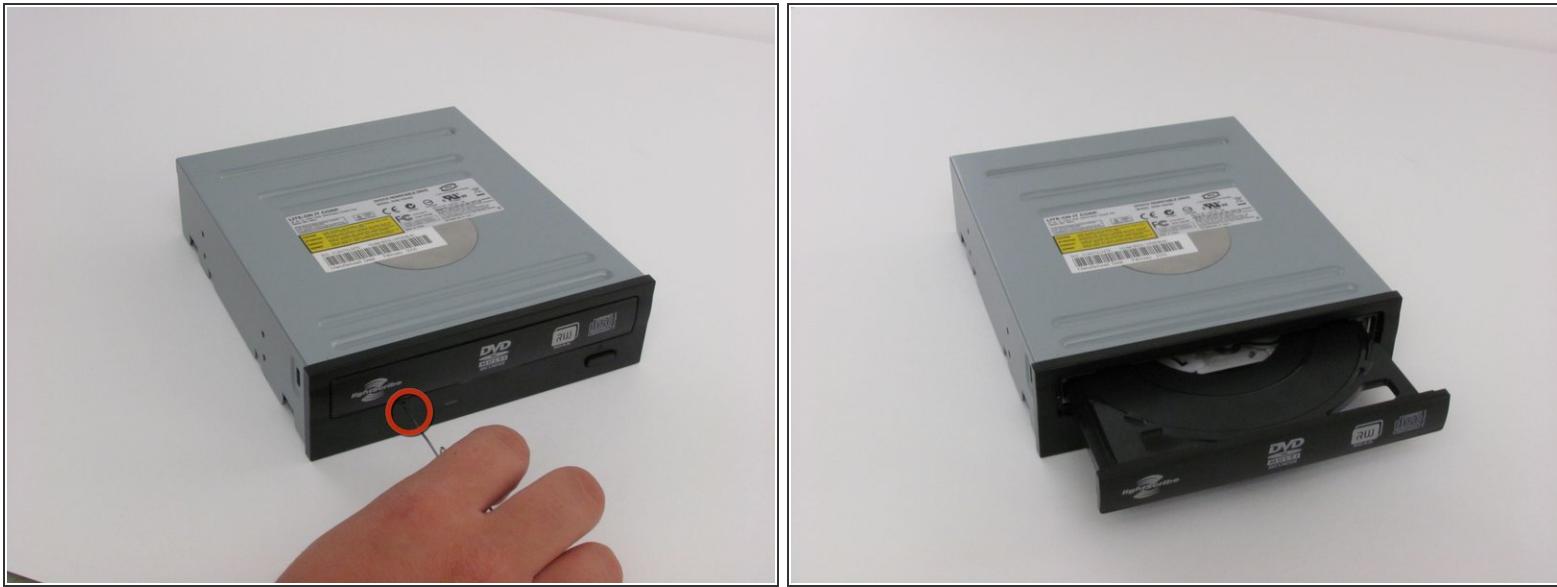

- Insert an open paper clip into the small hole on the left side of the faceplate.
- After the tray opens, extend it fully.

Step 2

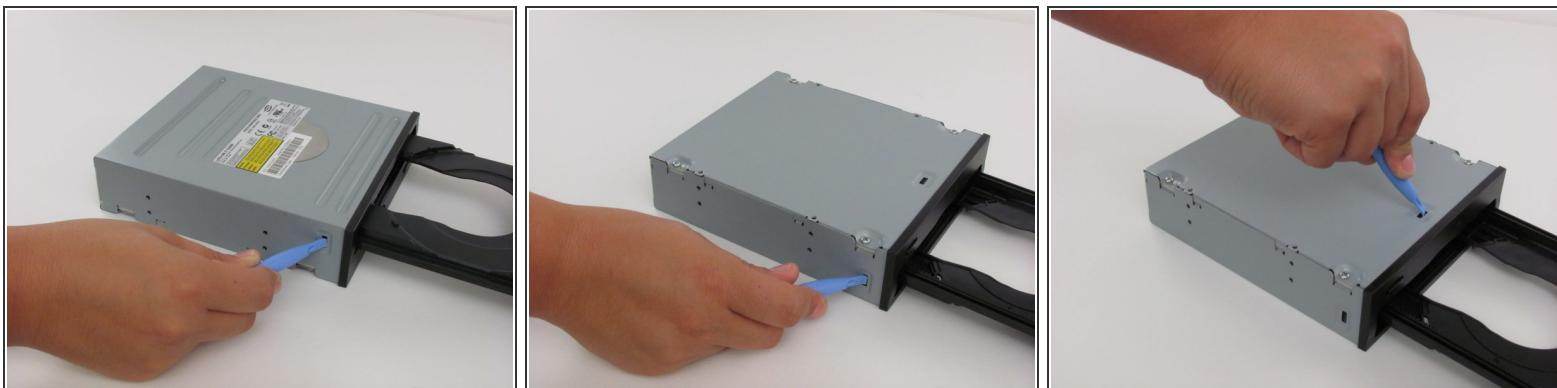


- Use an opening device to push in the black tabs on the left, right and bottom of the outer chassis to unhook the faceplate.

Step 3





- Pull the faceplate away from the main chassis.

Step 4

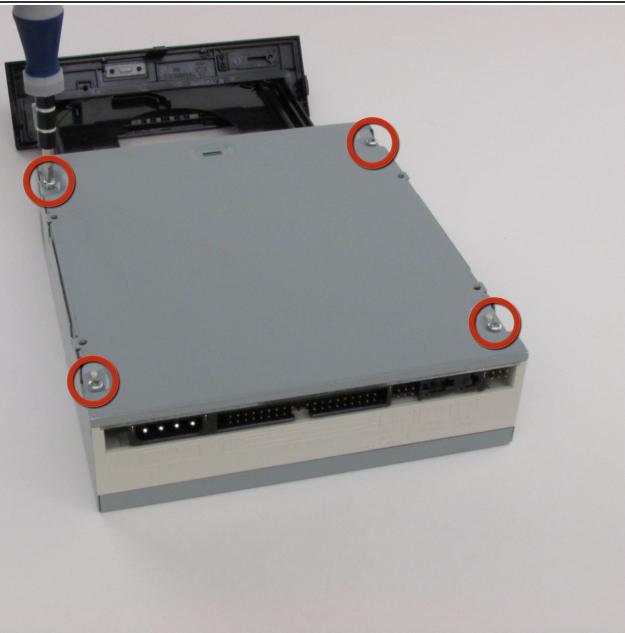


- Unscrew the four 8.5 mm screws on the bottom chassis using a Philips #2 screwdriver.

Step 5

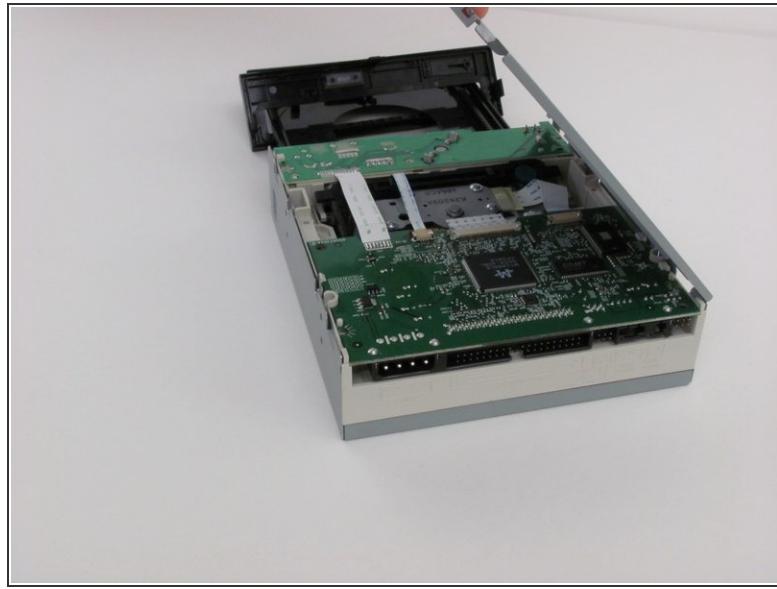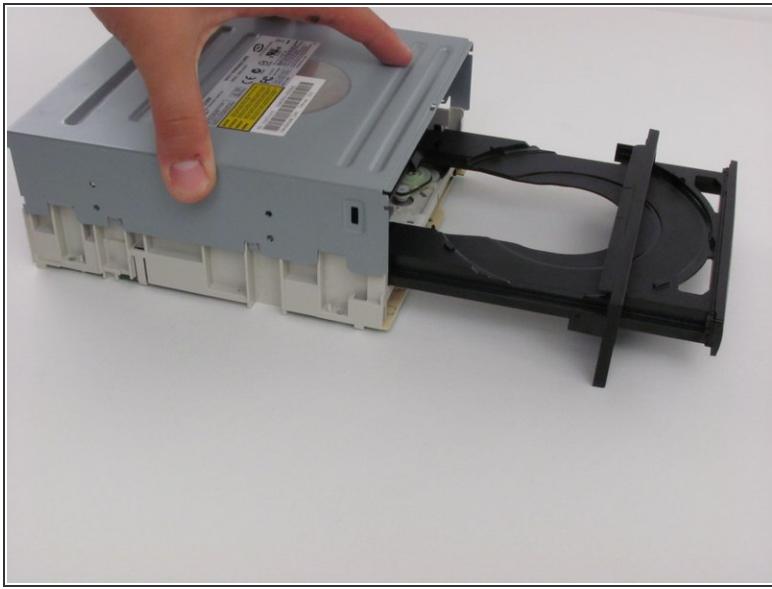

- Lift the top and bottom chassis straight up in order to remove them.

Step 6 — How to clean Lite-On LightScribe SHM-165H6S lens

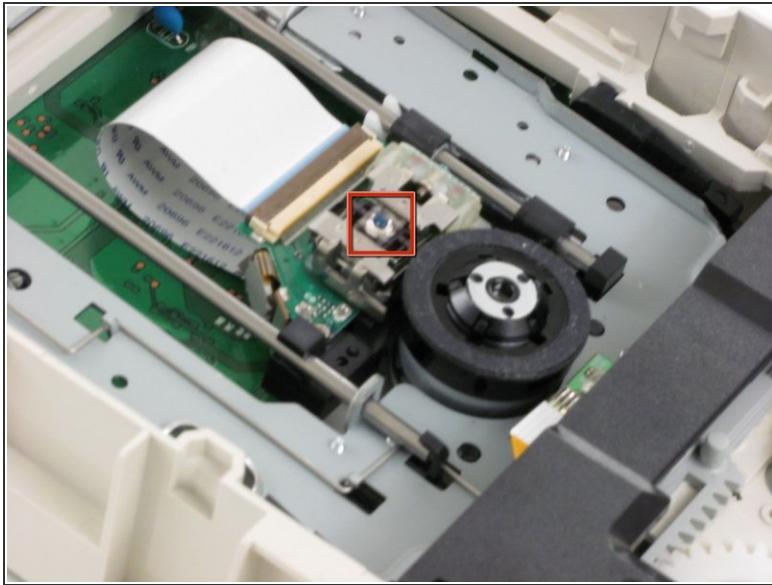

- Clean the lens.

To reassemble your device, follow these instructions in reverse order.