




How to clean Nokia 3120

This guide shows how to properly clean and maintain the Nokia 3120.

Written By: Rashmili Vemula

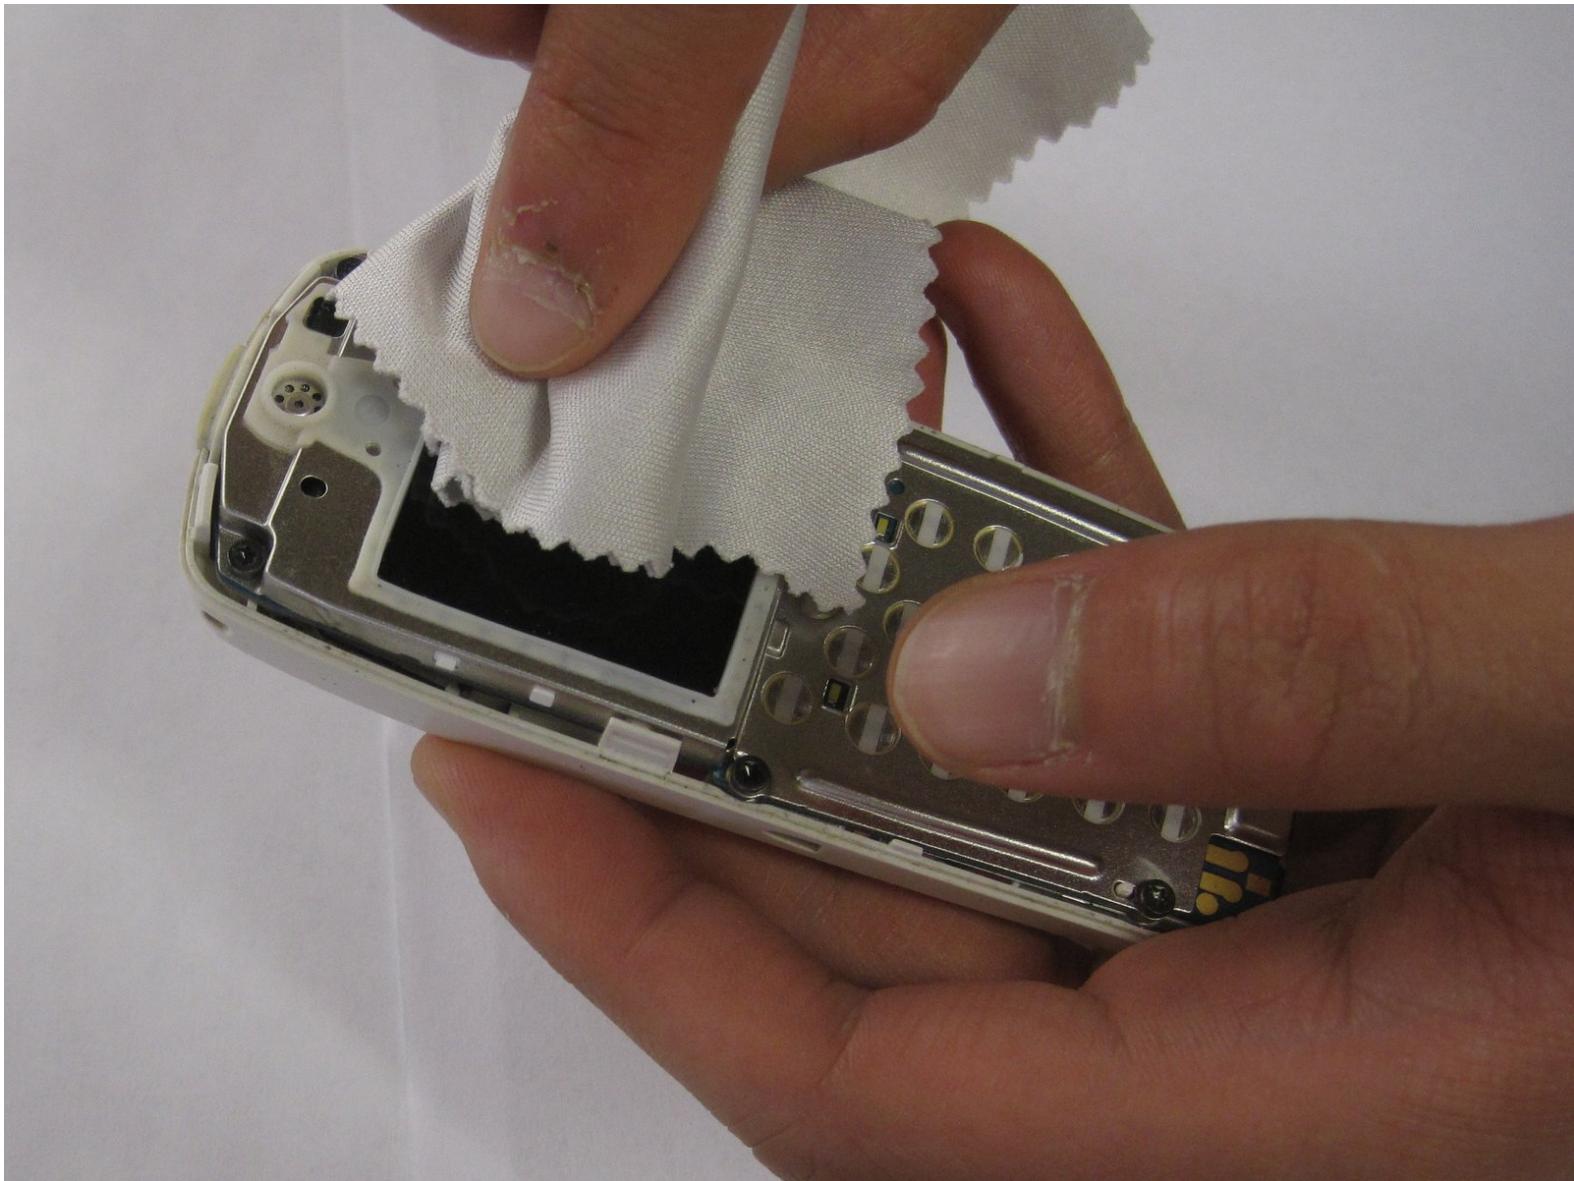

INTRODUCTION

This guide shows how to properly clean and maintain the Nokia 3120. This guide disassembles the front cover of the Nokia 3120 and shows how to clean the face plate.

TOOLS:

- Soft Cloth (1)

Step 1 — Battery Installation




- Remove the back cover plate of the phone. To do this press down the lock as you slide the cover toward the bottom of the phone.

Step 2




- Once the back cover plate is removed, the battery should be exposed. Remove the battery by prying it out. This can be done with your finger-nail or a prying tool.

Step 3 — Face Plate

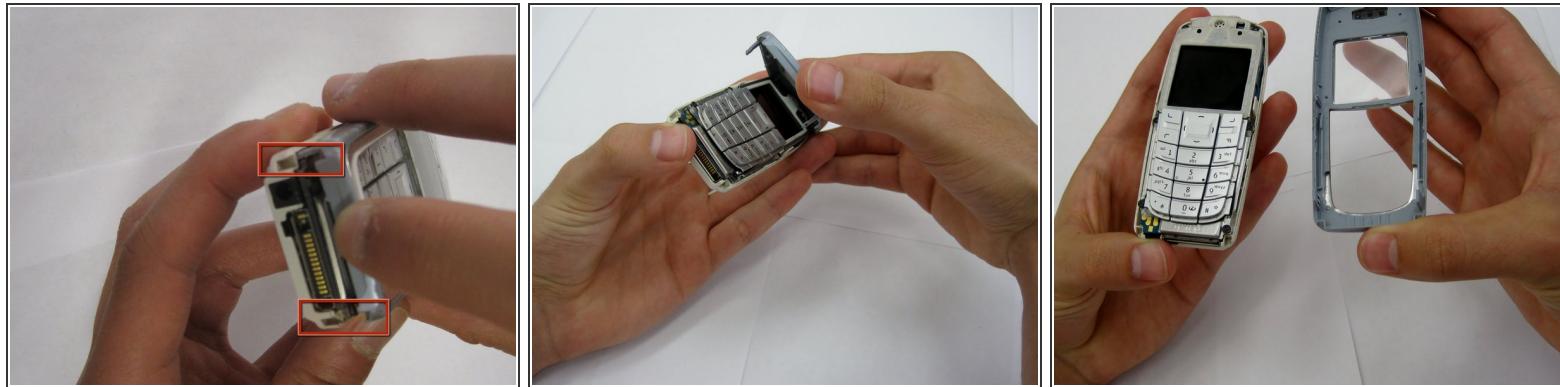

- Using your fingernails or another tool, pry the front face plate out along its edges and corners.

Step 4 — How to clean Nokia 3120

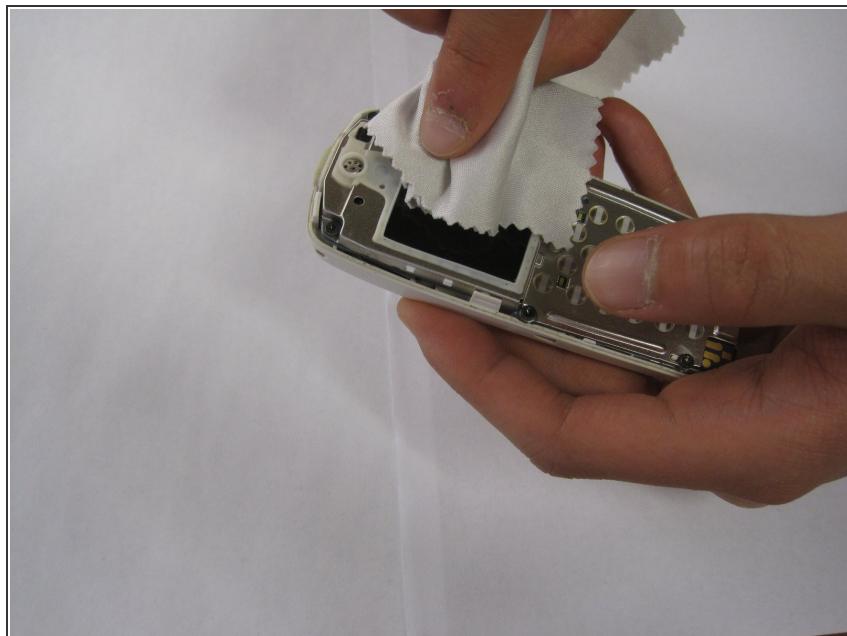

- If dirt has gotten inside the phone, both the lens and the case should be cleaned.
- Once the screen is exposed, spray cleaning solution onto a soft cloth and wipe the screen.
- Make sure to thoroughly dry the screen.

Step 5



- Repeat the cleaning process on the clear plastic connected to the faceplate.
- *i* If the screen still appears dirty after a thorough cleaning, parts may have to be replaced. See the troubleshooting guide.

To reassemble your device, follow these instructions in reverse order.