



How to clean Non-functioning buttons on remote

With these remotes it seems to be a common problem some buttons cease to work after a couple of years. Usually, you just need to open the remote and clean the circuit board.

Written By: andre



This document was generated on 2019-09-20 05:55:52 AM (MST).

INTRODUCTION

With these remotes it seems to be a common problem some buttons cease to work after a couple of years. Usually, you just need to open the remote and clean the circuit board.

TOOLS:



- Metal Spudger (1)

Step 1 — How to clean Non-functoning buttons on remote



- For later testing: X marks buttons which still work, O marks buttons that don't.

Step 2

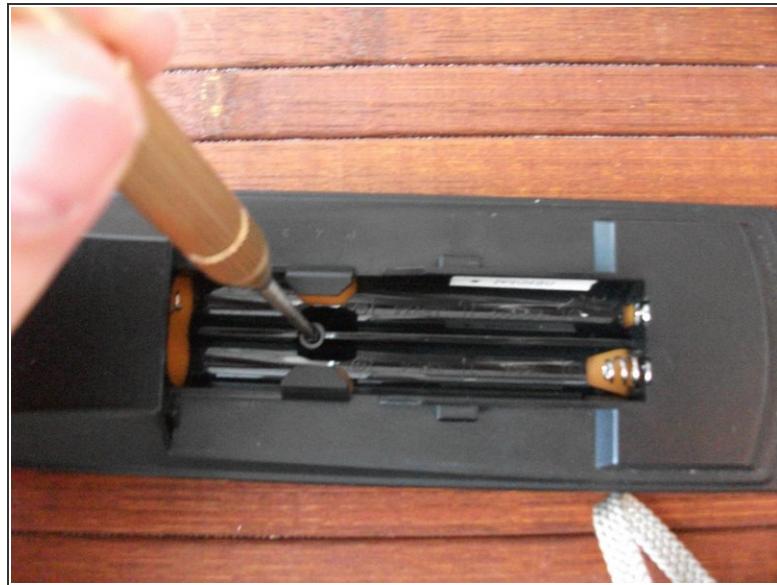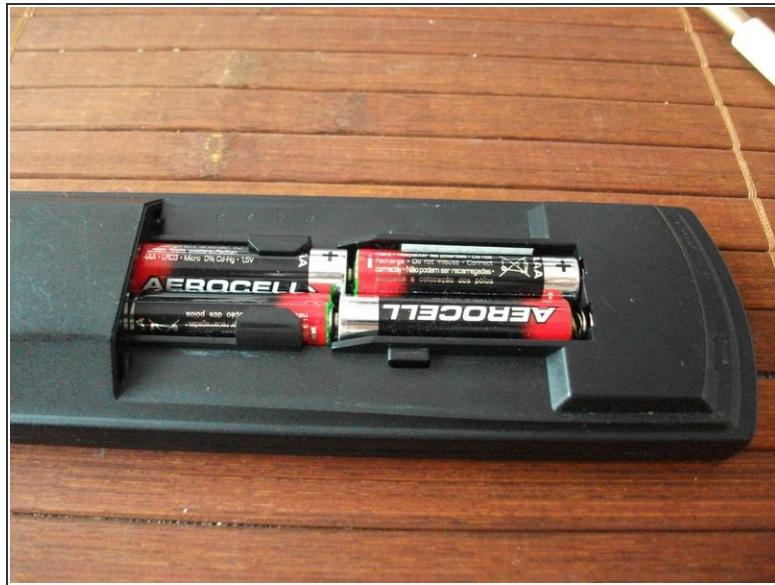


- Open battery housing and remove the batteries
- Remove the screw located in the center of the battery housing

Step 3



- Top and bottom shell of the remote are held together by 4 latches per side. The most fore and aft ones are located about 1cm from each end
- Pry them open with a small flat head. If you're carefull that will leave only tiny scratches, but it does take some force

Step 4

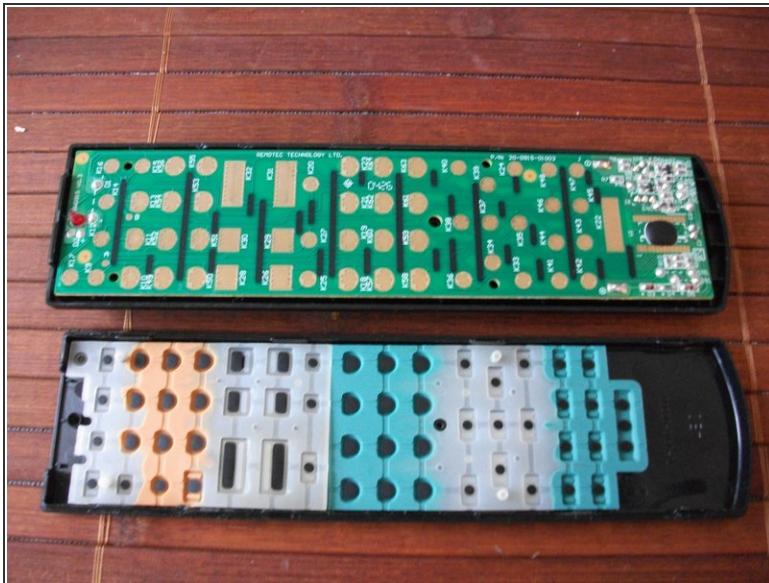

- Once open, remove the insides and clean them from all the drinks and what not that has been poored over the remote
- If necessary, at contact spray or alike to the bottom of the rubber buttons

Step 5



- After cleaning and before full re-assembly, you might want to try if things improved.
- Put the circuit board back in, add batteries and put the rubber mats onto the circuit board
- If the repair worked, you should see the red top LED flashing
- Put it all back together again. (Don't forget the screw in the battery housing.)
- You might need some new batteries as well

To reassemble your device, follow these instructions in reverse order.