




How to clean the Canon PowerShot SD780 IS shutter button

Clean a jammed shutter in your Canon PowerShot SD780 IS.

Written By: Arlene Ale

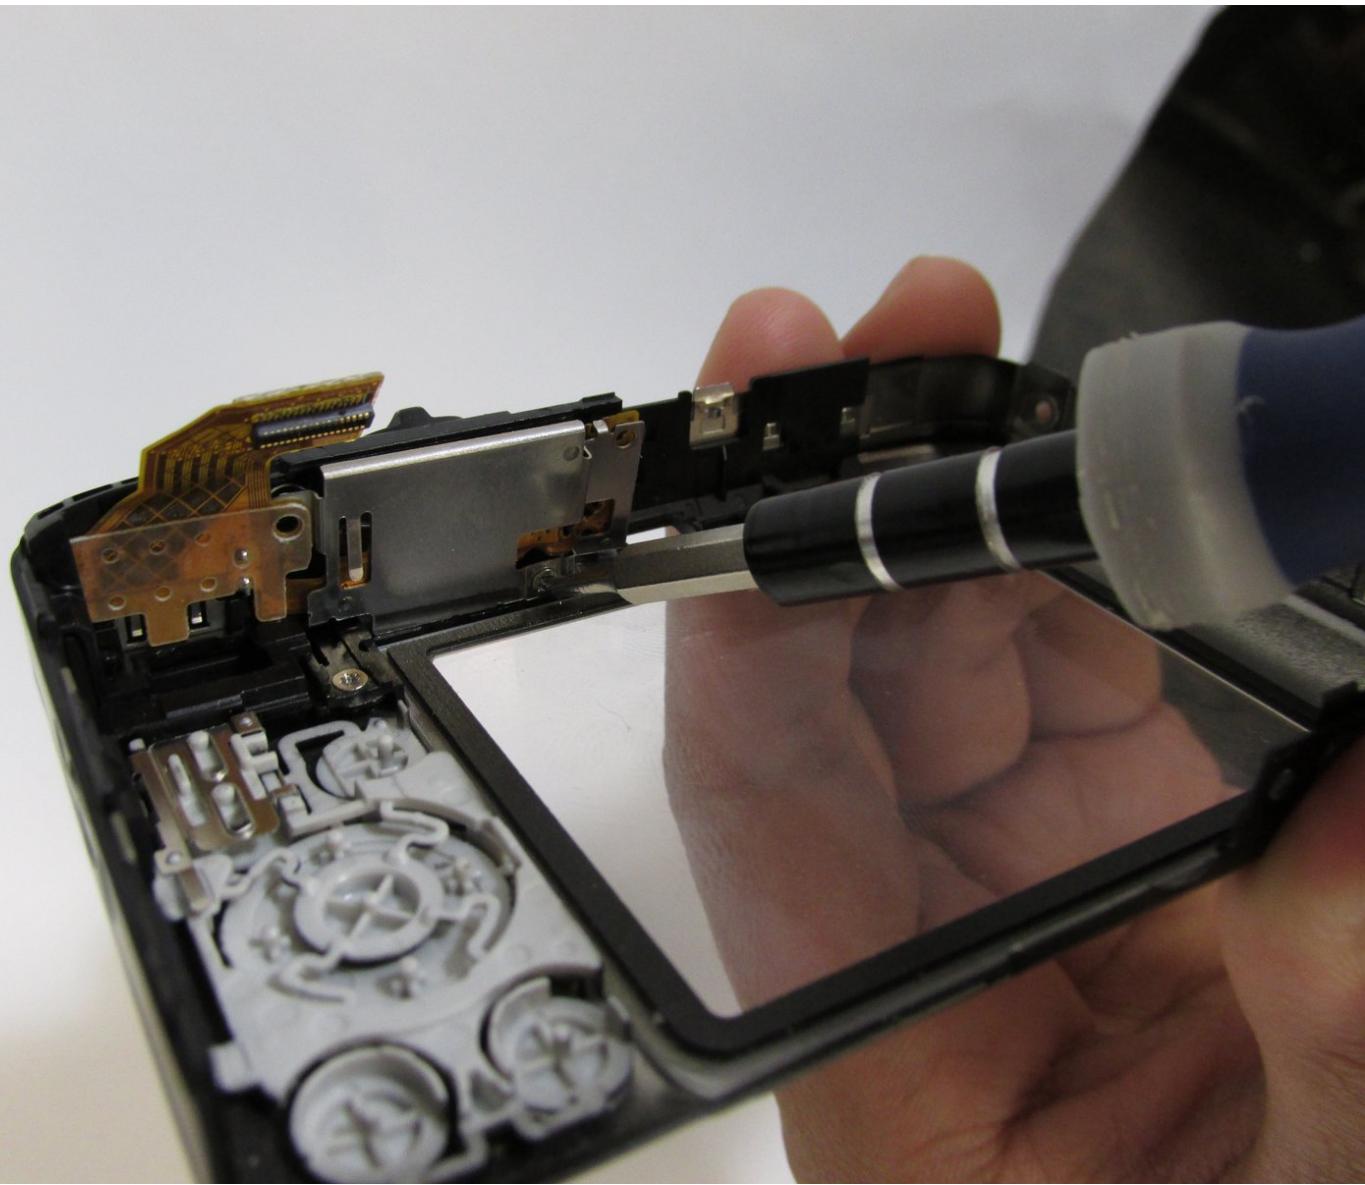

INTRODUCTION

If the shutter button of the Canon PowerShot SD780 IS sticks, it could be due to debris or residue inside the camera. This guide will demonstrate how to access the shutter button in order to clean out any unwanted substances.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

Step 1 — How to clean the Canon PowerShot SD780 IS shutter button




- Make sure to turn off the camera and remove the battery.

Step 2



- Remove the five outermost Phillips #00 screws from the camera.

Step 3

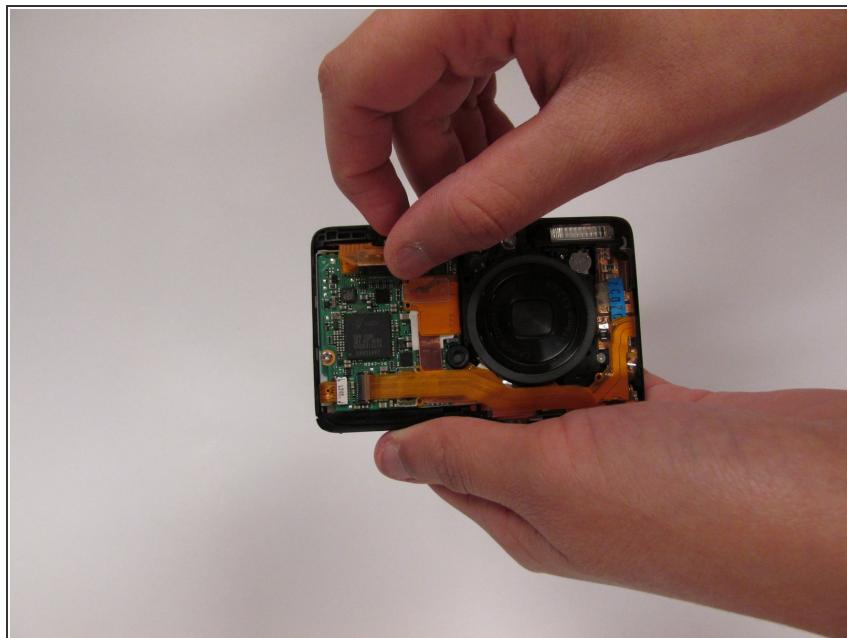

- Remove the front panel of the camera case to expose the top left ribbon cable, and pull the ribbon cable gently to disconnect it from the camera.

Step 4



- Remove the single screw on the far left-hand side of the camera.


Step 5



- Carefully pull the case apart.

i The case will detach from the camera in two pieces.

Step 6

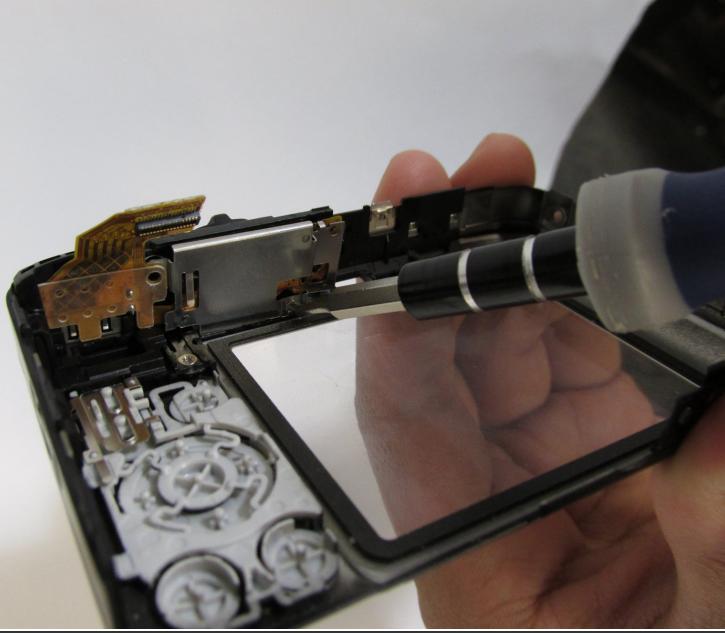

- Remove the two screws on the metal plate. This will give you access to the spring inside the metal plate for further cleaning.

To reassemble your device, follow these instructions in reverse order.