



How to fix a MX Master Permanently active Gestures

Fixing the gesture control on a logitech MX Master

Written By: callumblackall



 **TOOLS:**

- [T4 Torx Screwdriver \(1\)](#)
- [Philips Head Screwdriver: Size J1 \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [Pro Tech Toolkit \(1\)](#)

Step 1 — Tear down guide -



- <https://toemat.com/logitech-mx-master-fi...>

Step 2



- push the flexible button up and loosen and retighten the screws around the pcb

To reassemble your device, follow these instructions in reverse order.