



How to fix a dead IHome iBT76

Is your IHome iBT76 dead, won't turn on, light up, charge, or always on?

Written By: Salembot



INTRODUCTION

I bought the iBT76 for myself to go wireless. I like having the extra space and lack of dust. It's a truly great product that lights up spaces. Unfortunately, it quit all of the sudden. Well, it was still working but no lights. I couldn't turn it on/off via the on/off switch.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

Step 1 — How to fix a dead IHome iBT76



- Flip the on/off switch to off.
- Flip the speaker over on and remove the label.
- Remove the four phillips head screws.

Step 2



- Remove the bottom plate.
- Unplug the white plug.
- Plug it back in.

Step 3



- Enjoy your speaker again.

To reassemble your device, follow these instructions in reverse order.