



How to repair KitchenAid dishwasher

KDTM354DSS4

This video shows a technique on how to fix an upper dish drawer that has broken off the slide rails.

Written By: Dan Dunham

Fix that Kitchen aid c



INTRODUCTION

This video shows a technique on how to fix an upper dish drawer that has broken off the slide rails.

TOOLS:

- Phillips #2 Screwdriver (1)
- Cordless Drill (1)
- Large Needle Nose Pliers (1)
- C-Wrench (1)

PARTS:

- stainless bolts X2 (1)
- 3/16th stainless nuts (6)
- stainless large washers (4)

Step 1 — How to repair KitchenAid dishwasher KDTM354DSS4

Fix that Kitchen aid d



- Take a look at this short video to see how to fix these drawers when they snap off their slide rails.

To reassemble your device, follow these instructions in reverse order.