



# How to replace wifi card Canon SX420 IS Camera

Written By: Yisroel Silbiger



 **TOOLS:**

- Essential Electronics Toolkit (1)

## Step 1 — How to replace wifi card Canon SX420 IS Camera



- Remove both screws from below .

## Step 2



- Remove both screws near the A/V out

## Step 3



- Remove both screws from the other side

To reassemble your device, follow these instructions in reverse order.