



# How to troubleshoot Olympus Stylus 850SW

Here we will discuss different issues which may be contributing to the inability of your camera to power up.

Written By: Emma Fincken



## INTRODUCTION

There are various reasons as to why your camera is not turning on. Here we will address a few common issues: damaged or faulty battery, power cable issues, and charged camera.

## Step 1 — How to troubleshoot Olympus Stylus 850SW



- Plug your camera into an outlet using the corresponding USB cord. This should automatically prompt your camera to power up. Your computer will prompt you with a message, or your camera will light up.

**⚠** Make sure your device is off when plugging in your device.

## Step 2



- If the first step yields no response, you may have a faulty battery. For this, reference the [Olympus accessories page](#) where you can purchase a new battery for your camera.

## Step 3



- If your device is plugged in, you have a working battery and the device is still not working, you may have a damaged or faulty charger. To purchase a new charger click [here](#).

To reassemble your device, follow these instructions in reverse order.