



Hp 15-f305dx Battery Replacement

This guide will instruct you on how to replace your Hp 15-f305dx battery.

Written By: Brandon



Step 1 — Battery



 Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Step 2



- Turn the computer upside down on a flat surface.

Step 3



- Firmly slide the release latch to unlock the battery and slide the battery release latch to release the battery.

Step 4



- Lift the battery from the middle and then pivot it outward to remove it from the comp.

To reassemble your device, follow these instructions in reverse order.