



Hp 15-f305dx RAM Replacement

This guide illustrates the RAM replacement for the HP 15-f305dx laptop.

Written By: Garrett Peal



 **TOOLS:**

- [Spudger \(1\)](#)
- [Phillips #00 Screwdriver \(1\)](#)

Step 1 — Battery



! Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Step 2



- Turn the computer upside down on a flat surface.

Step 3



- Firmly slide the release latch to unlock the battery and slide the battery release latch to release the battery.

Step 4




- Lift the battery from the middle and then pivot it outward to remove it from the comp.

Step 5 — RAM



- Remove the two 5mm Phillips #00 screws on the back service cover.

Step 6

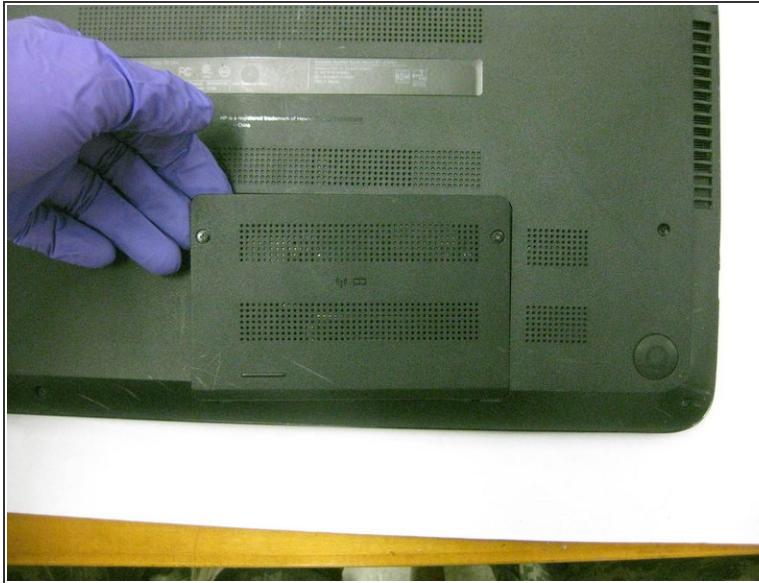

- With the hinge of the laptop screen facing away, remove the panel from the laptop on the near side of you.

Step 7



- Press the two locking arms on either side of the RAM card away from each other.
- When the RAM is free from the locking arms, it should pop up to rest at an angle to the laptop.
- Remove the RAM card by sliding it out from its port at the same angle at which it rests.
- ★ During reinstallation, insert the RAM card into the slot at the same angle which it rested earlier, then press it down until the locking arms clasp around it.

To reassemble your device, follow these instructions in reverse order.