



Hp 15-f305dx Wifi Card Replacement

This guide illustrates the replacement of the wifi card for a HP 15-f305dx laptop.

Written By: Garrett Peal



 **TOOLS:**

- **Phillips #00 Screwdriver** (1)
- **plastic/non conductive tweezers (optional)** (1)

Step 1 — Battery



! Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Step 2



- Turn the computer upside down on a flat surface.

Step 3



- Firmly slide the release latch to unlock the battery and slide the battery release latch to release the battery.

Step 4




- Lift the battery from the middle and then pivot it outward to remove it from the comp.

Step 5 — Wifi Card



- Unscrew two 5mm Phillips #00 screws on the back service cover.

Step 6

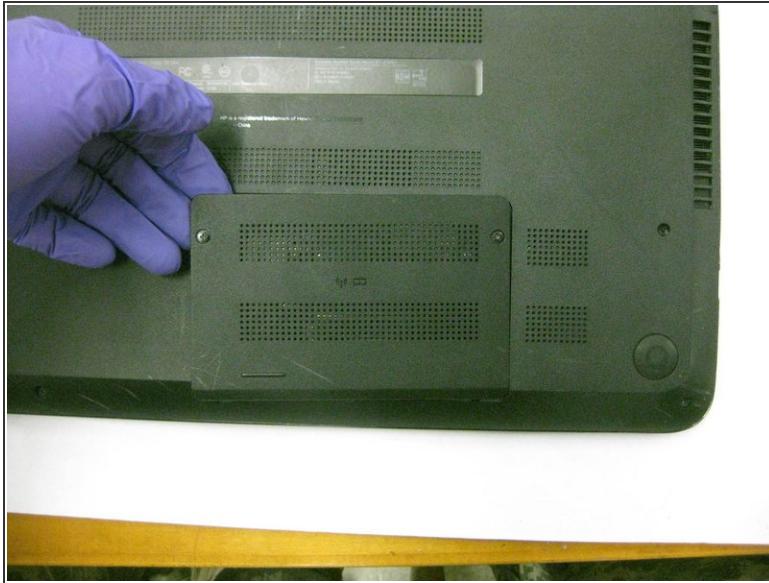

- Remove the service panel.

Step 7



- Remove a single 5 mm Phillips #00 screw holding the wifi card in place.

Step 8



- Remove the black and white cable connections by prying the connections up with a spudger.

(i) They should "pop" off of the card.

Step 9



- Using your fingers, gently remove the wifi card from the laptop by sliding it outward from its port.

To reassemble your device, follow these instructions in reverse order.