




# Huawei Ascend G610 volume and power buttons replacement ignition

Volume and power buttons ribbon cable replacement

Written By: Smilzo

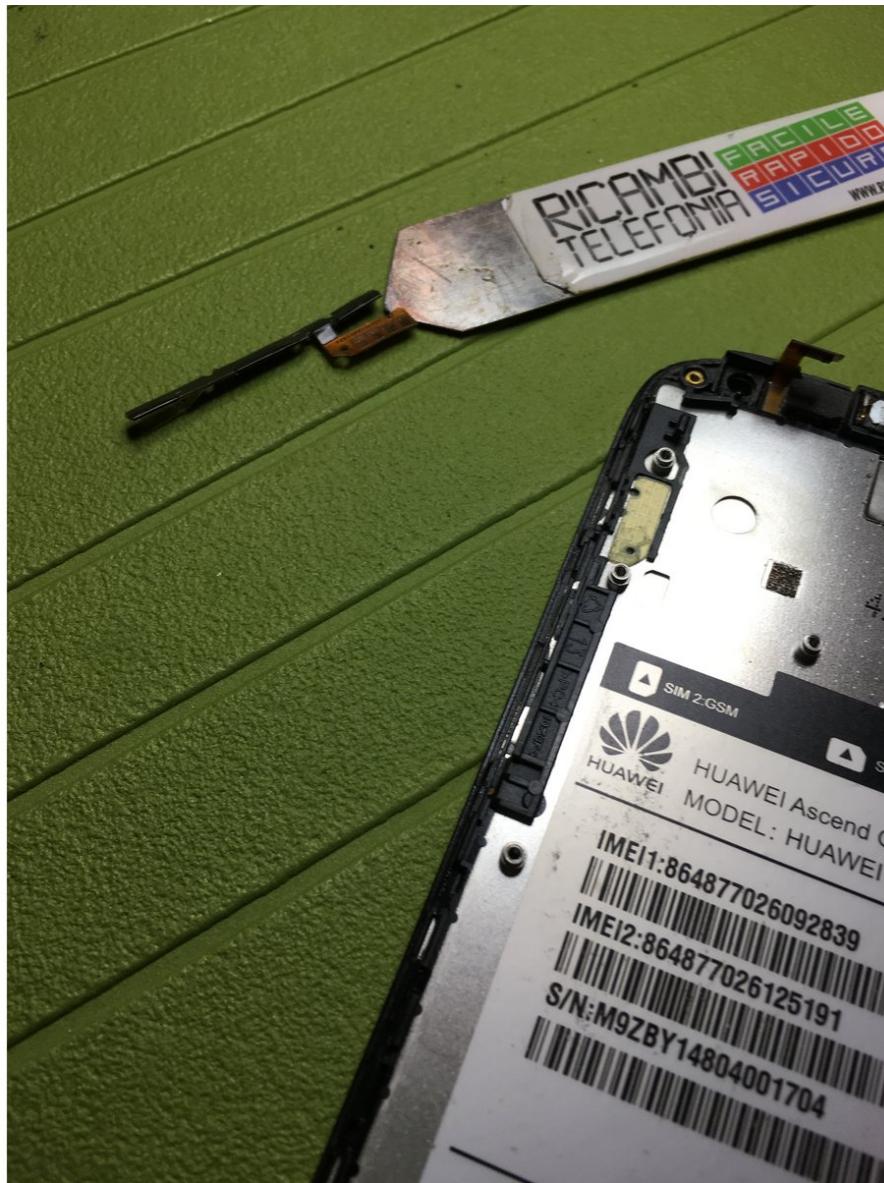

## INTRODUCTION


### Volume and power buttons ribbon cable replacement

## Step 1 — Volume and power buttons



- Remove the back cover.

## Step 2

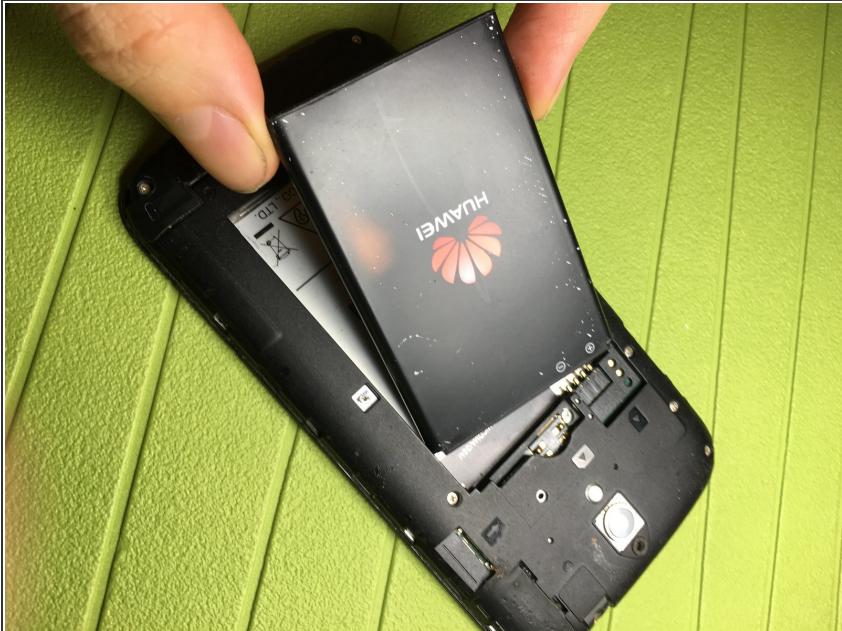


- Remove the battery.

## Step 3




- with the help of a Phillips screwdriver remove the nine side screws, one is under the adhesive that must be removed
- Remove the 10th screw, it is shorter in the middle near the Sim card slot

## Step 4

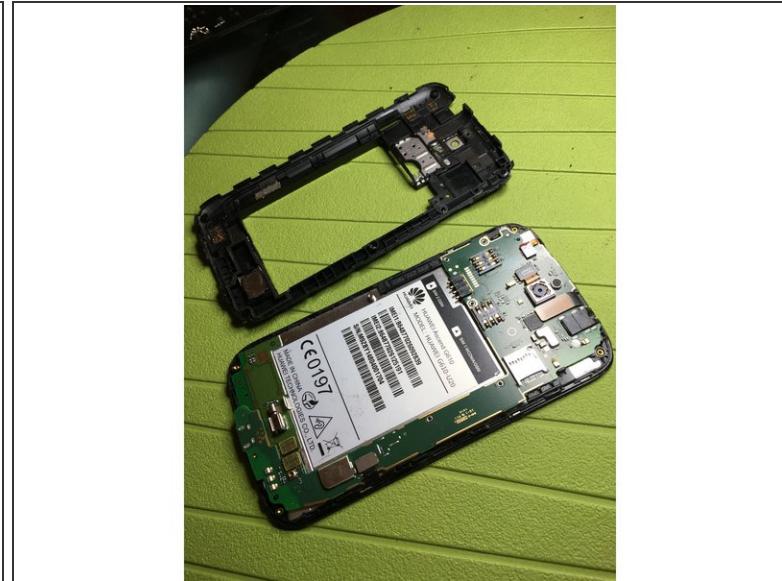

- With the help of a thin tool, pry laterally on the joints and remove the central body

## Step 5

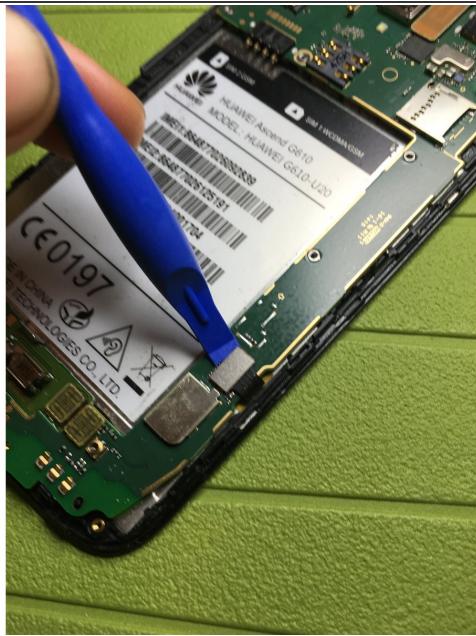


- Disconnect the display connector.

## Step 6



- Disconnect the light sensor connector.

## Step 7

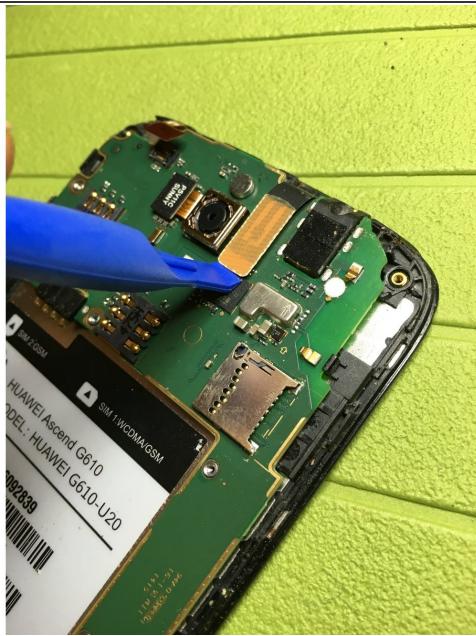

- Disconnect the touch screen connector.

## Step 8




- Pry out the connector between the two boards

## Step 9



- With a thin tool, help us to unhook the motherboard from the joints

## Step 10

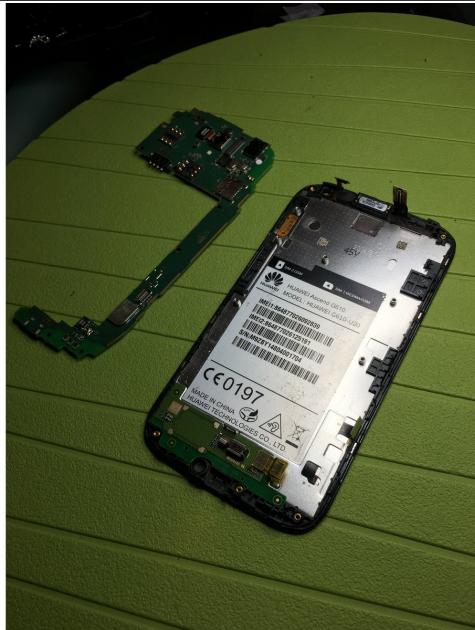


- Remove the motherboard

## Step 11



- With the help of a heat source, remove the audio and power button ribbon cable

## Step 12

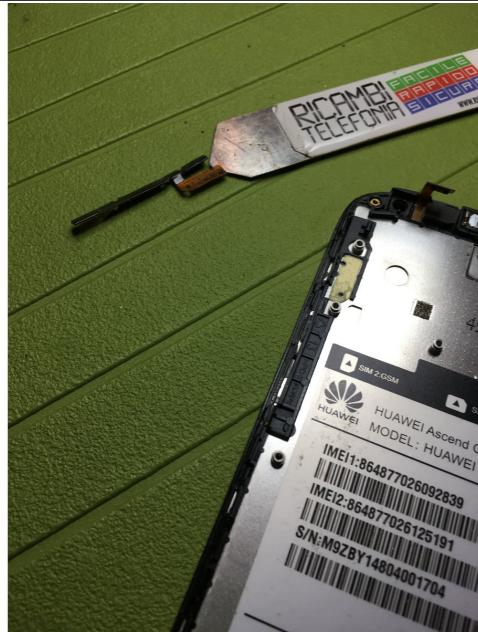

- Replace with the new component

To reassemble your device follow these instructions in reverse order.