



Huawei Ascend G700 SD Card Replacement

I will show you how to upgrade or replace the SD card of this smartphone.

Written By: Leonard Kesting



 **TOOLS:**

- [Spudger \(1\)](#)

 **PARTS:**

- [New Item \(1\)](#)

Step 1 — Preparation



- Disconnect all connected devices (such as headphones and USB chargers).
- Turn the device off.
- Turn the device around.

Step 2




- On the same side as the powerbutton is a little notch. Using it you will have to carefully remove the back cover.
- Use a small prying tool if you can't do this with your fingers.

Step 3



- Now you can remove the battery, that has to be pried off in the marked location.

Step 4 — SD Card

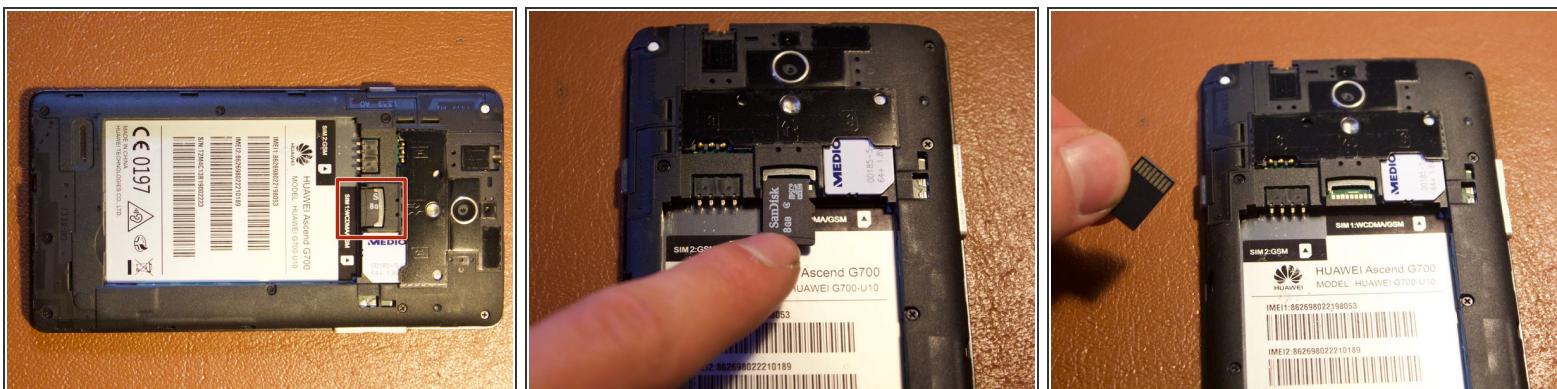

- You can now pull the SD card downwards.

Follow the steps in reverse order to reassemble your device.