


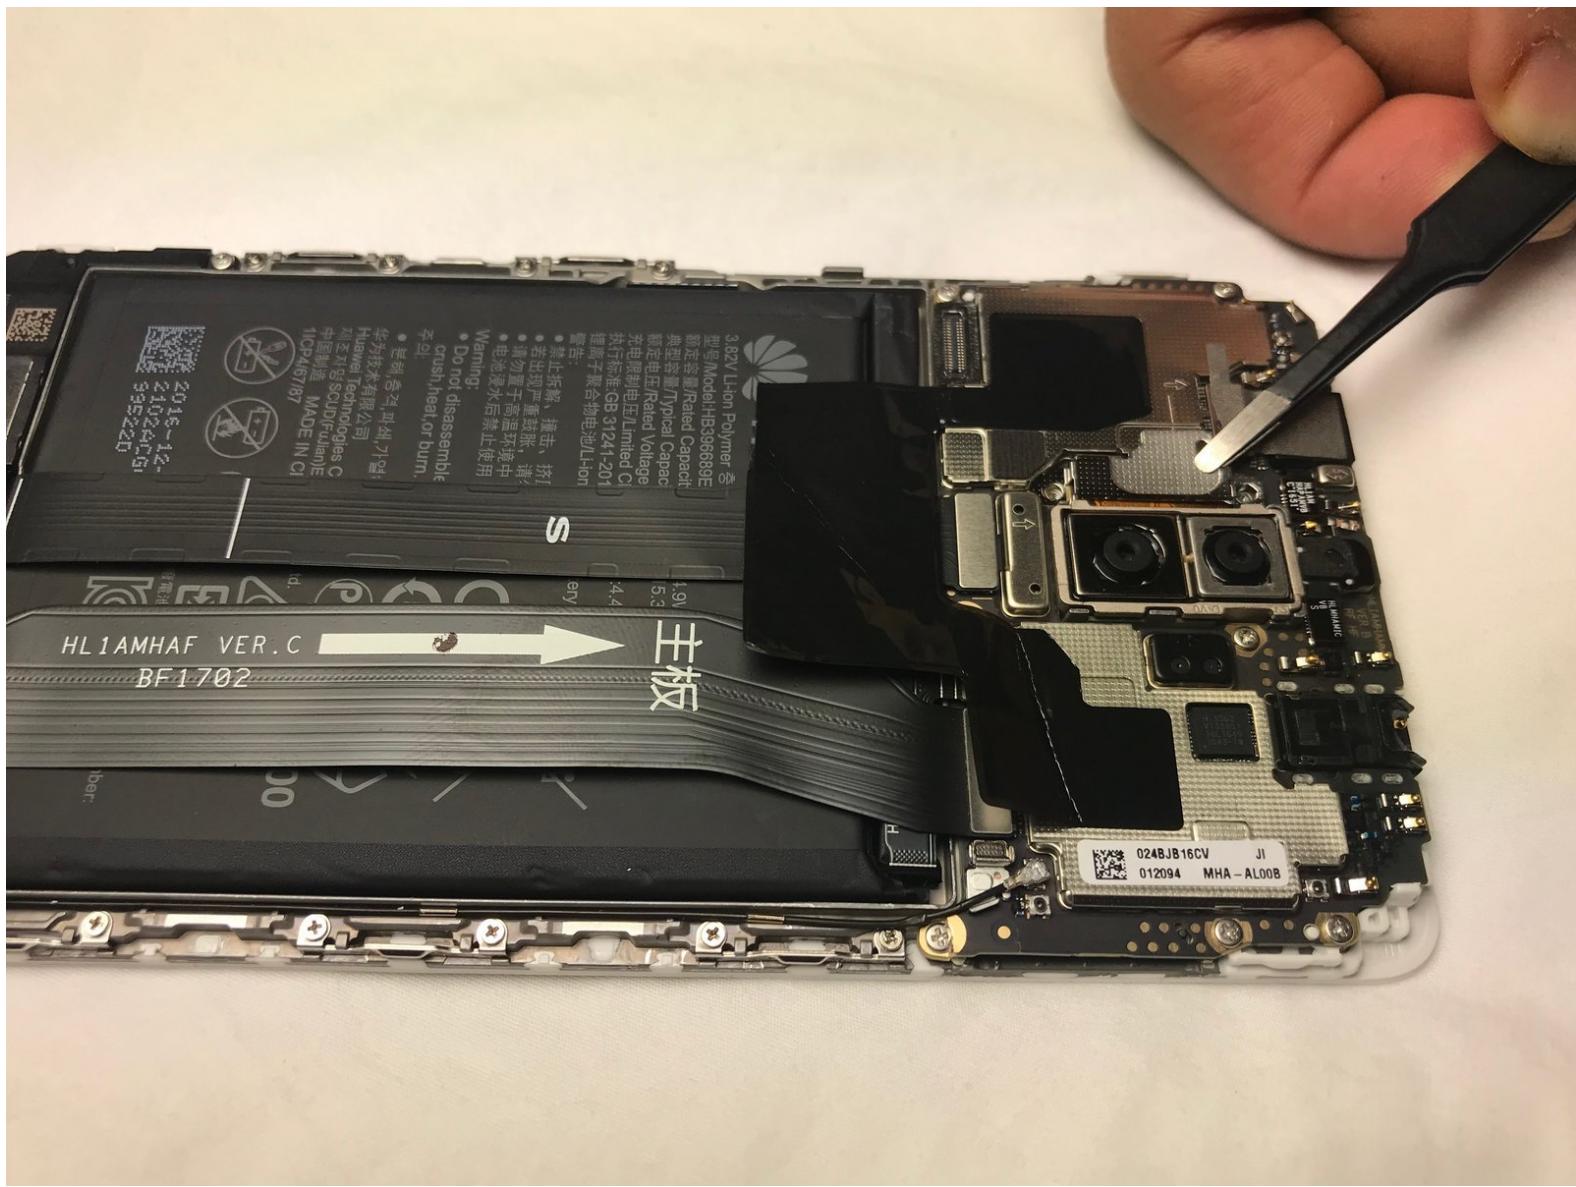

Huawei Mate 9 Rear and Front Camera Replacement

This guide will help you replace a broken or malfunctioning rear and front camera.

Written By: Rogelio Ramirez



This document was generated on 2019-09-23 01:15:00 AM (MST).


INTRODUCTION

Use this guide to help you replace a broken or malfunctioning rear and front camera. Ensure that you have all the proper tools before starting.

TOOLS:


- [SIM Card Eject Tool](#) (1)
- [T2 Torx Screwdriver](#) (1)
- [Suction Handle](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [Tweezers](#) (1)
- [Spudger](#) (1)

Step 1 — Rear and Front Camera

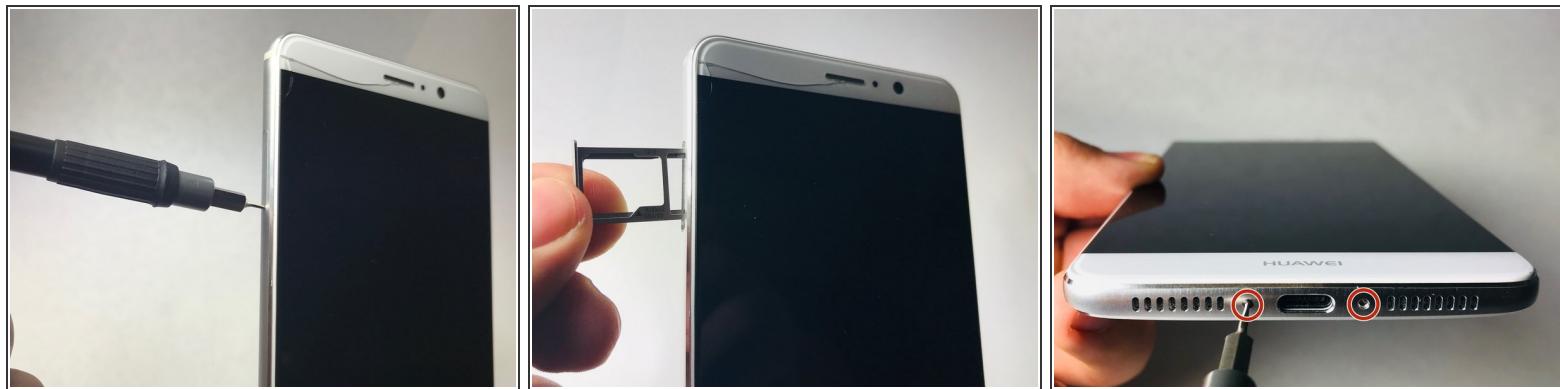


- Turn off your Huawei Mate 9 smartphone and remove the SIM card tray with a SIM card removal tool.
- Remove the two T2 screws at the base of the phone next to the USB Type- C port with a T2 Torx Screwdriver.

Step 2

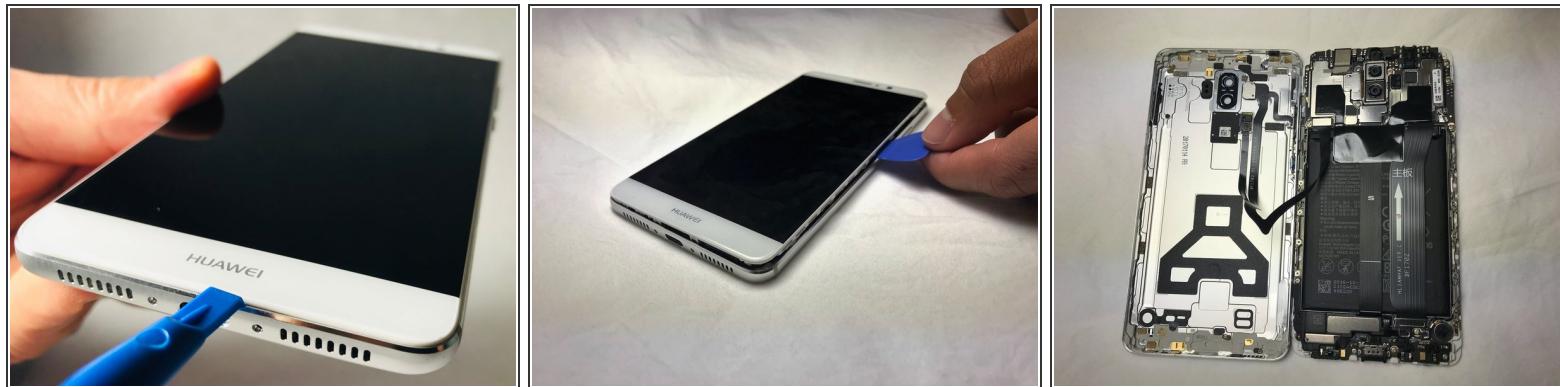


- Using a suction cup, carefully start pulling the display assembly from the back cover.
- Insert a pick when pulling the display assembly off the back cover, while sliding the pick along the edge of the phone to loosen the display assembly.
- While removing the display assembly, make sure to not completely remove the back cover. This is due to the power button and fingerprint sensor cables still being connected to the motherboard.

Step 3

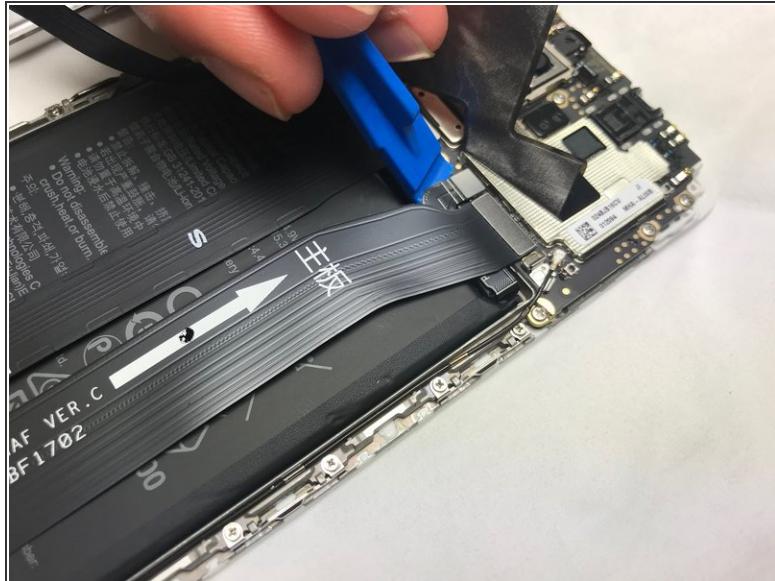


- To protect the internal cables and components, you will need to carefully disconnect the battery connector. Ensure the 1.3 mm Phillips #000 screws securing the metal plate is removed with a Phillips 000 screwdriver.
- Remove the metal plate with tweezers.
- Disconnect the battery connector from the motherboard using the spudger.

Step 4

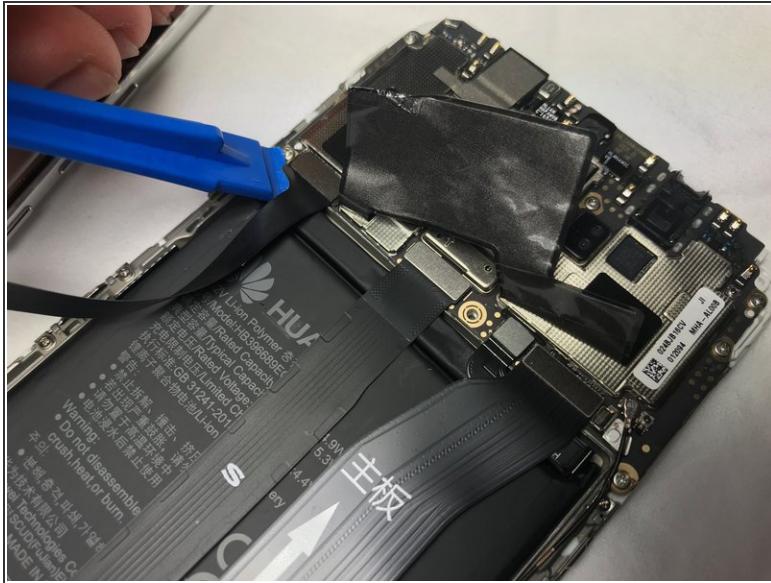



- Using a spudger, disconnect the battery connector.
- After disconnecting the battery connector, you can now completely remove the back cover.

Step 5

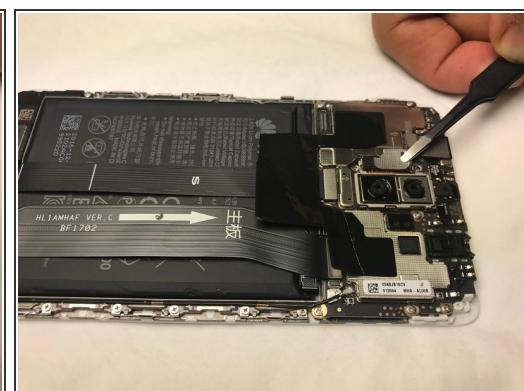

- Use a Philips 000 screwdriver to remove the two 1.0 mm Philips #1 screws securing the metal plate.
- Remove the metal plate with tweezers.
- After removing the metal plate, you can now remove and replace the rear camera from its slot.

Step 6

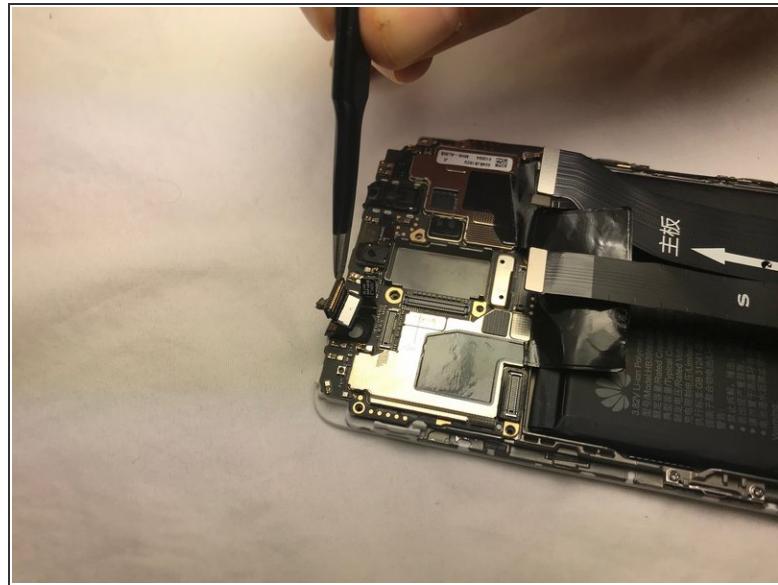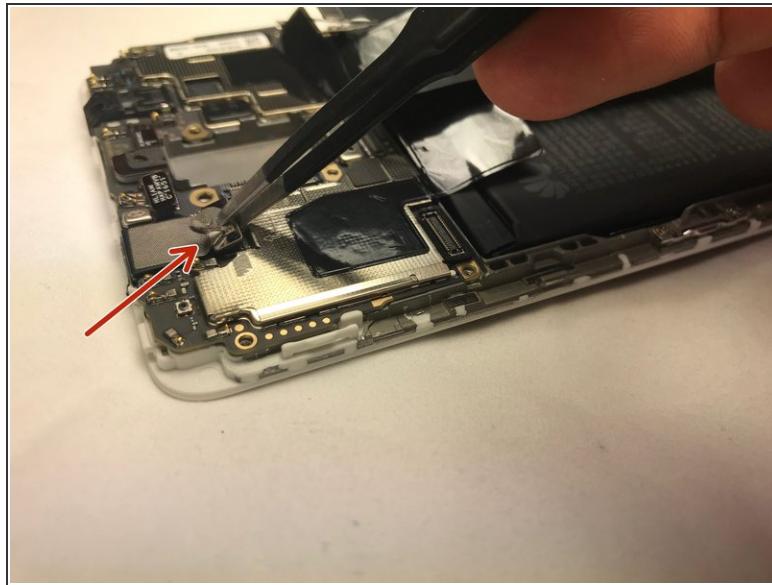

- To remove the front-facing camera, peel off the conducting fabric from the metal shield on the display assembly.
- Disconnect the front camera connector and remove the front-facing camera.

To reassemble your device, follow these instructions in reverse order.