



# Huawei P8 Lite Camera Replacement

A replacement guide for the front and rear facing cameras of the Huawei P8 Lite.

Written By: Brayden Mann



## INTRODUCTION

In this guide, instructions will be laid out to guide the replacement of the Huawei P8 Lite's front and rear facing cameras.

### TOOLS:

- [SIM Card Eject Tool](#) (1)
- [Spudger](#) (1)
- [T5 Torx Screwdriver](#) (1)
- [Phillips #000 Screwdriver](#) (1)

## Step 1 — Camera




- Remove the SIM that is connected with the mother board.

## Step 2




- Remove the back cover. It is not fastened with screws or adhesive so it can be removed with your finger nails, spudger or other gentle tools.

## Step 3

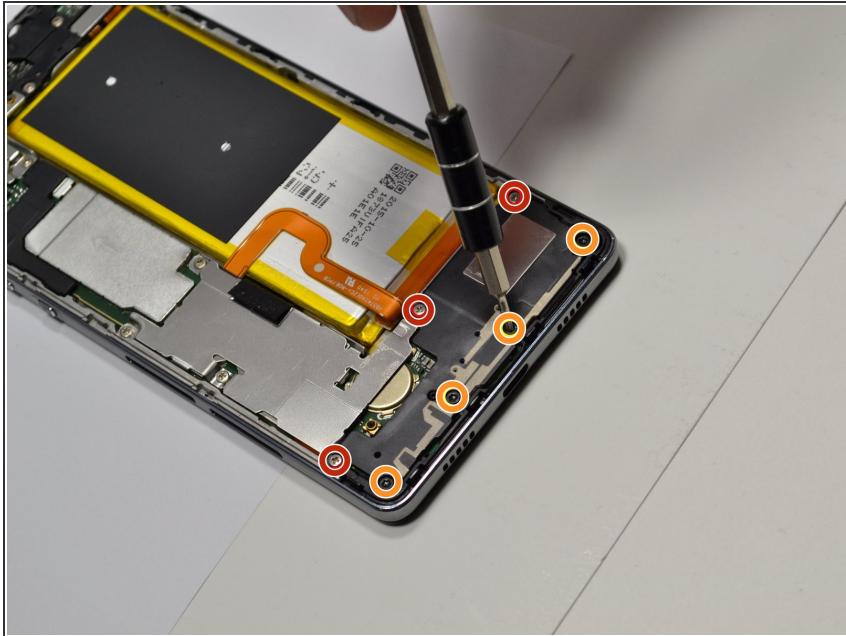


- Use screwdriver from [54 Bit Driver Kit](#) in order to remove screws. Be sure to separate the screws to avoid confusion.
  - PH000 Bit
  - T5 Torx

## Step 4

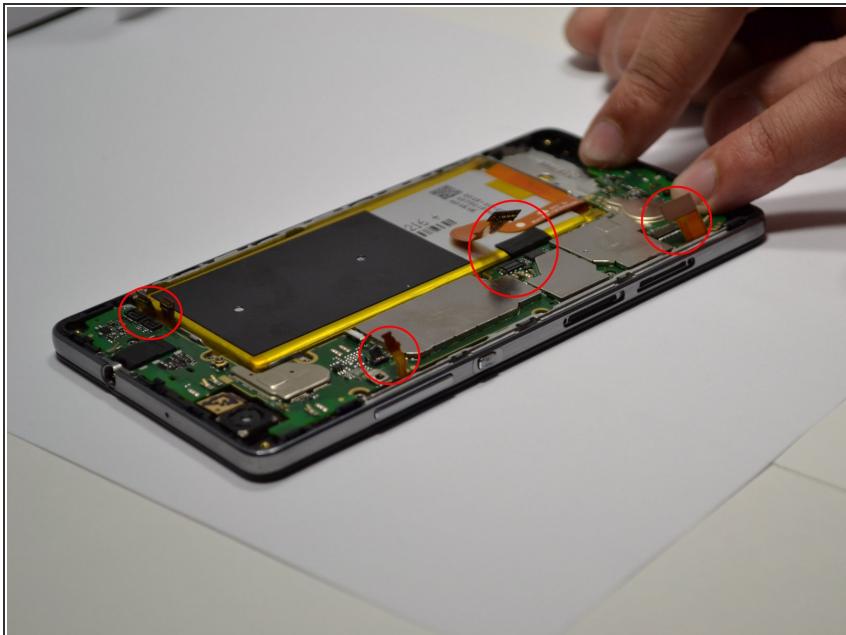


- Remove the connectors attached to the motherboard. See the highlighted areas in the photos.

## Step 5

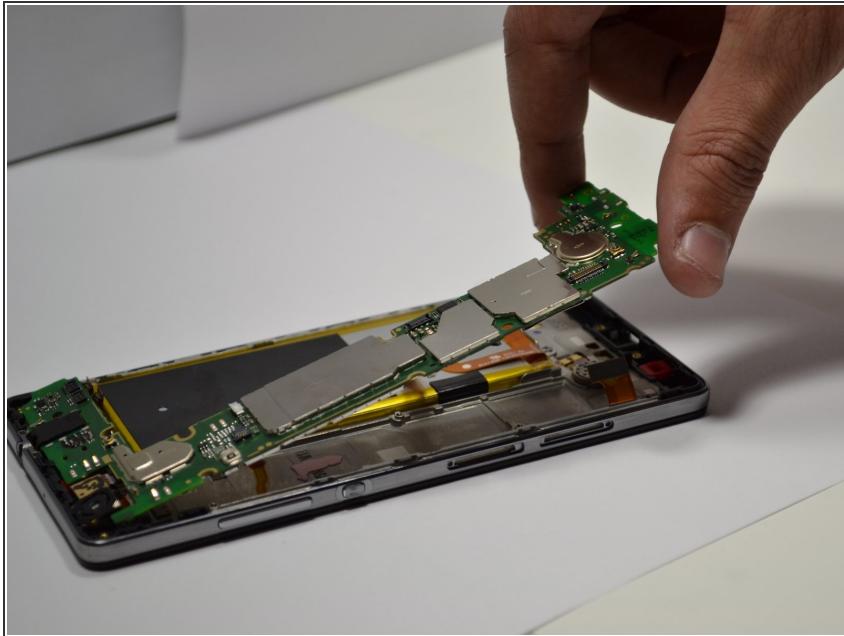


- Remove the motherboard carefully.
- Replace the motherboard. To replace the motherboard, do it in the reverse order as the [teardown process](#).

## Step 6

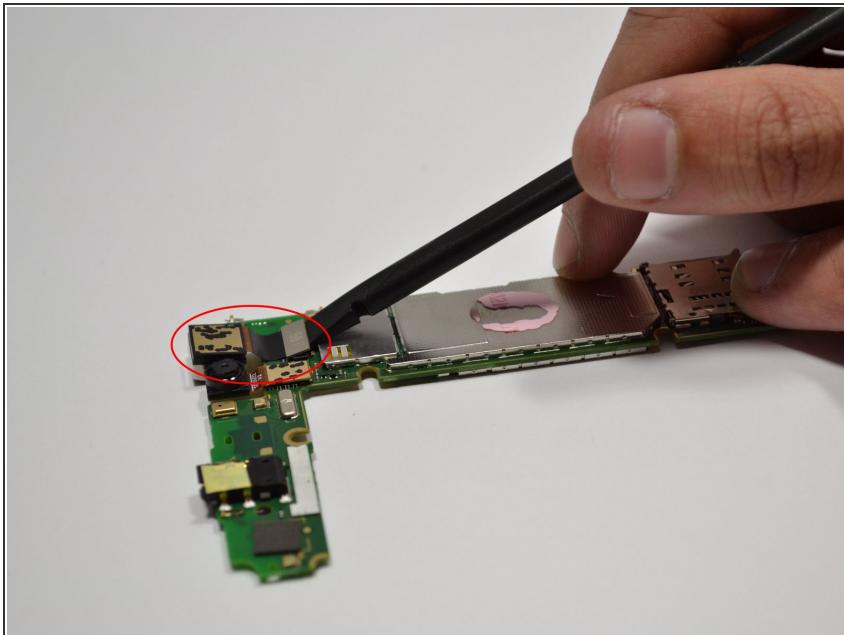

- With the motherboard removed, take the spudger tool and remove the front camera.

## Step 7

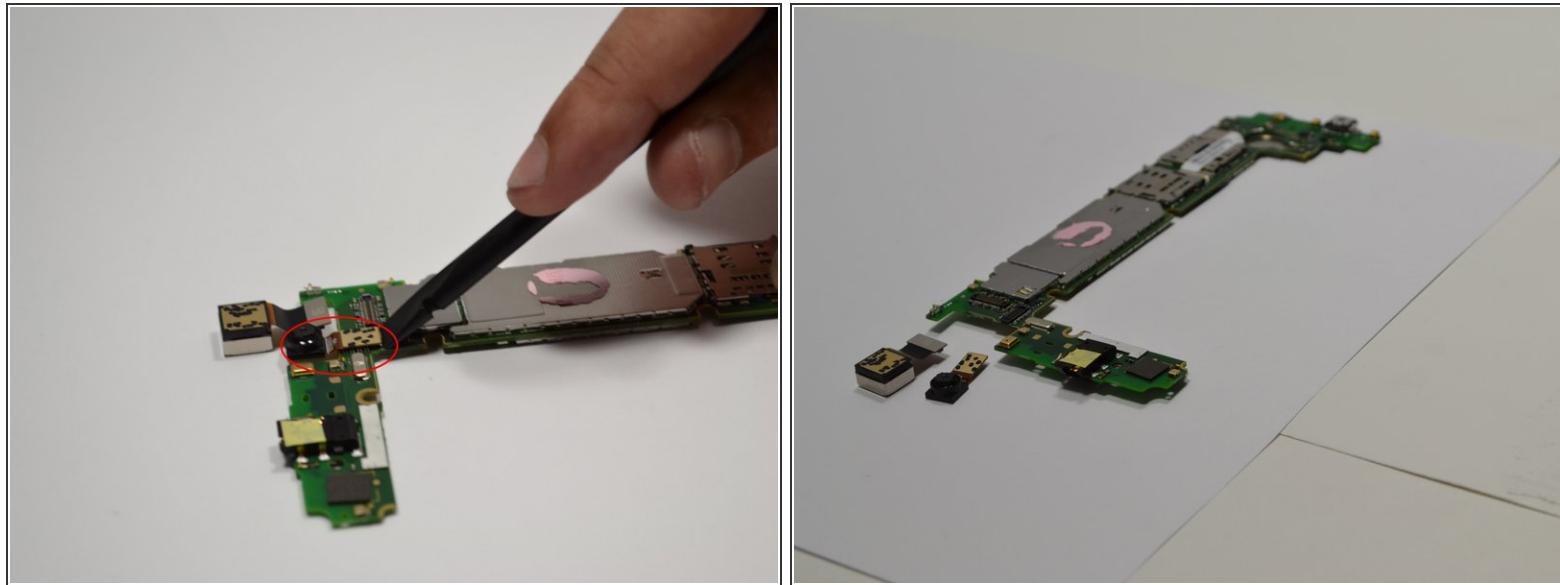

- Use the spudger to remove the rear camera. To replace, begin in reverse order.

To reassemble your device, follow these instructions in reverse order.