


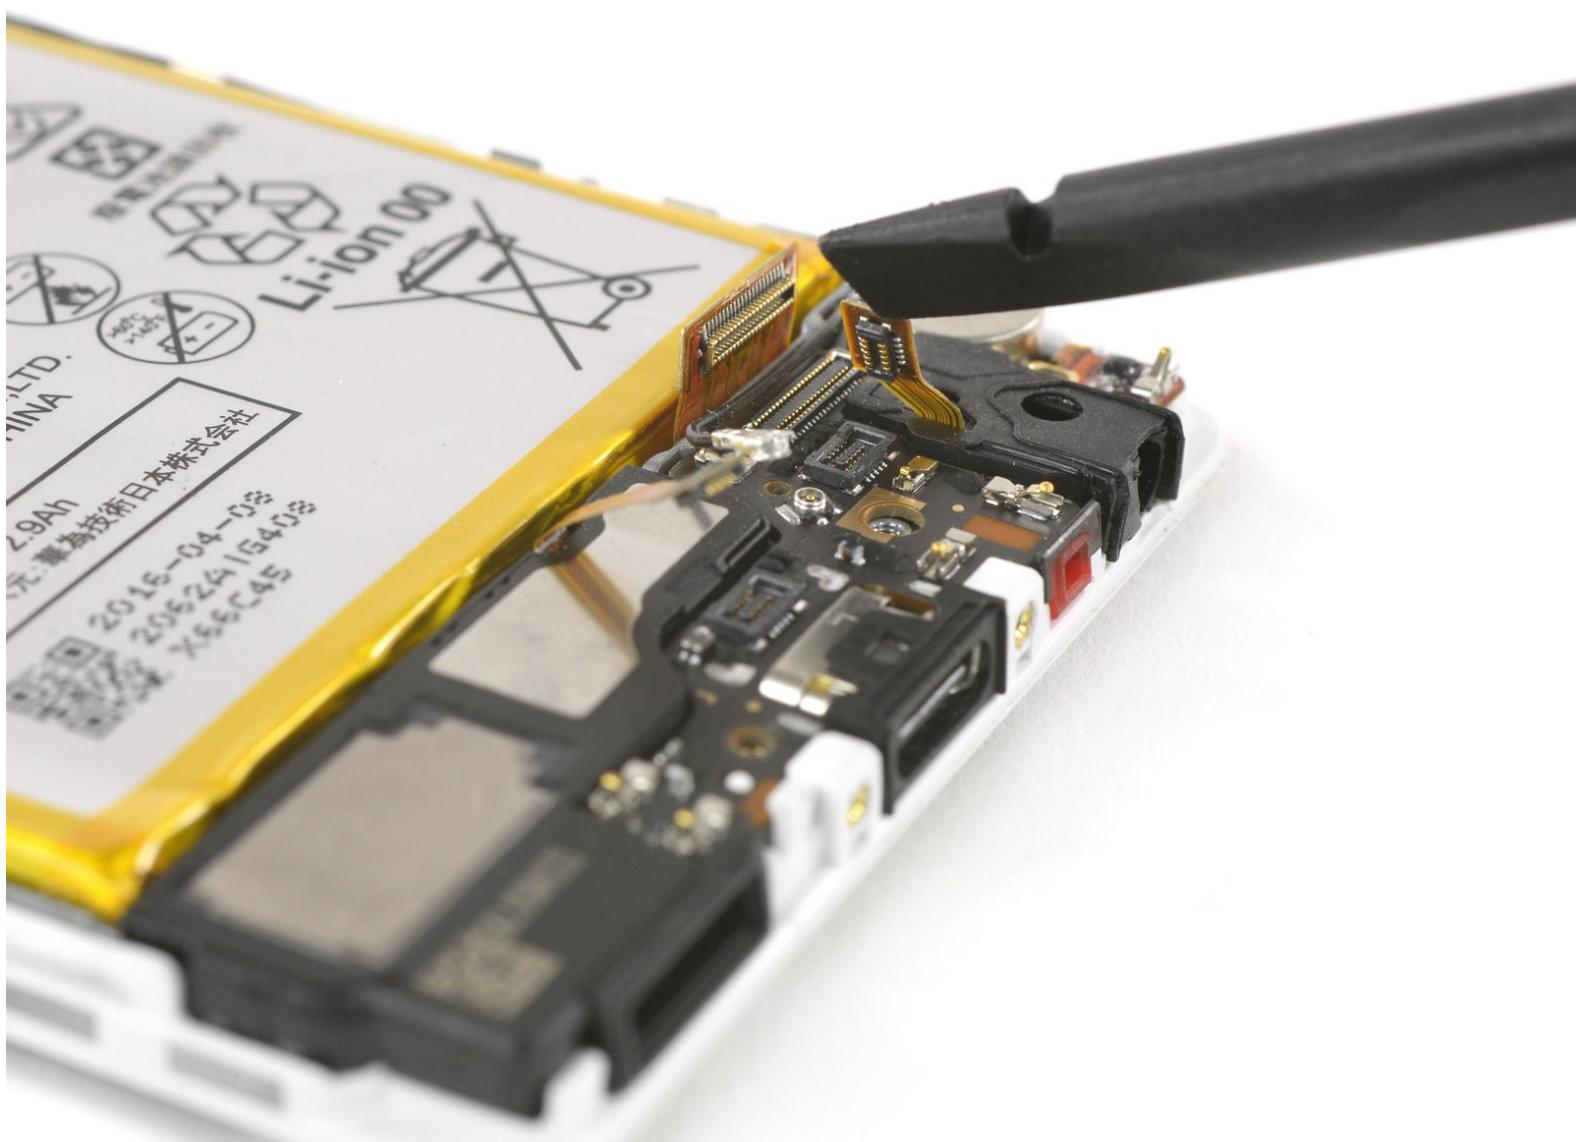

Huawei P9 lower section

pre-req for lower section (charging board, loudspeaker)

Written By: Dominik Schnabelrauch



INTRODUCTION

pre-req for lower section (charging board, loudspeaker)

TOOLS:

- [SIM Card Eject Tool](#) (1)
- [Spudger](#) (1)
- [Tweezers - Pro/ESD/Angled](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iSclack](#) (1)
- [P2 Pentalobe Screwdriver iPhone](#) (1)


Step 1 — lower section



- Undo the three Phillips #00 screws.
- Disconnect the loudspeaker flex connector.
- Carefully remove the metal bracket.

 Mind the adhesive underneath that might stick to the headphone connector.

Step 2

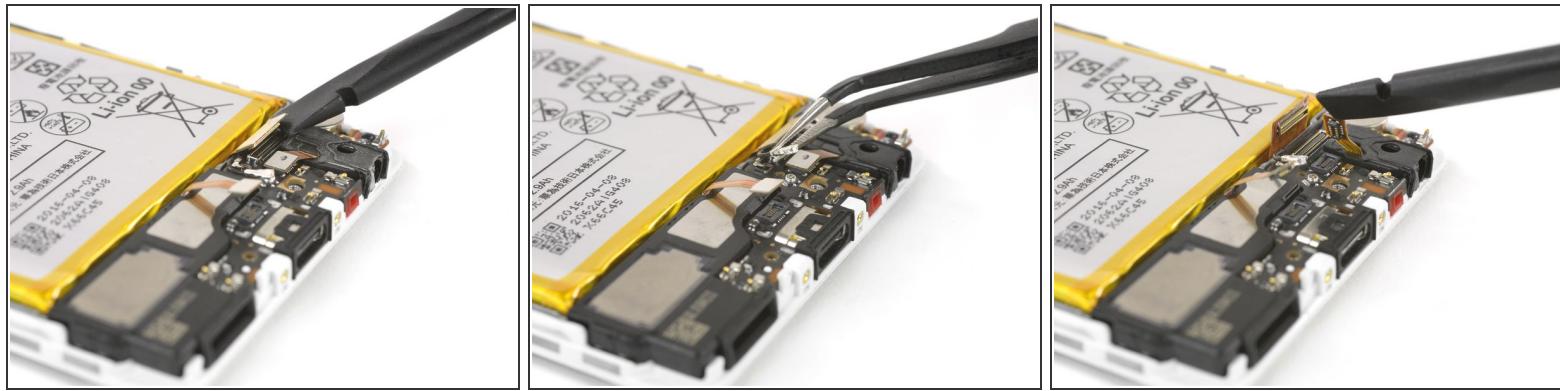

- Disconnect the motherboard flex cable and the antenna cable.
- Unplug the headphone jack connector.

To reassemble your device, follow these instructions in reverse order.