



IBM ThinkPad 560z Battery Removal

Removing the battery in one easy step.

Written By: Derek Driscoll



INTRODUCTION

This guide will show how to remove the battery on a IBM ThinkPad 560z.

TOOLS:

- Fingers (1)

Step 1 — Battery Removal



- Slide the battery release latch to the right.
- Pull out the battery out towards the front of the device.