



IBM ThinkPad 600E Battery Replacement

How to replace the battery from an IBM ThinkPad 600E.

Written By: Kevin Nguyen



INTRODUCTION

This guide will show you how to replace a battery from your laptop. When your battery doesn't work anymore, or it drains quickly, you can use this guide to replace it with a new one.

Step 1 — Battery



- Flip the laptop over and find the battery latch.

Step 2



- Move the latch to the side with the unlocked symbol.

Step 3



- Pry the battery out using your fingers.

To reassemble your device, follow these instructions in reverse order.