




IBM ThinkPad R40 Hard Drive Replacement

Replace your current hard drive.

Written By: Alec M

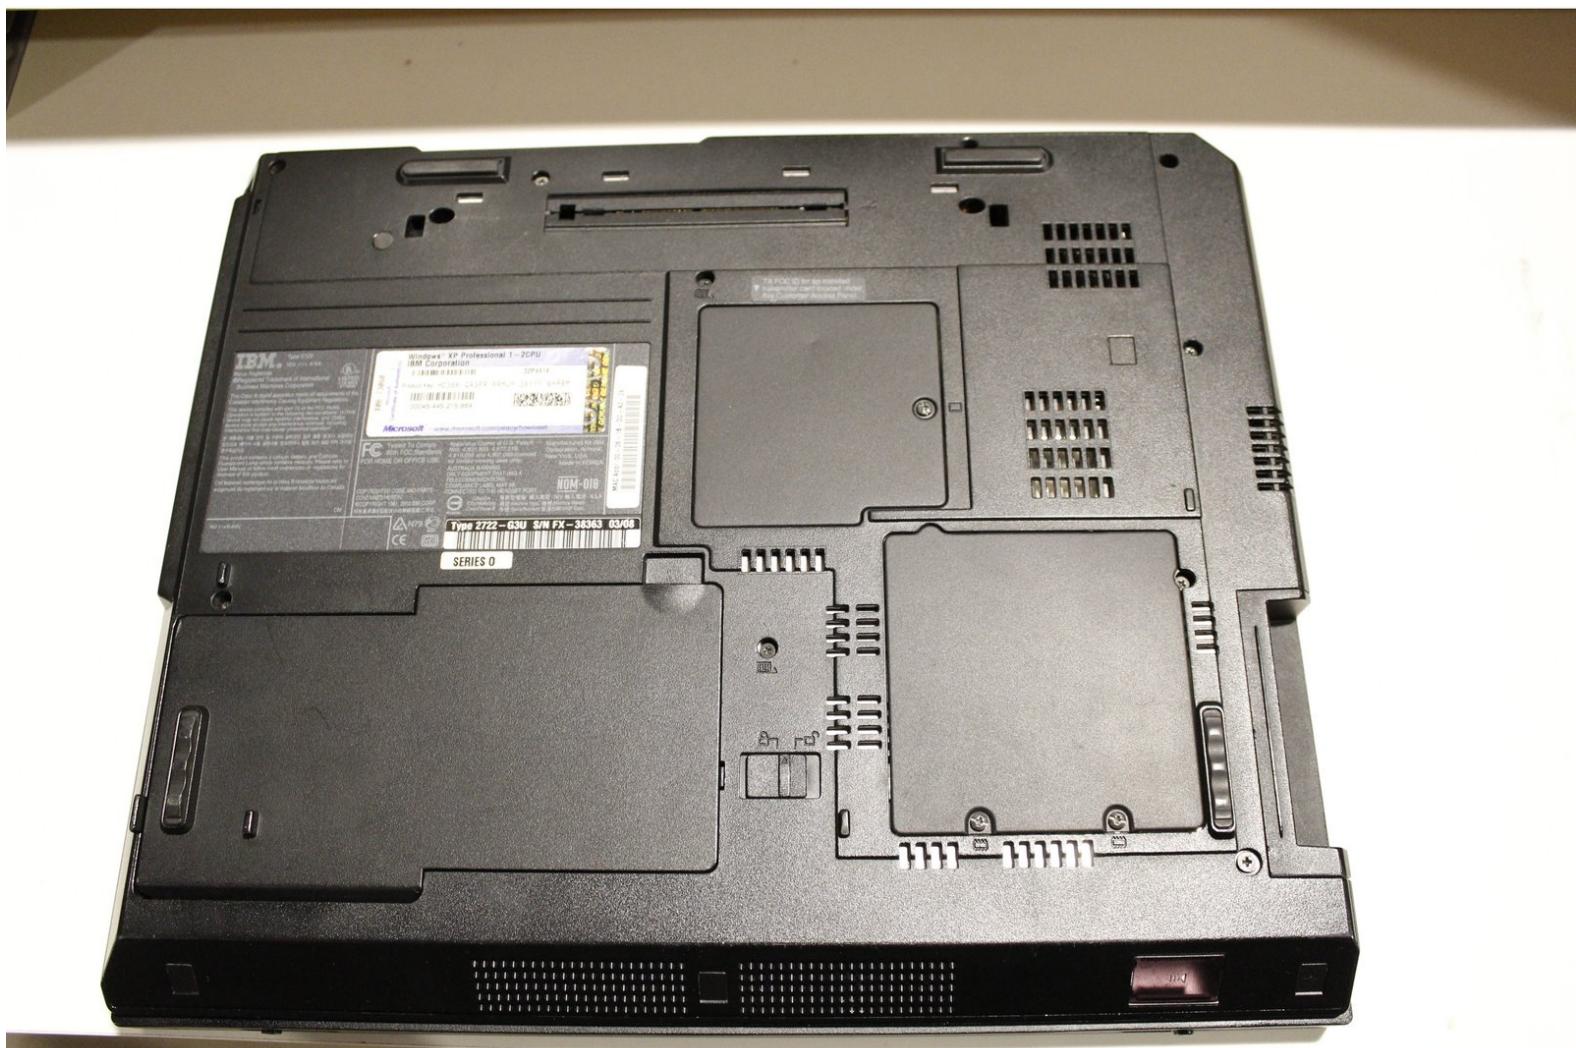

INTRODUCTION

Replace the hard drive in an IBM Thinkpad R40

TOOLS:

- Phillips #1 Screwdriver (1)

PARTS:

- 2.5" PATA Hard Drive (1)

Step 1 — Remove the battery



- To remove the battery, slide the battery lock lever right, while pulling on the battery tab.


Step 2 — Remove the hard drive holder.



- Remove the Phillips #1 screw from the bottom of the laptop.
- Pull on the small rise in the plastic to remove the hard drive holder.

(i) Don't be afraid to use some force, it requires quite a bit of pressure to remove.

Step 3 — Remove the hard drive holder.

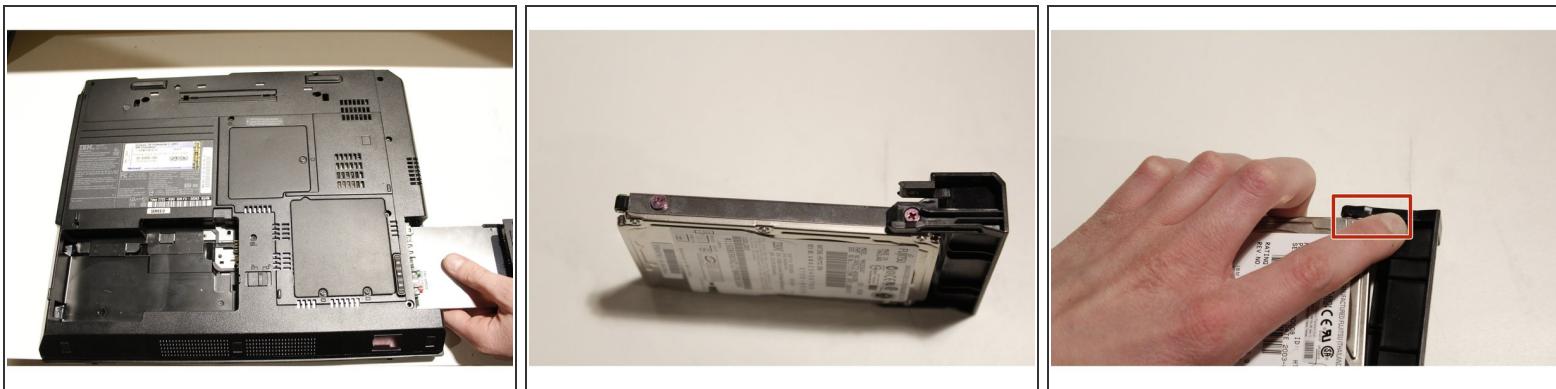

- Remove the hard drive holder completely from the computer.
- Push on the plastic, and the hard drive will pop out.

Step 4 — Remove the hard drive.



- Remove the four Phillips #1 screws.

To reassemble your device, follow these instructions in reverse order.