



IBM ThinkPad T42 Hard Drive Replacement

This guide shows how to remove the harddrive

Written By: Austin Kidd



INTRODUCTION

Replacing the Hard Drive

TOOLS:


- Phillips #0 Screwdriver (1)

Step 1 — Battery Clips



- Flip the laptop over so the underside is facing you, then, release the 2 clips holding the battery on.
- ⚠ Make sure the laptop is off when you do this, sudden power outages can cause data corruption.

Step 2 — Removing the Battery

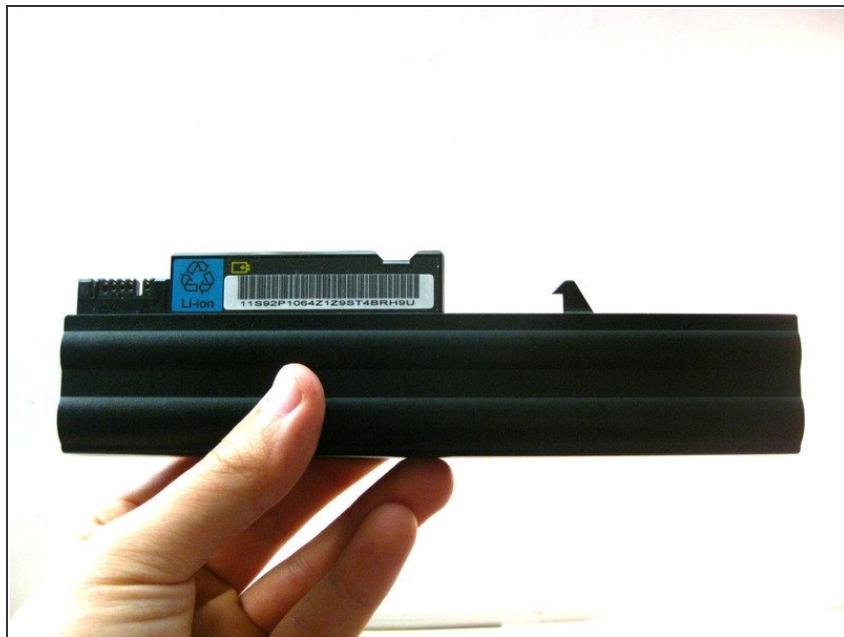

- Carefully grab the battery, then pull it straight out, not at an angle.

Step 3 — Hard Drive Screw



- Unscrew the single screw holding the drive cage in place.

Step 4 — Sliding Drive Out



- Pull the hard drive out of its bay with the help of pictured ridges. Carefully remove it.

(i) It might help to open the display slightly.

Step 5 — Removal of HDD



- Pull the Hard Drive out and proceed with replacement.

To reassemble your device, follow these instructions in reverse order.