




IBM ThinkPad X41 LCD Screen Replacement

This guide will instruct you on how to remove the IBM Thinkpad X41's LCD screen.

Written By: Justin Macik

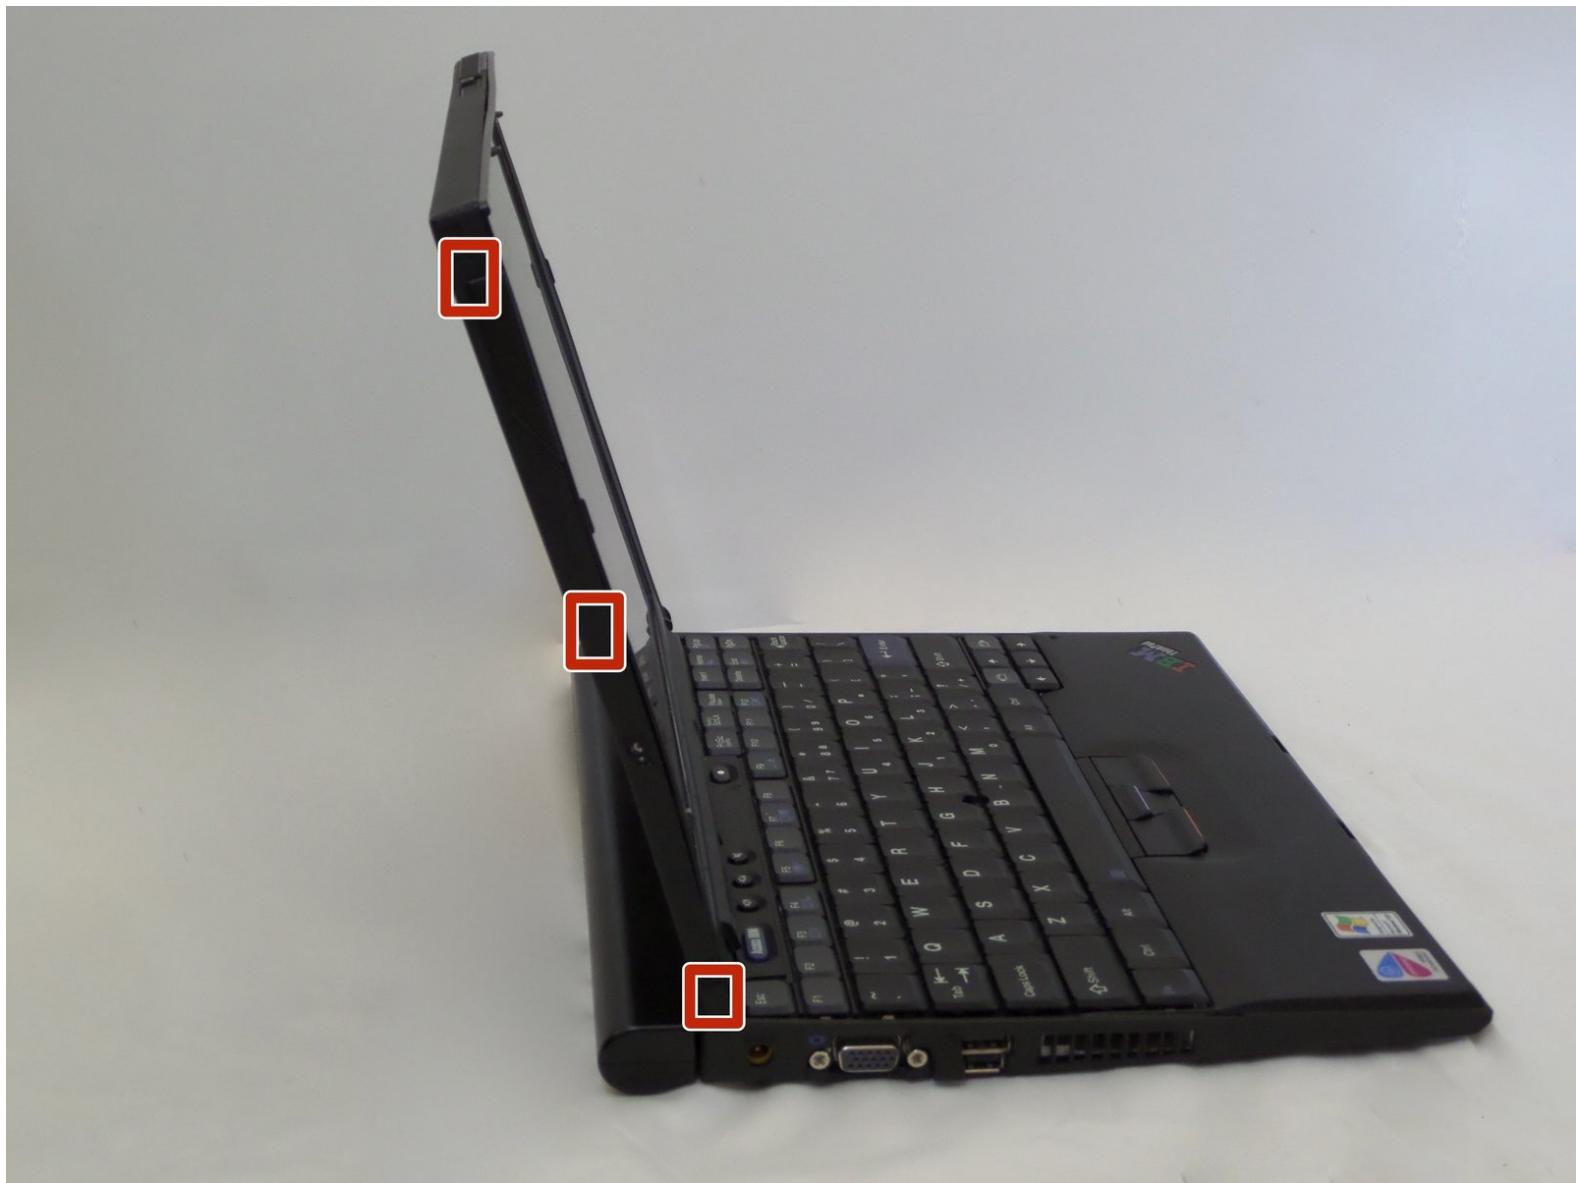

INTRODUCTION

This guide provides comprehensive step-by-step instructions to remove the IBM ThinkPad's back panel display assembly, front screen bezel, all assembly screws, and finally the LCD screen and successfully replace the screen in the event of damage.

TOOLS:

- Metal Spudger (1)
- Phillips #1 Screwdriver (1)

Step 1 — LCD Screen



- Open the laptop and turn to the side.
- Using the spudger, remove the 6 black rectangular-shaped screw coverings (3 on each side)

Step 2



- Using a Phillips Screw Driver, remove the (6) Phillips Head (Size PH001) 3.0 mm length screws (3 on each side) from the side of the LCD Screen Cover

Step 3




- Using the spudger, remove the two round, black screw coverings on the lower, left, and right corners of the LCD screen bezel.

Step 4



- Using a Phillips Screwdriver (Size PH001), remove the 3.0 mm screws from the lower, left and right corners of the LCD screen Bezel

Step 5

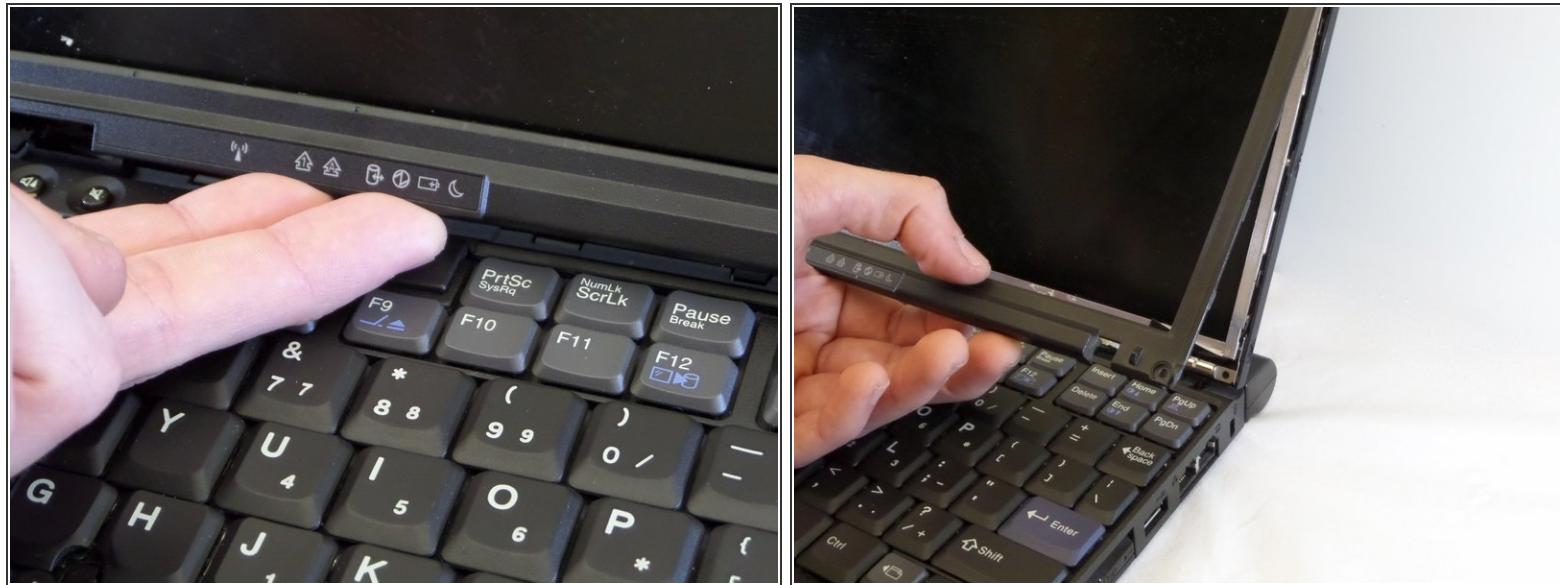



- Using 2 Fingers, pull the bottom of the screen bezel towards you.
- Pull the bottom of the screen bezel approximately 1 inch away from the LCD screen.
- Next, pull screen bezel downward and away from the LCD screen.

Step 6




- Using your index finger and thumb, gently lift and pull away laptop closure latch of the side of the screen assembly.

Step 7

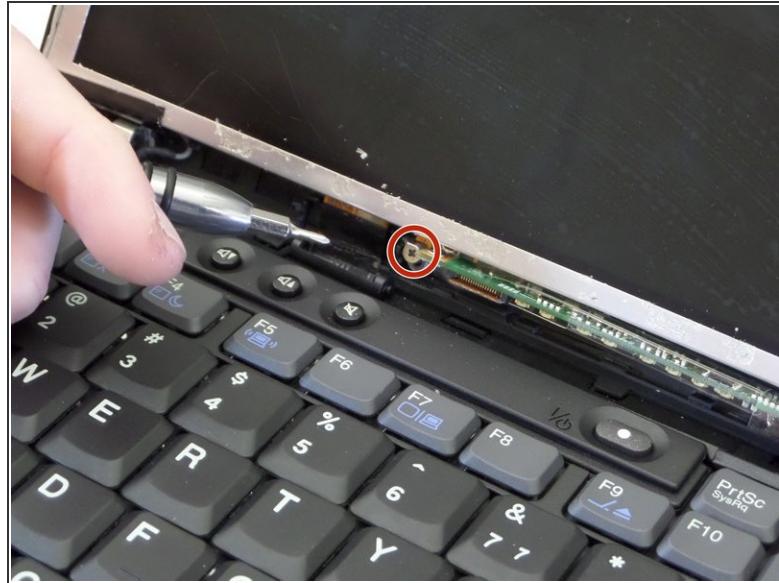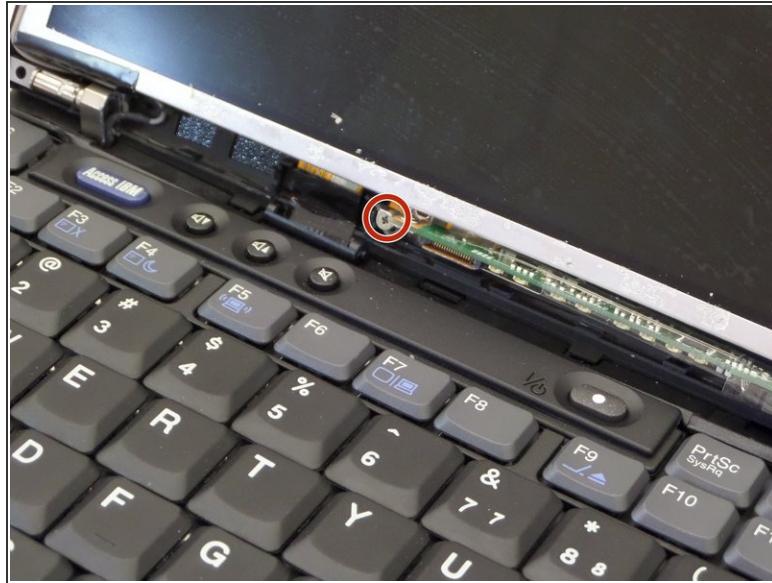


- Use a Phillips head screwdriver to remove the internal LCD screen support assembly above the F6 key.

Step 8

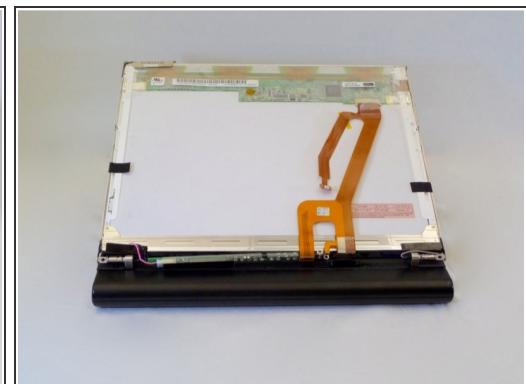


- Close the laptop and turn so that the laptop's backside is facing you.
- Using a thumb and index finger, gently lift the LCD screen back cover away from laptop.

Step 9

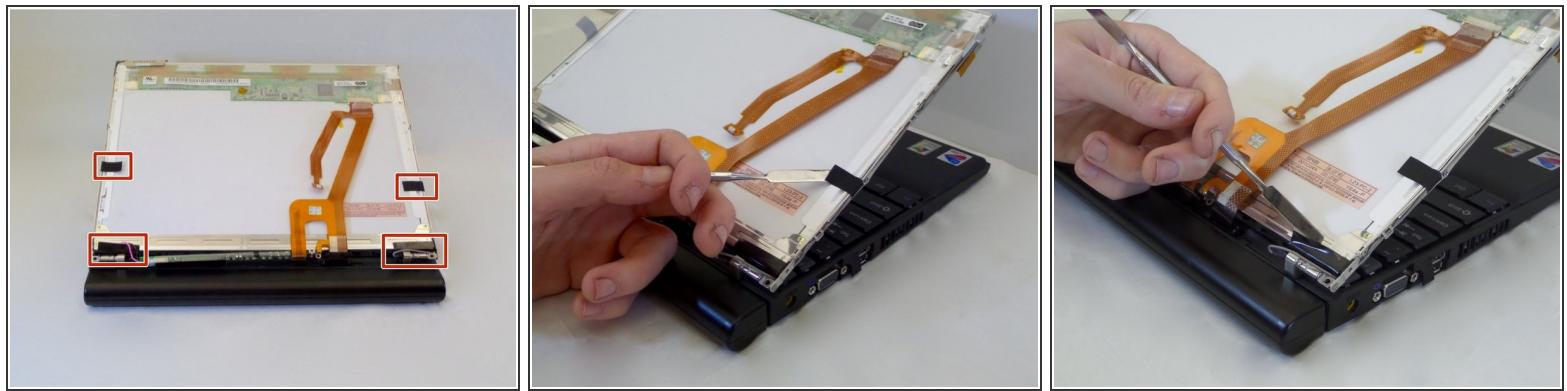



- Using a spudger, remove the black, rectangular support tape.

Step 10

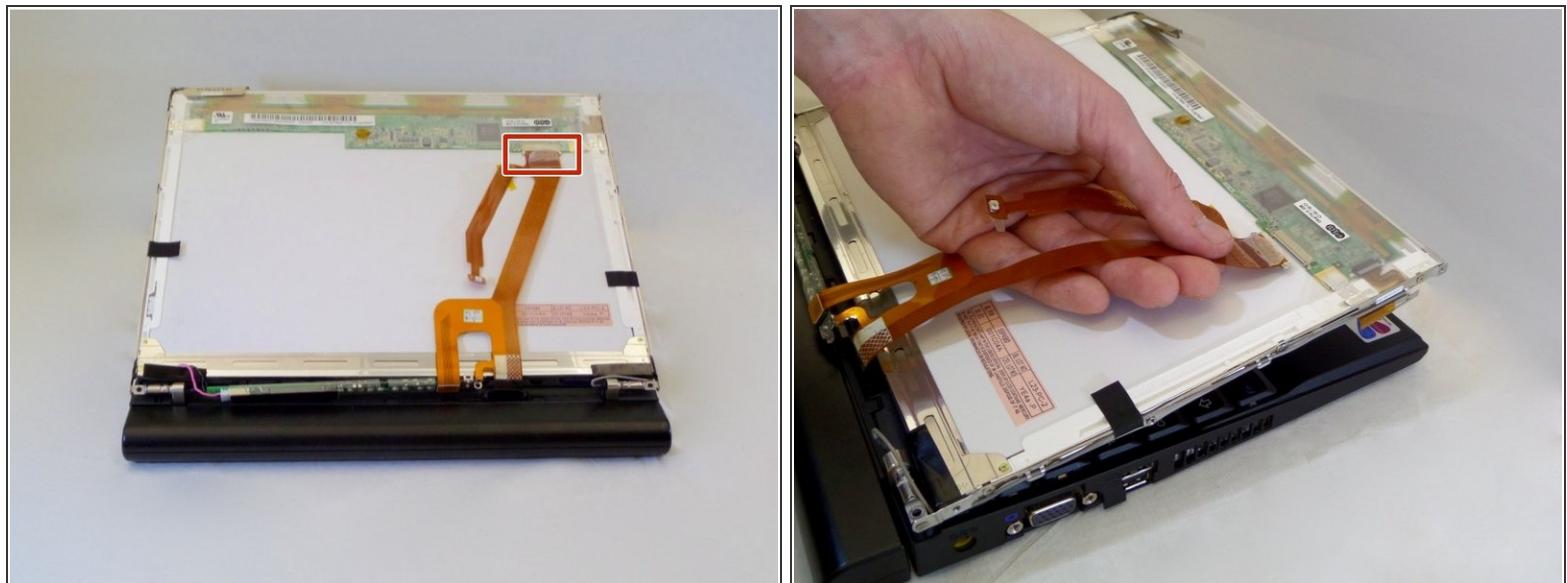



- Carefully disconnect the orange cable from back of LCD screen.

Step 11

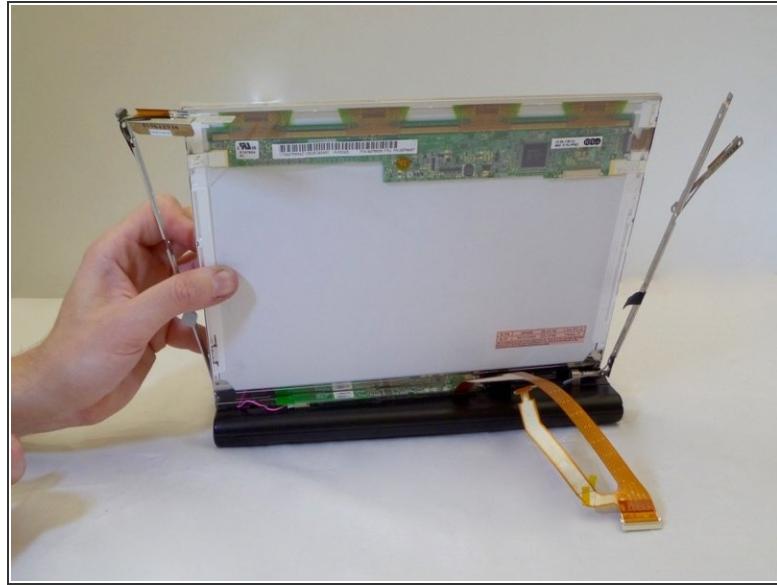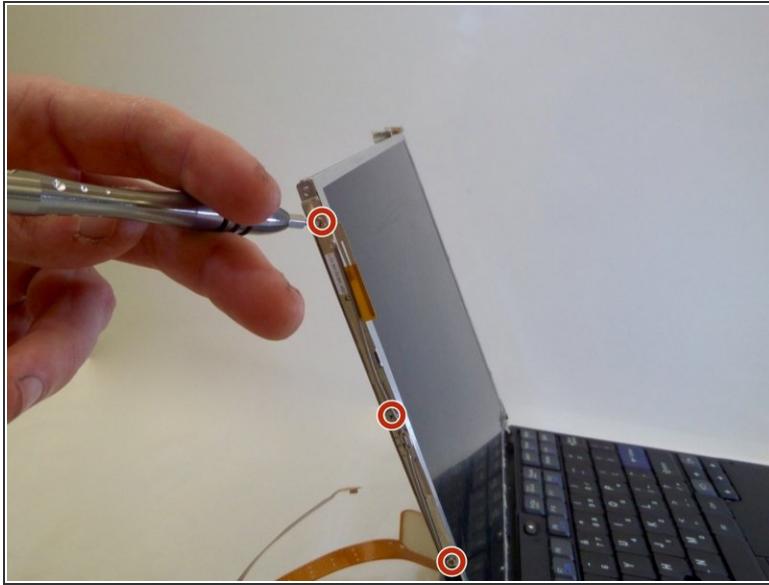


- Using a Phillips Screwdriver (Size PH001), remove the screws from the LCD screen support arms.

Step 12

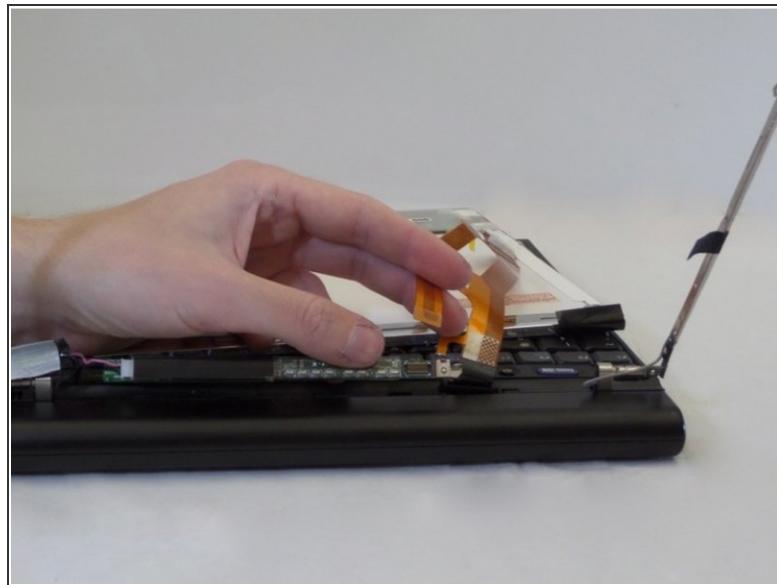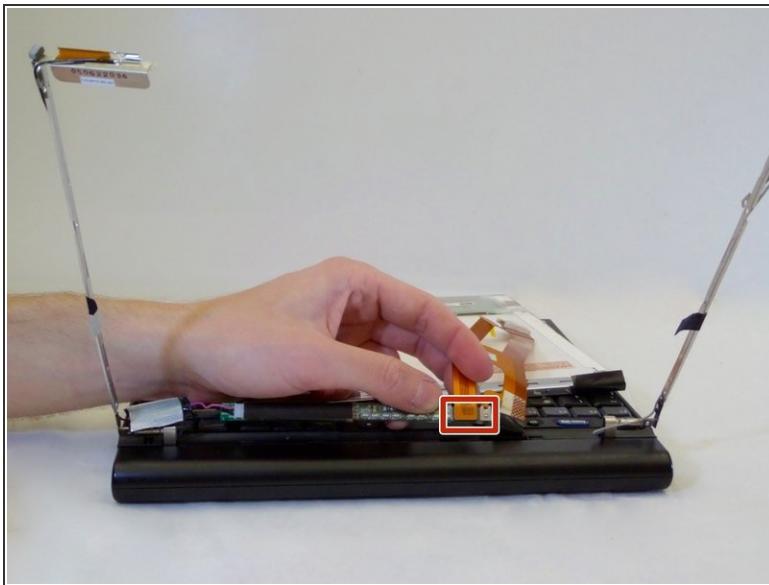

- Unplug the orange LCD screen cable from the small circuit board near the laptop keyboard.

Step 13

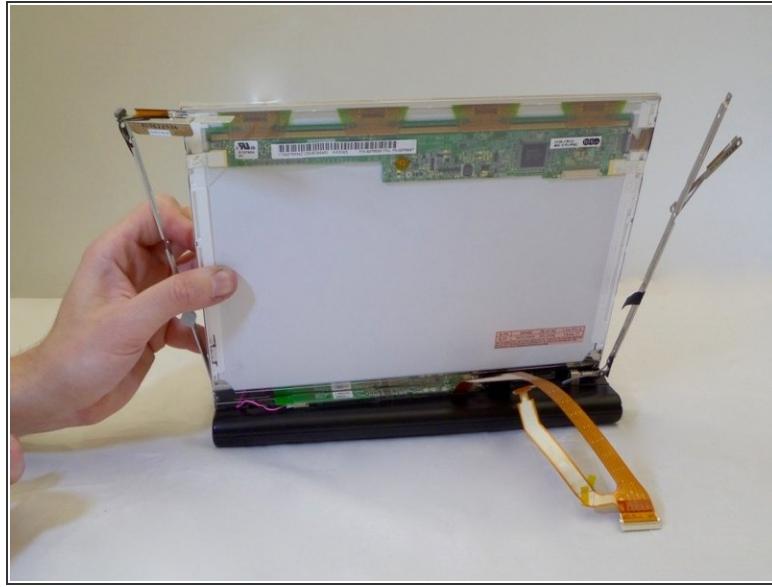

- Using one hand, gently lift the LCD screen out of support arms.

To reassemble your device, follow these instructions in reverse order.