




IT-8800 Footrest Disassembly

This guide will help you successfully disassemble an IT-8800 Footrest.


Written By: Nick

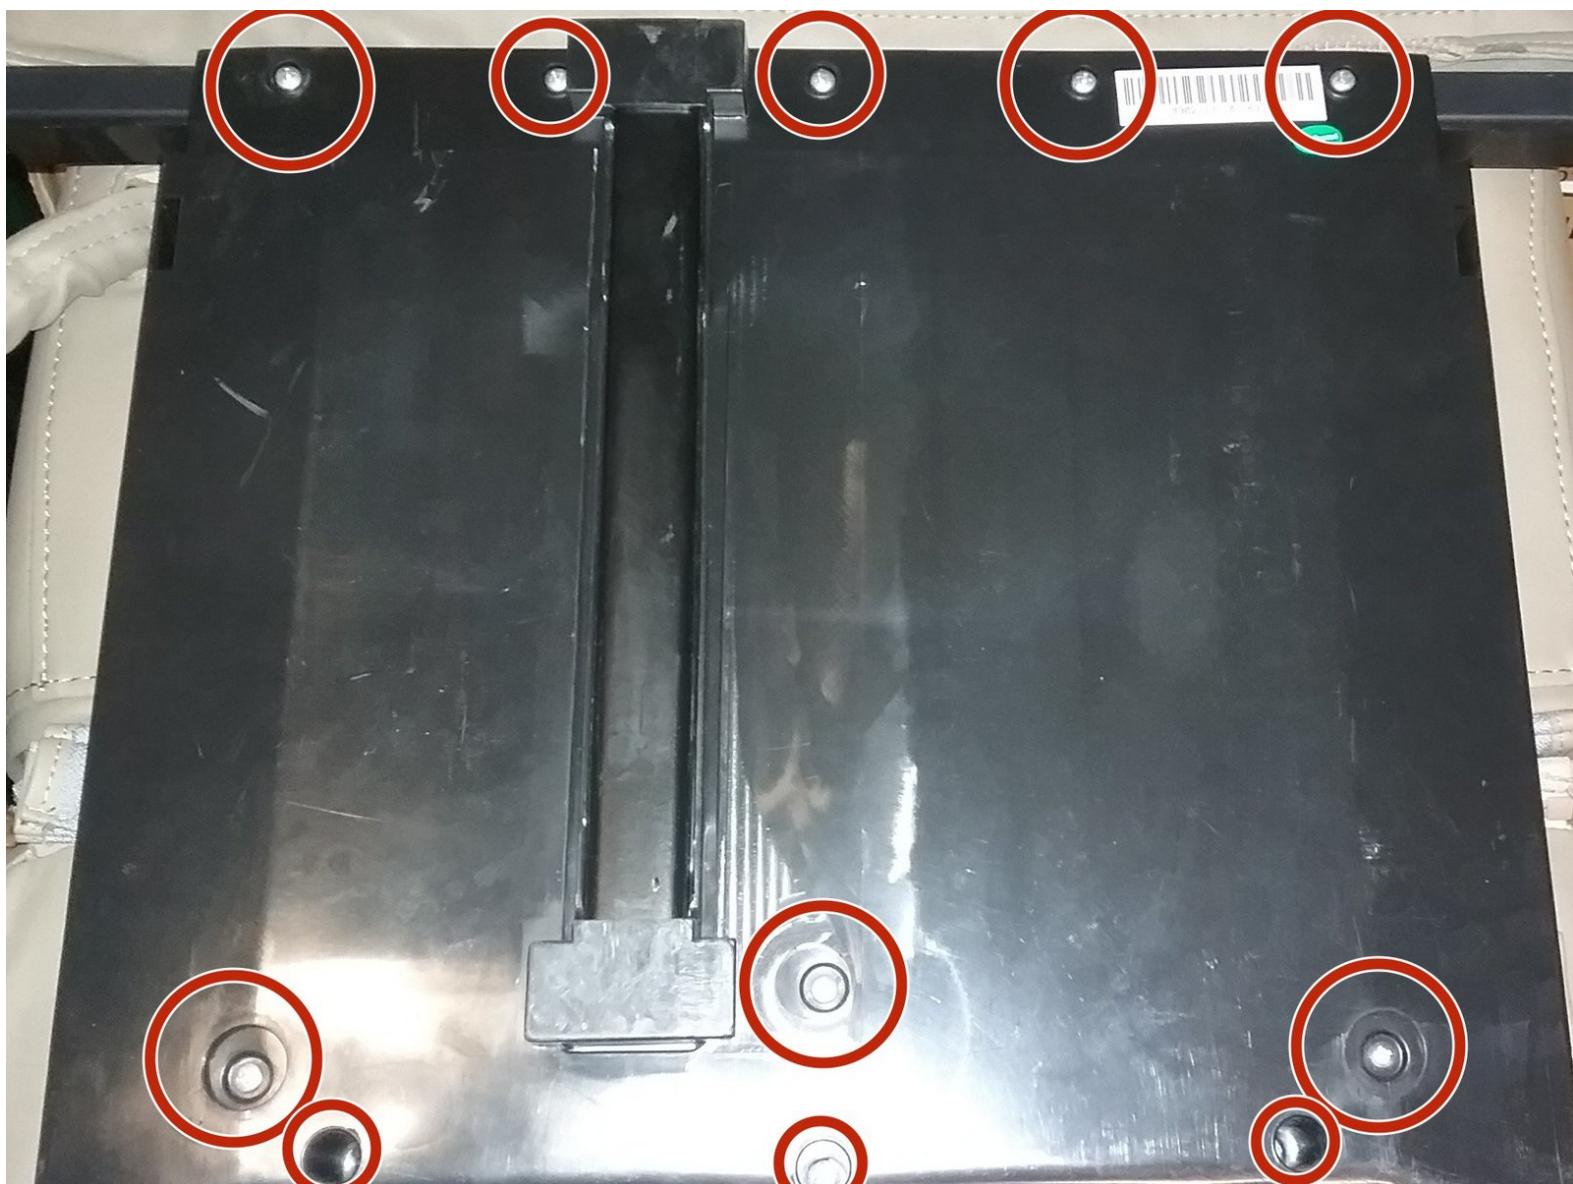

 **TOOLS:**

- [Cordless Drill \(1\)](#)
- [Phillips #1 Screwdriver \(1\)](#)
- [Flush Wire Cutters \(1\)](#)
- [Paper Clip \(1\)](#)
- [spray adhesive \(1\)](#)

Step 1 — IT-8800 Footrest Disassembly

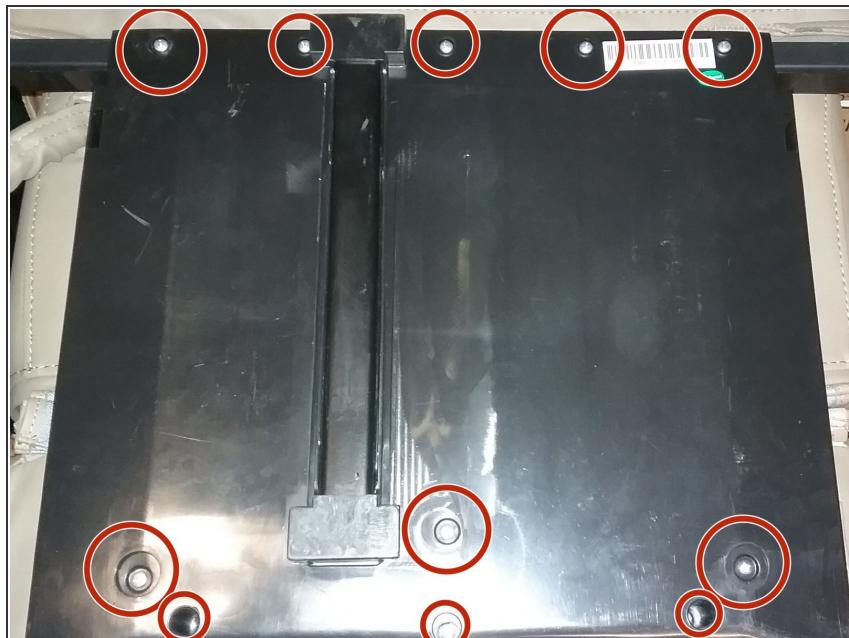

- Before starting this step you will need to remove the footrest from the chair. This is done by removing the 5 screws at the top and the 6 screws at the bottom. The plastic shroud will come off as one piece, however it has 2 pieces that slide into each other.

Step 2



- You should be left with this. From here you will need to remove the 4 bolts on the upper part of the footrest: 2 on the right, and 2 on the left. From here the top should separate from the metal piece.

Step 3




- Once separated be careful because the top is connected to the bottom by an air hose and wire. The top is zipped to the bottom. Please unzip before continuing to next step.

Step 4



- Next step is to unzip the leather from the bottom piece. Once unzipped you should be left with this. From here, just carefully pull back the foam to reveal the back cover and screws. Remove the back cover by unscrewing the 12 screws. Unfortunately, due to photo size limitations I'm unable to show all 12.

Step 5

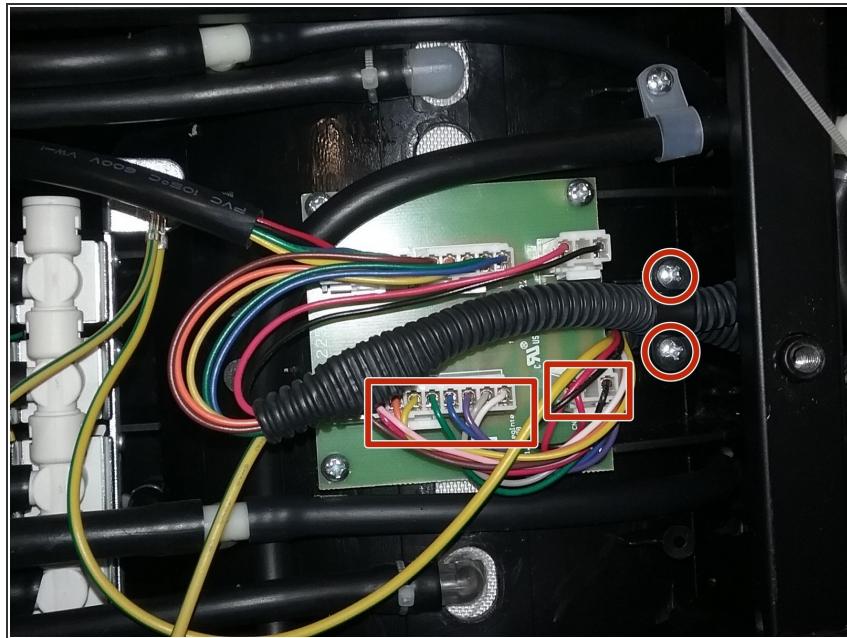

- Remove the back cover and this is what you are left with. Remove the 2 screws and that will free up the wire harness . Unplug the cable from the board and attach new cable. Upon re installation you will need spray adhesive.

To reassemble follow the steps backwards. Be sure when attaching upper piece to lower piece that the hose is behind the leather zipper piece .