



India Mark II Access Door Replacement

Replace the access door on an India Mark II pump.

Written By: Andrew Optimus Goldheart



INTRODUCTION

Follow this guide to remove the access door of an India Mark II for repair or replacement.

TOOLS:

- 24mm Wrench (1)

Step 1 — Access Door



- Before performing any repairs, perform a water test on the pump by raising and lowering the handle a full 40 strokes. A properly performing pump will yield greater than 10 liters.
- Remove the hex head bolt from the top of the access door on the pump head.
- On reassembly, this bolt should be hand-tight.

Step 2



- Pull the access door straight up off the pump head.
- Store the access door in a sanitary place to prevent contamination.

Step 3



-  The access door has a tongue that fits into the base of the pump head.
-  The access door makes a convenient tray to hold nuts and bolts during the disassembly.

To reassemble your device, follow these instructions in reverse order.