



India Mark II Cylinder Replacement

Prerequisite guide for accessing the valves in the cylinder.

Written By: Andrew Optimus Goldheart



INTRODUCTION

Prereq only.

Step 1 — Cylinder



i The last section of riser main pipe will have the pump cylinder attached to the bottom.

- Pull the assembly of riser main pipe and cylinder out of the well and set the assembly on a block of wood to keep the cylinder off the ground.

Step 2



- Using two pipe wrenches, unscrew the cylinder from the riser main.

Step 3



- Slowly pull the cylinder off of the pump rod, exposing the traveling valve and foot valve.

To reassemble your device, follow these instructions in reverse order.