



# India Mark II Riser Main Coupling Replacement

Prerequisite guide to install a coupling to the riser main before removing it from the well.

Written By: Andrew Optimus Goldheart



# INTRODUCTION

Prereq only.

## TOOLS:

- Pipe Wrench (1)
- T-Handle (1)

## Step 1 — Riser Main Coupling



- Place a coupling over the pump rod, on top of the rod vise.

## Step 2



- Reattach the T-handle to the top of the pump rod.

## Step 3



- Loosen and remove the rod vise from the pump rod.
- *(i)* The coupling will drop down onto the riser main.

## Step 4



- Screw the coupling onto the end of the riser main.
- Use a pipe wrench to tighten the coupling onto the riser main.

To reassemble your device, follow these instructions in reverse order.