


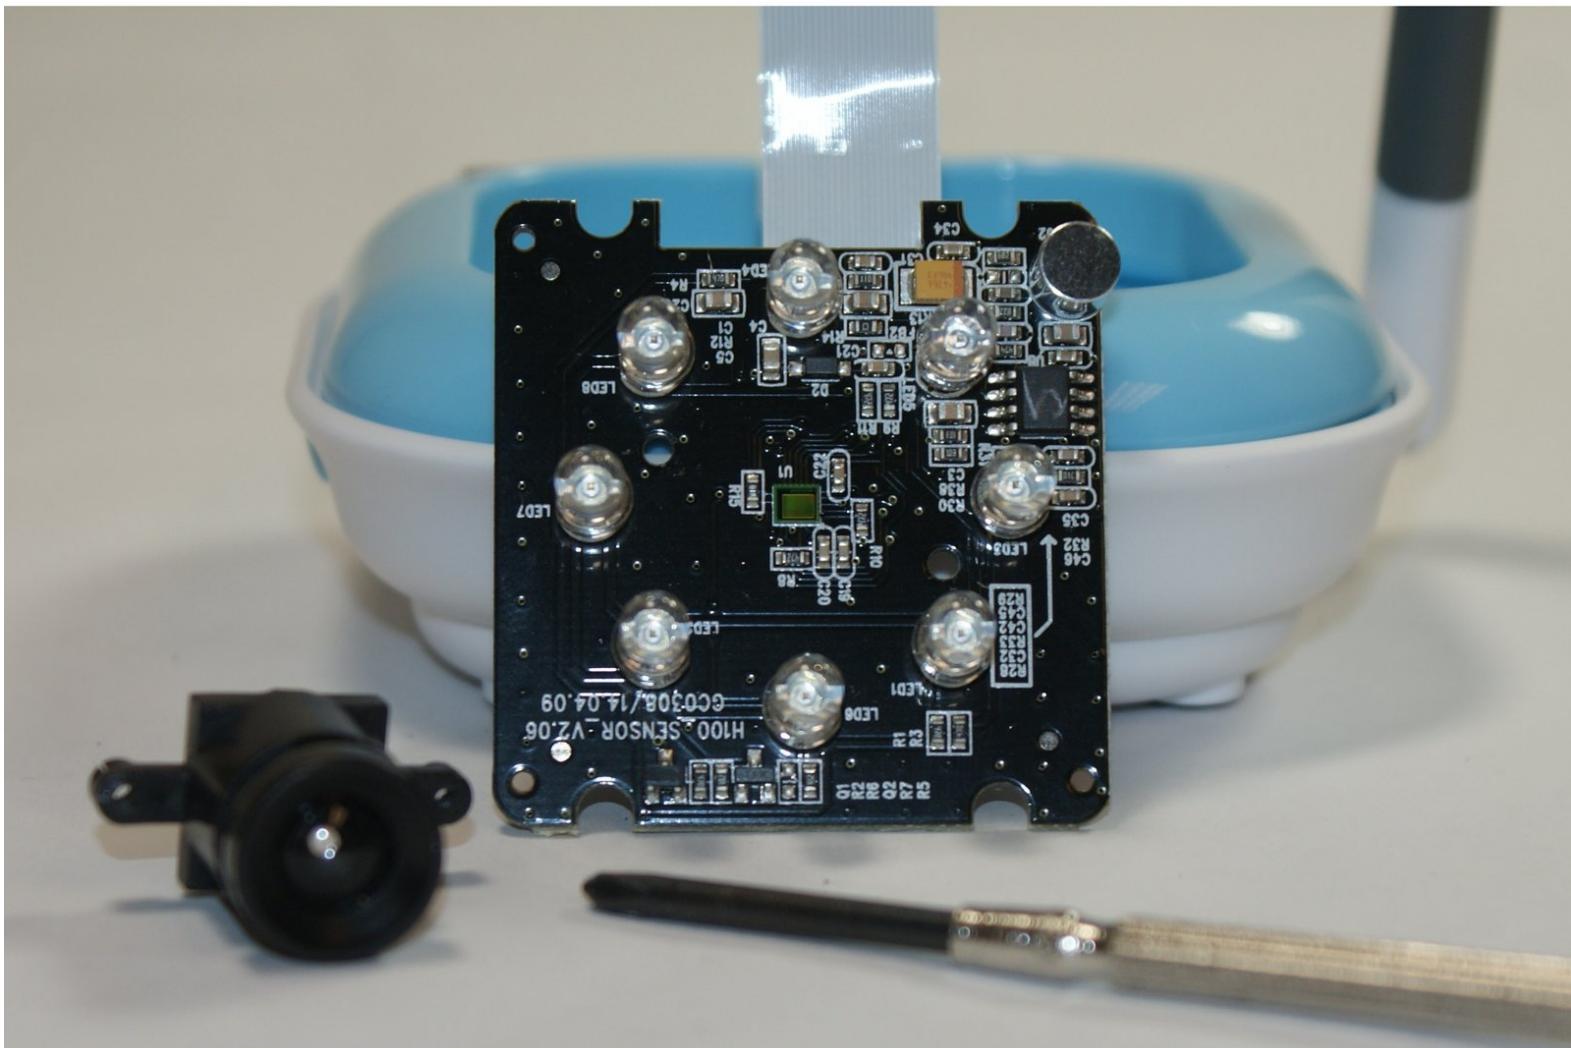

Infant Optics DXR-5 Camera Lens Replacement

The purpose of this guide is to show the steps required to replace the camera lens of the camera unit for the Infant Optics DXR-5.

Written By: Charles Neal



INTRODUCTION

Ensure that the camera unit is unplugged prior to starting this guide.

Secure screws to avoid losing them.

Screws are small and can pose a possible choking hazard for small children.

TOOLS:



- Phillips #2 Screwdriver (1)

Step 1 — Camera



- Using a Phillips #2 screwdriver, remove the four, 6.0 mm Phillips screws from the back of the camera unit.

Step 2

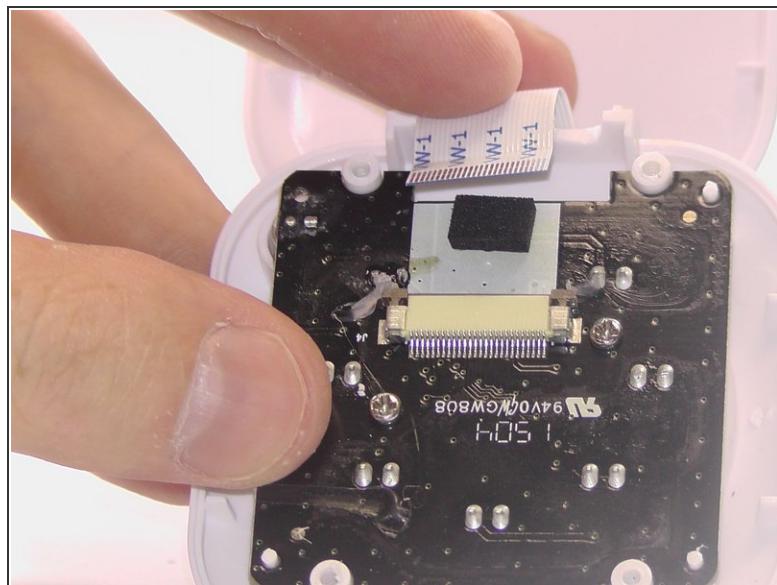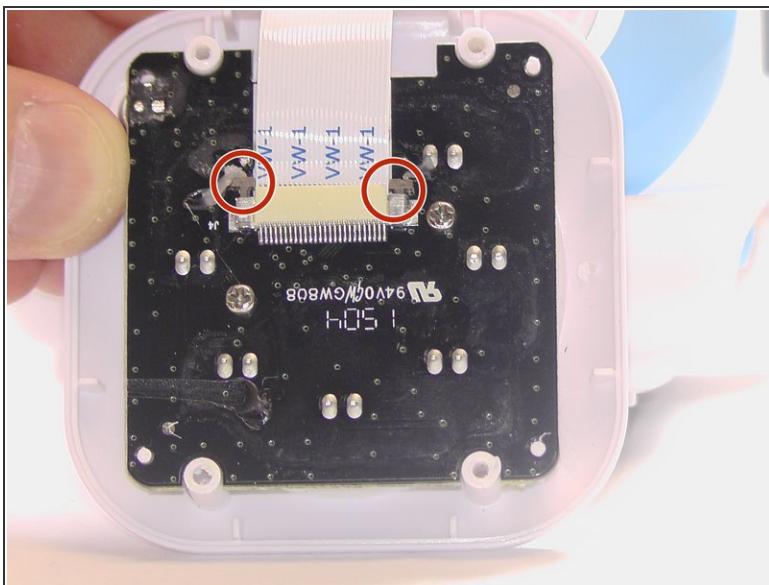


- Pull up on the two beige tabs to the left and right of the ribbon connected to the camera.
- Pull the ribbon straight out from the camera.

Step 3



- Remove the front face plate of the camera unit by carefully pulling it off.

Step 4 — Camera Lens

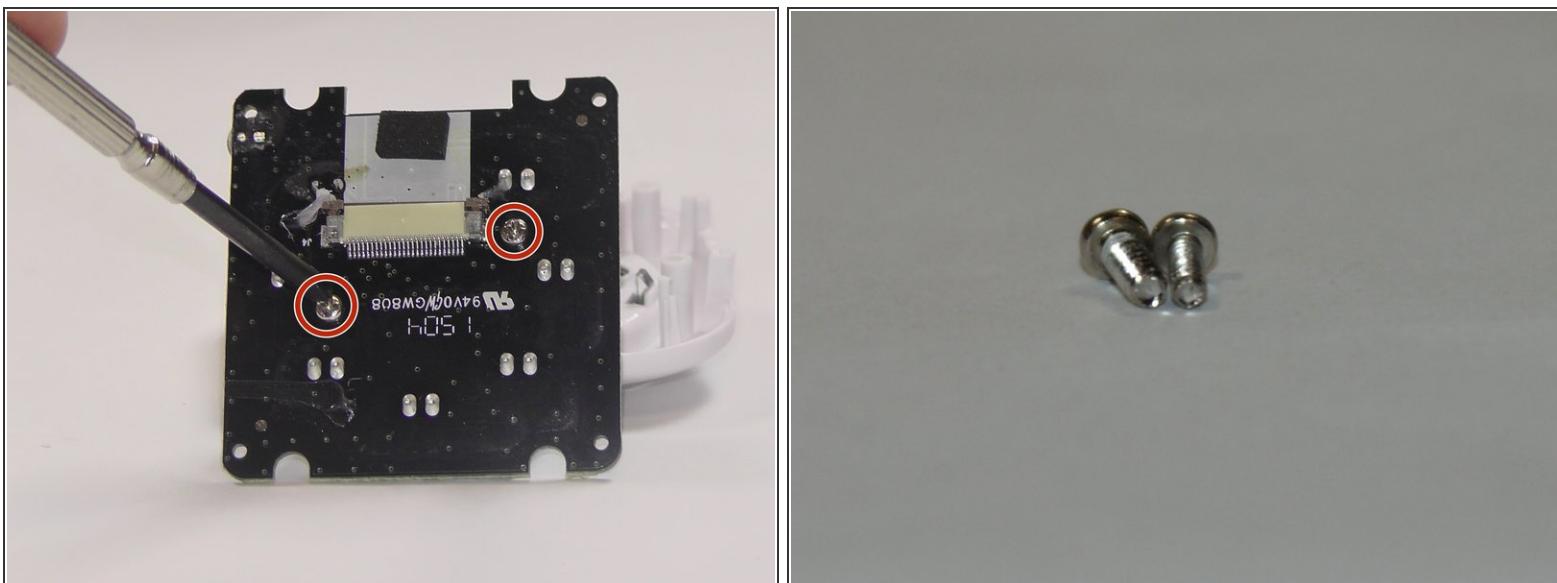

- Using a Phillips #2 screwdriver, remove the two 6.0 mm Phillips screws that hold the camera lens on.

★ These two screws have a different thread than the four screws that secure the camera unit's housing.

This document was generated on 2019-09-30 03:19:24 PM (MST).

To reassemble your device, follow these instructions in reverse order.