



Infant Optics DXR-8 Camera Disassembly

This guide shows you how to disassemble the camera included with the Infant Optics DXR-8.

Written By: Jonathon Dowell



INTRODUCTION

Disassembling of the camera to allow access to the speaker, antenna, and power switch.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Infant Optics DXR-8 Camera Disassembly



- Position the camera with bottom facing toward you.
- Using the plastic opening tool, remove all four rubber ends from the bottom of the camera.

Step 2



- Remove the four 4 mm screws beneath rubber ends using the Phillips #00 screwdriver.

Step 3



- Open the bottom of the camera to reveal the circuit board and speaker.

To reassemble your device, follow these instructions in reverse order.