




Infant Optics DXR-8 Camera Speaker Replacement

Replace a faulty speaker in the camera of the Infant Optics DXR-8.

Written By: Kyle Staudt

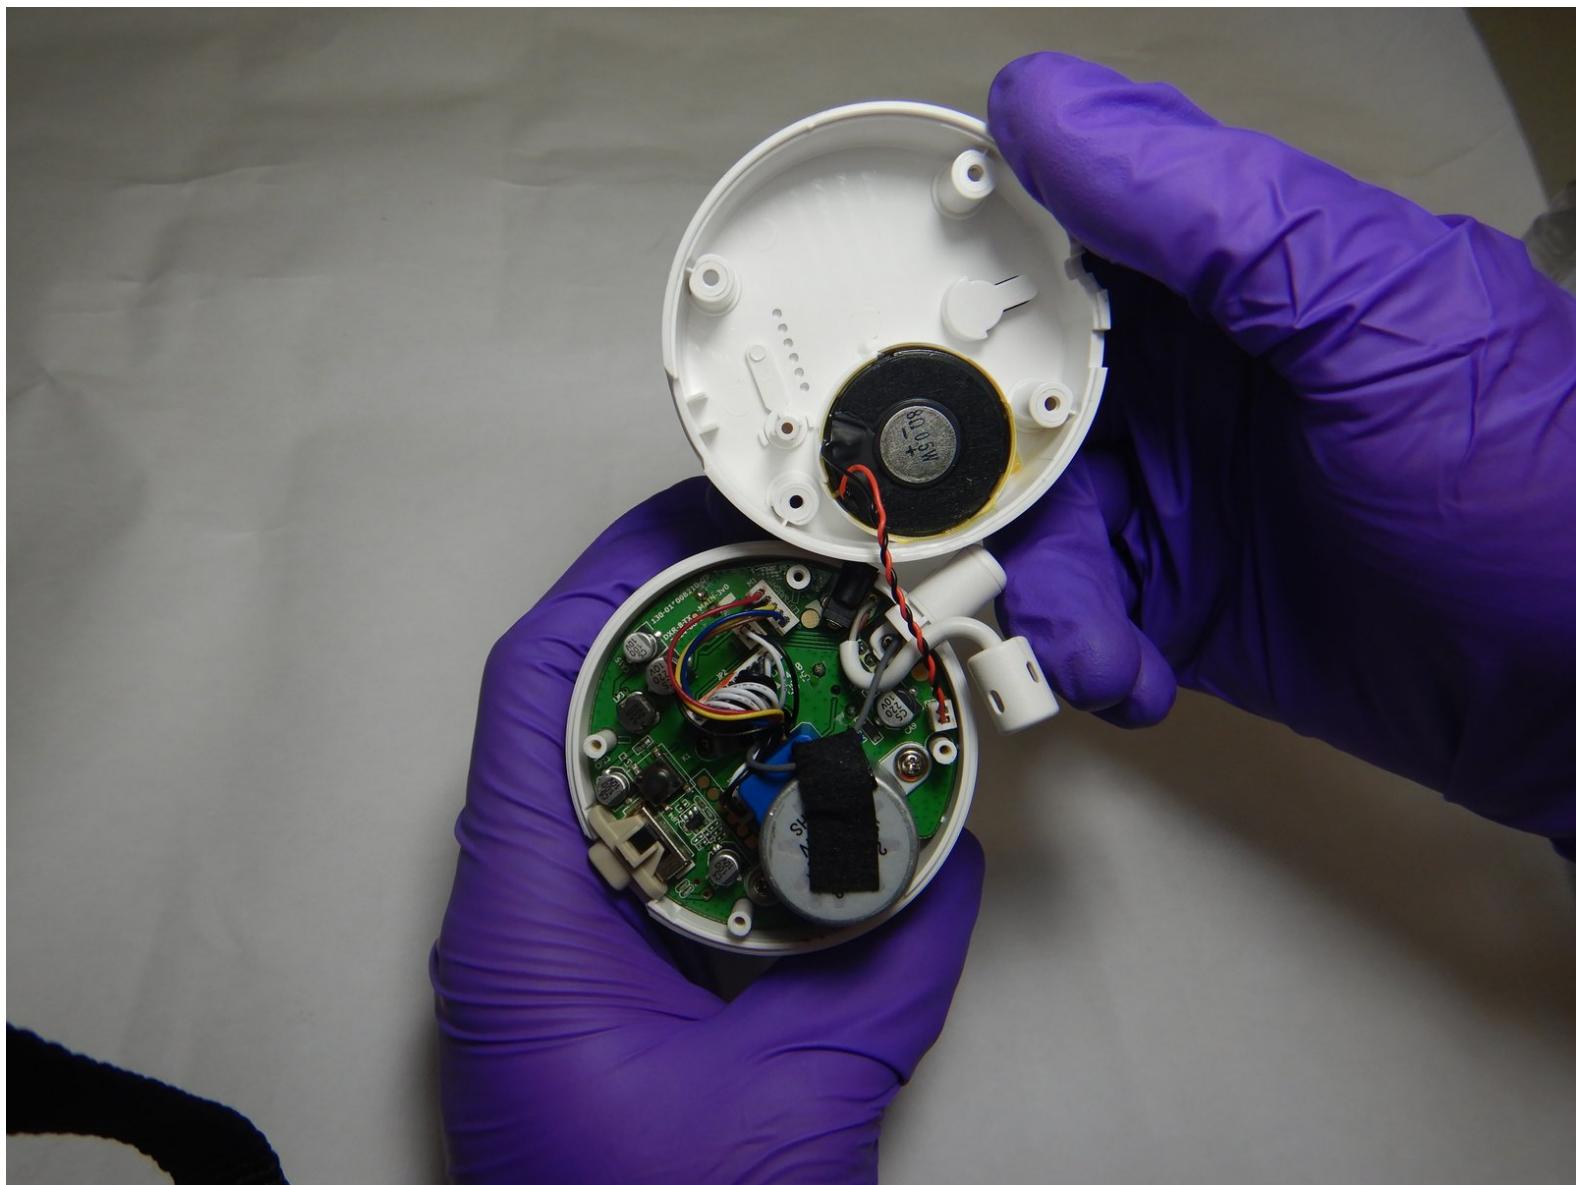

 **TOOLS:**


- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Metal Spudger](#) (1)

Step 1 — Infant Optics DXR-8 Camera Disassembly




- Position the camera with bottom facing toward you.
- Using the plastic opening tool, remove all four rubber ends from the bottom of the camera.

Step 2

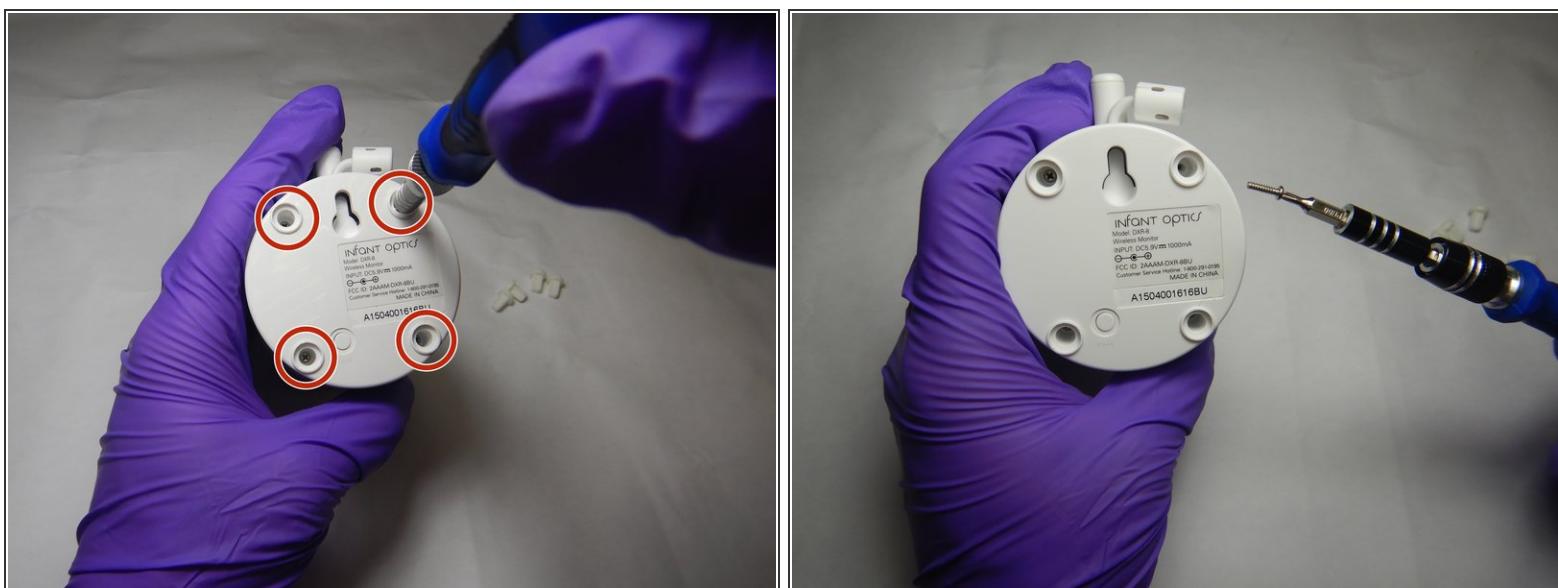


- Remove the four 4 mm screws beneath rubber ends using the Phillips #00 screwdriver.

Step 3

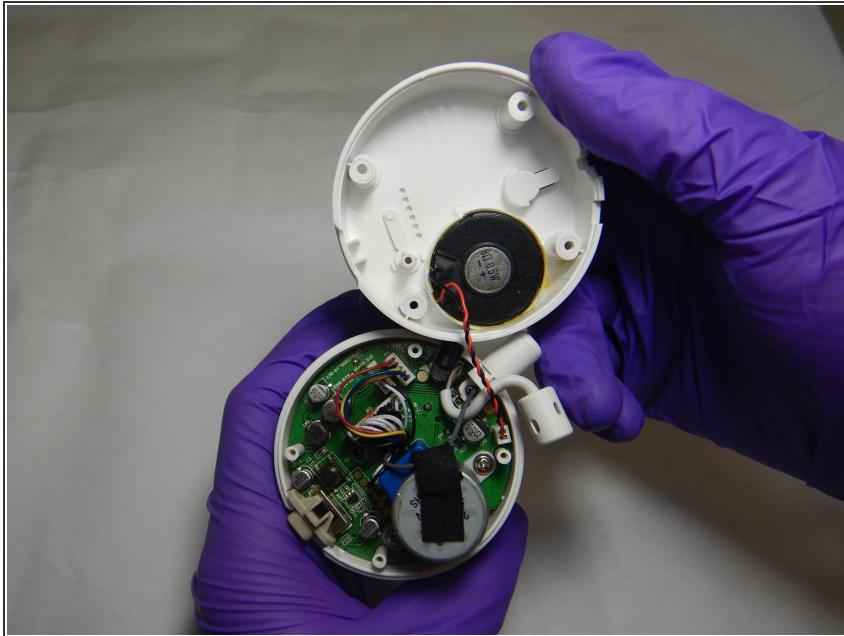


- Open the bottom of the camera to reveal the circuit board and speaker.

Step 4 — Camera Speaker

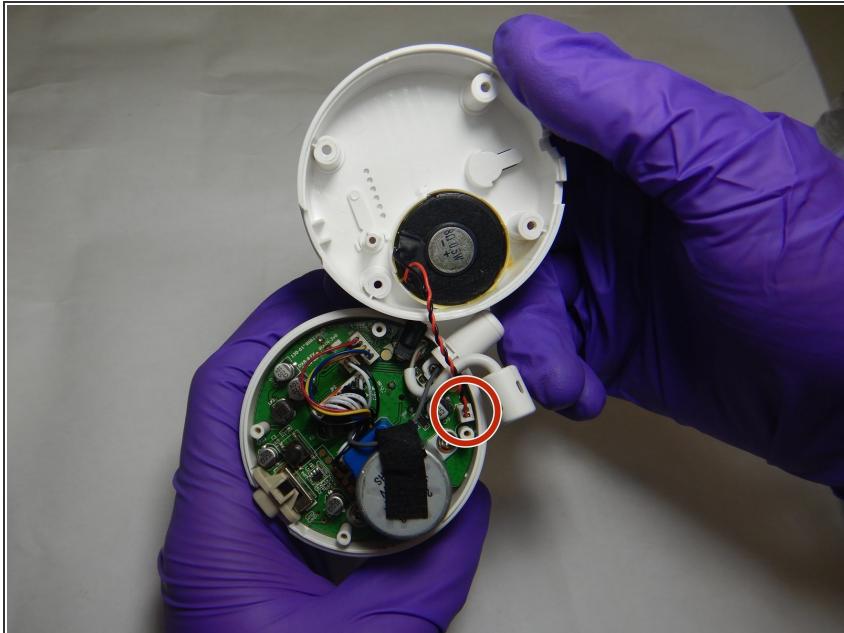

- Disconnect the speaker cable from the circuit board for ease of access.

Step 5

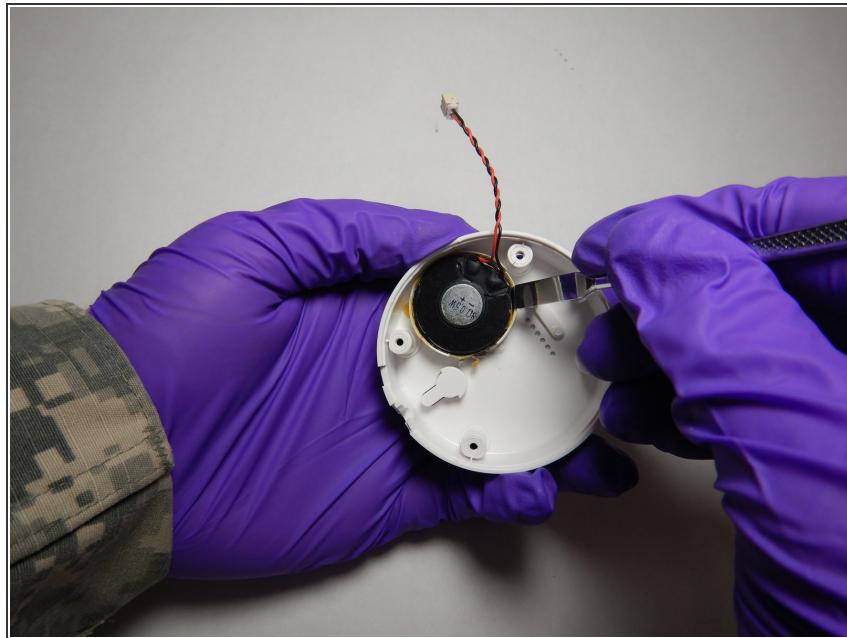

- Lift the speaker from the casing using a metal spudger.
- Place a new 8W speaker in the casing.

To reassemble your device, follow these instructions in reverse order.