


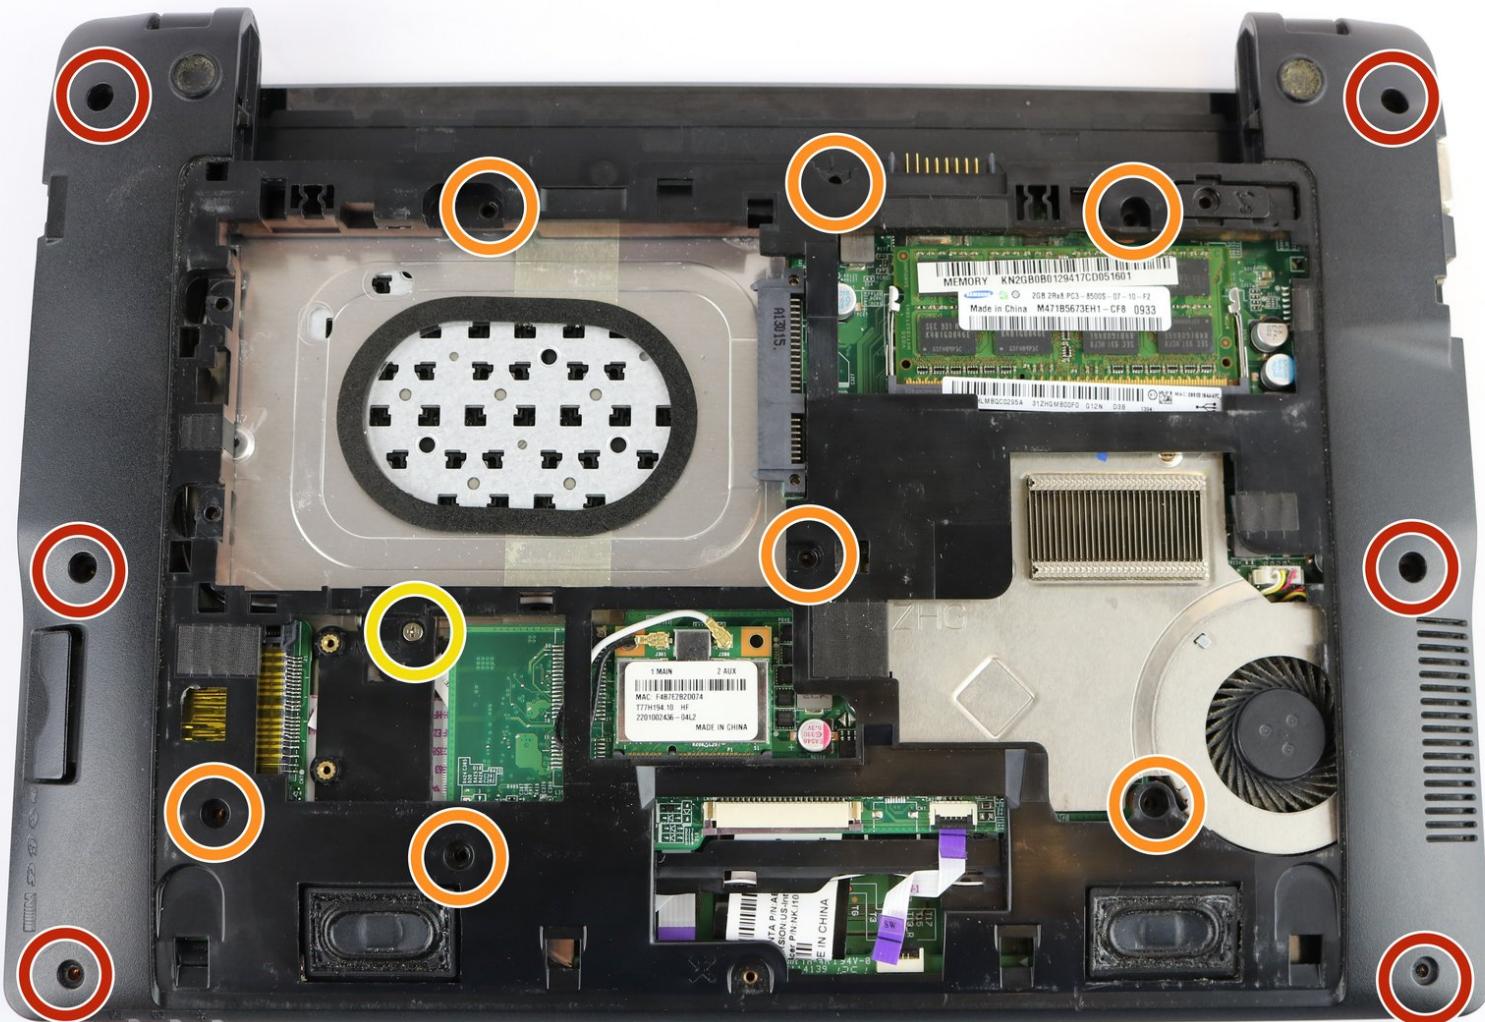

Inner Frame

Pre-requisite for Speakers, Keyboard, and Touchpad replacement guides.

Written By: Joe Kendall



INTRODUCTION

In order to access the core components of the Acer Aspire One 725-0845, you will need to remove the inner frame, detailed here.

TOOLS:


- [Spudger \(1\)](#)
- [JIS Driver Set \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery




- Ensure the device is powered off by holding down the power button on the top left-hand side.
- On a flat, level surface, flip the device over so that the back-plate is accessible.

Step 2

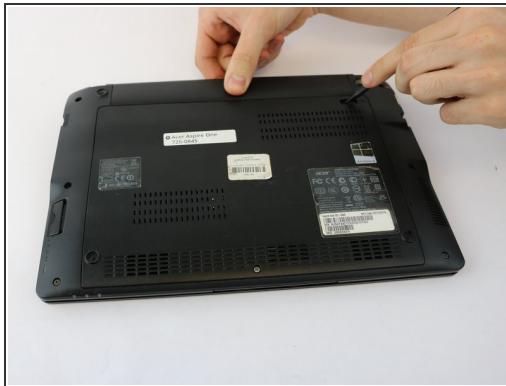


- Using a spudger or any fine-pointed tool, push the release slide away from the center of the device.
- Simultaneously pull the battery out and away from the device.

Step 3 — Back Plate

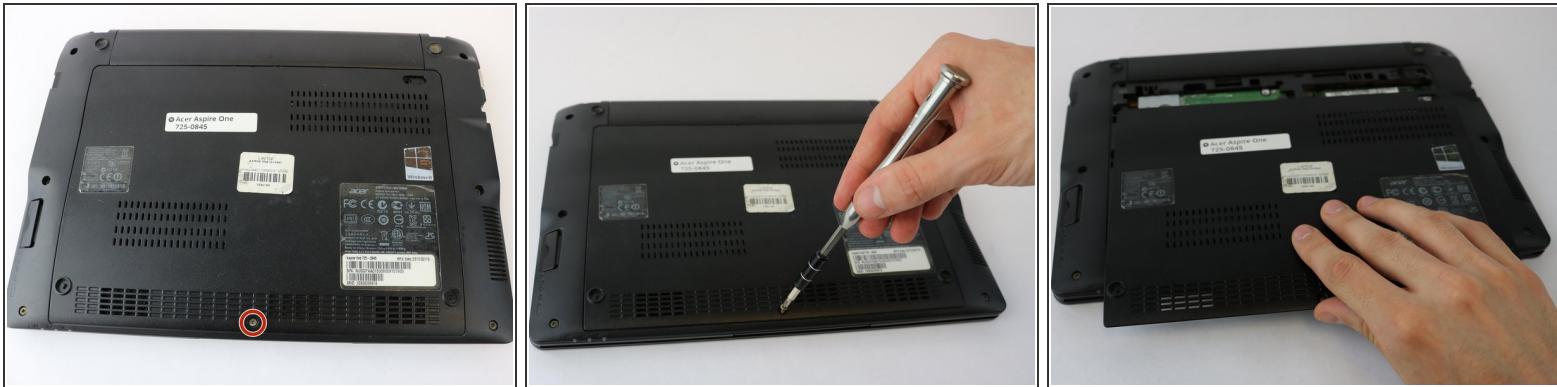

- Using the JIS J1 Screwdriver Bit and Driver, remove the center screw (7.0 mm) from the back-plate.
- Using your hands, slide the back-plate away from the center of the device and remove.

Step 4 — Hard Drive

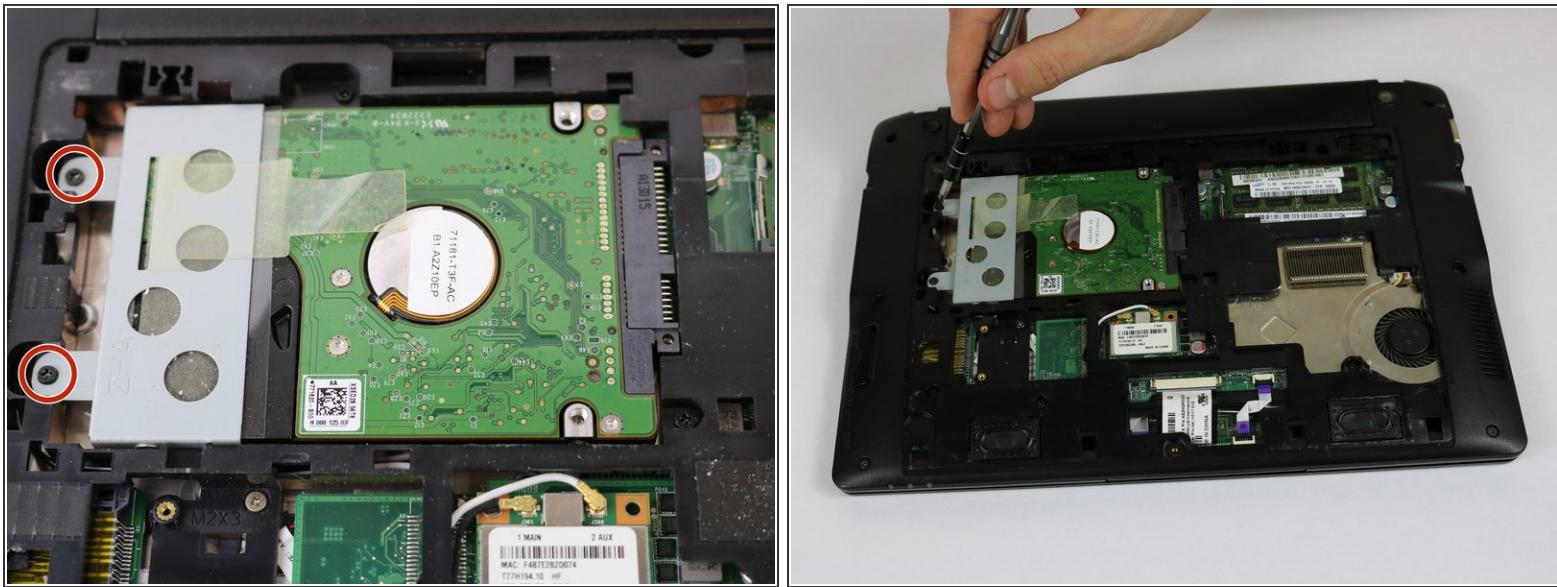

- Using the JIS J1 Screwdriver Bit and Driver, remove the two screws (9.0 mm) from the outward side of the hard drive.

Step 5




- Using your hand, slide the hard drive away from the center of the device until it disconnects from the motherboard.
- Carefully lift the outward side of the hard drive and place the drive on a clean, non-magnetic surface.

Step 6 — Inner Frame



- Using the JIS J1 Screwdriver Bit and Driver, remove the six outside screws (7.0 mm).
- Using the JIS J1 Screwdriver Bit and Driver, remove the seven inside screws (8.0 mm).
- Using the JIS J1 Screwdriver Bit and Driver, remove the one inside screw (3.0 mm).

Step 7

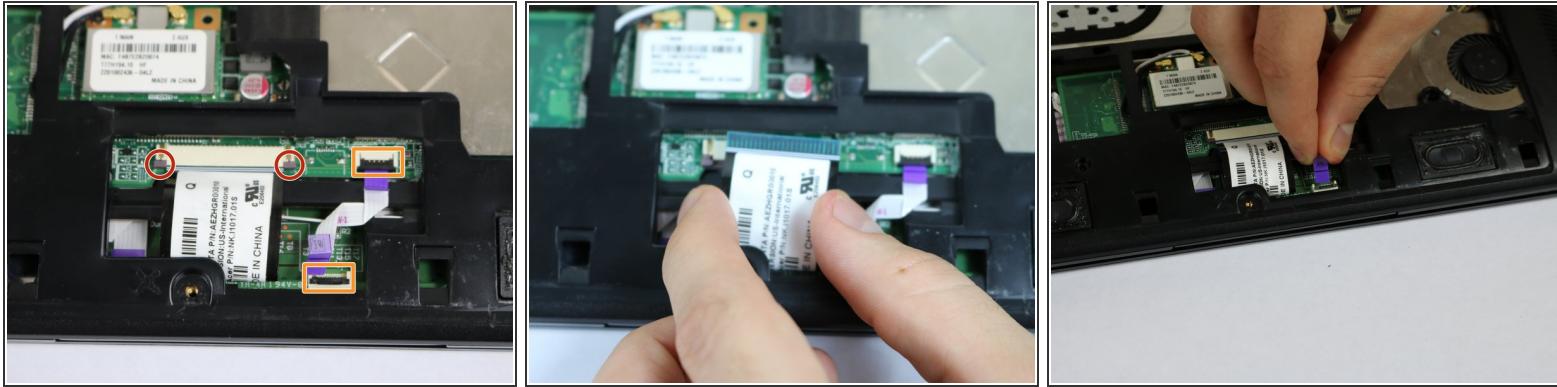

- Using your hands, slide the brown release tabs for the keyboard connection away from the center of the device.
- Gently remove the keyboard connection by pulling away from the center of the device.
- Lift the black locks for the touchpad connections into the upward position.
- Gently remove the touchpad connections by pulling the purple tabs away from the locks.

Step 8



- Flip the device over and open it.
- Using the plastic opening tools, remove the cover/palm rest from the frame of the device.

To reassemble your device, follow these instructions in reverse order.