



Insignia 6-Quart Pressure Cooker Food Pot Replacement

Remove and replace the inner pot.

Written By: Savannah Webb



INTRODUCTION

If food is not cooking properly, the inner pot may need to be removed and cleaned or replaced and re-inserted correctly. This guide will show how to replace the inner pot.

Step 1 — Inner Pot



- Remove the lid from the pressure cooker's base.

Step 2



- Lift the silver inner pot out of the pressure cooker base.
- ⓘ Once the inner pot is completely removed, it can be cleaned or replaced.

To reassemble your device, follow these instructions in reverse order.