


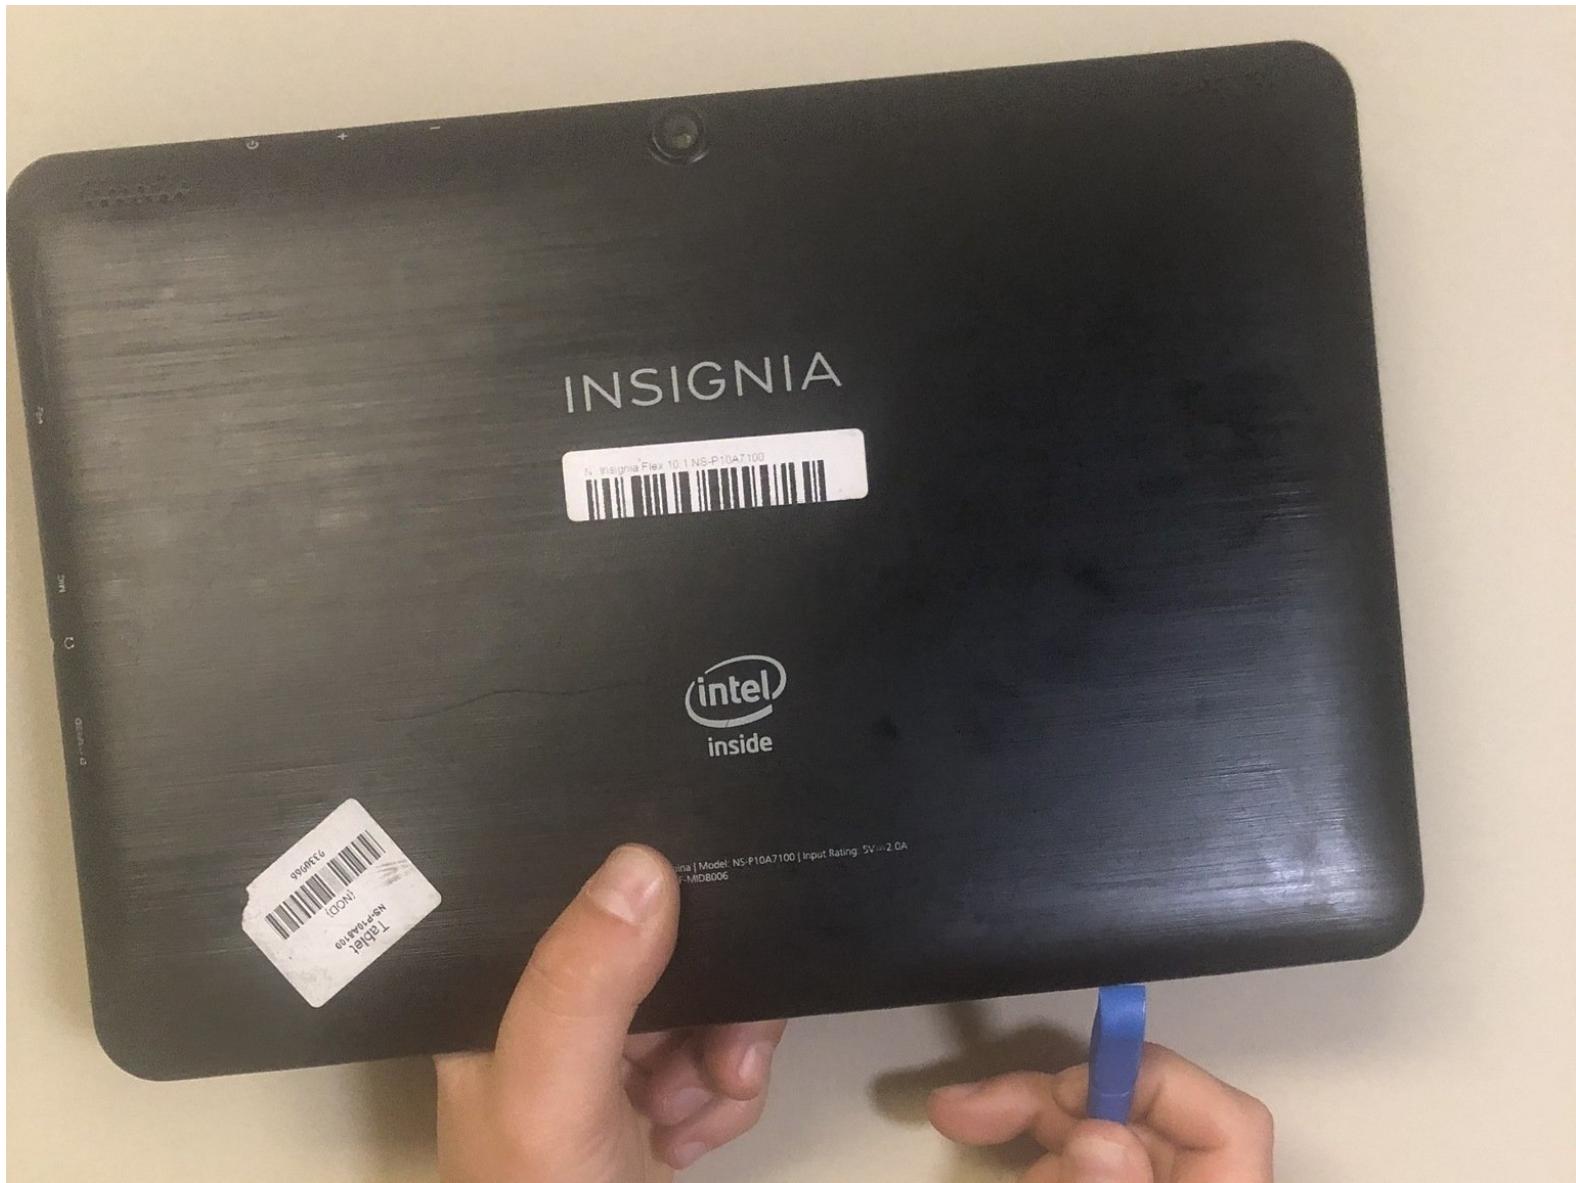

Insignia Flex 10.1 NS-P10A7100 Battery Replacement

How to replace the battery of an Insignia Flex 10.1 NS-P10A7100.

Written By: Hannah



INTRODUCTION

For instructions on how to replace the battery of your Insignia Flex 10.1 NS-P10A7100, follow this guide.

TOOLS:


- [iFixit Opening Tools \(1\)](#)

Step 1 — Battery





- Use the blue iFixit opening tool to remove the backing of the device.
- Wedge the tool in the crease between the device backing and screen.

Step 2

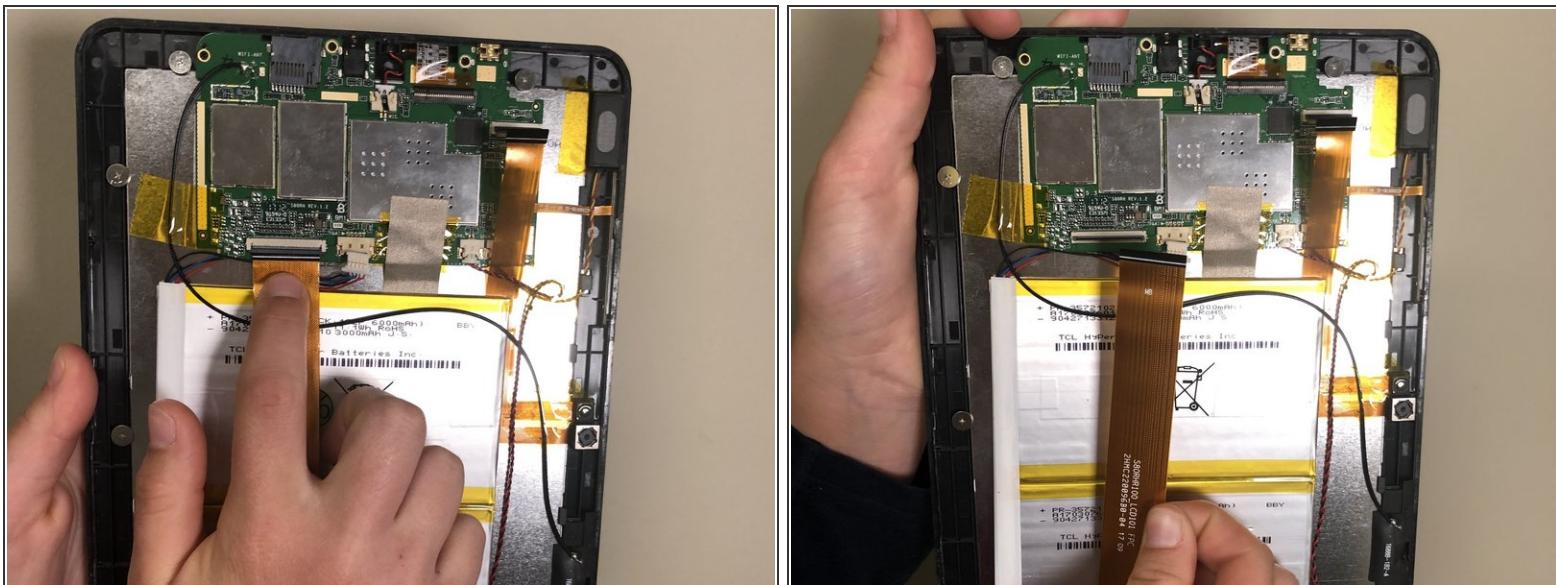

- Disconnect the larger ribbon that runs along the top of the battery and connects to the motherboard.
- Lift up the connector by pulling it up with your fingernail. The ribbon will then be released and you can detach it.

Step 3

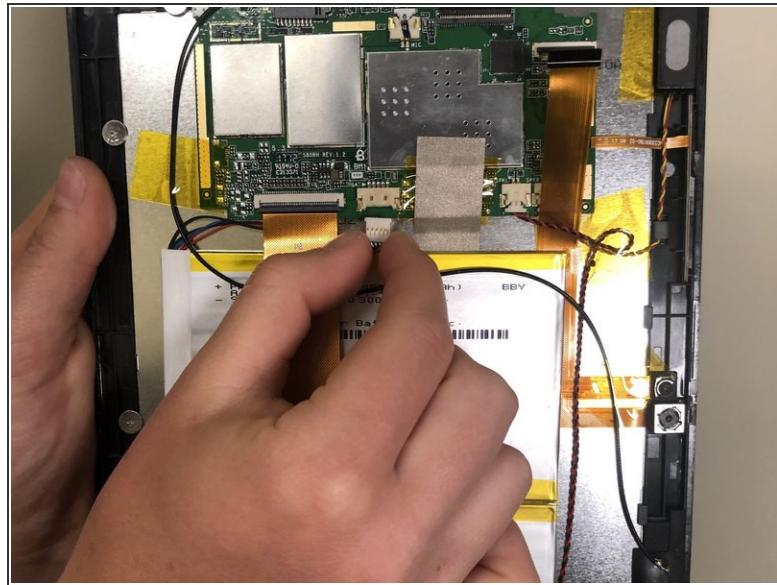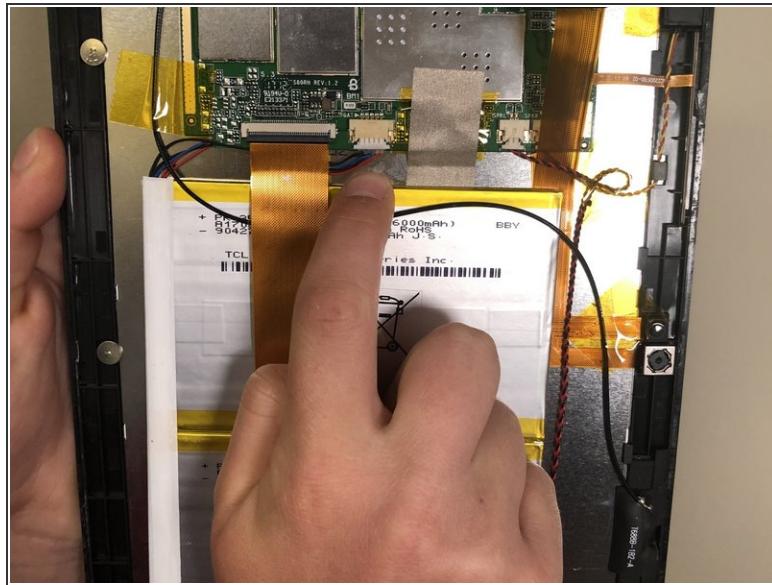

- Detach the five colored wires that connect the battery to the motherboard.
- Use two fingers and place one on either side of the white plastic encasing the wires.
- Pull on this piece to release it from the motherboard.

i Now the battery is detached from the motherboard.

Step 4



- ① The battery is now only connected to the device by the glue on the bottom.
- Use the iFixit opening tool to wedge the battery off of the device. You will have to use some force to pry the battery off of the device.
- ① Now that your battery is removed it is ready for replacement.

To reassemble your device, follow these instructions in reverse order.