



# Insignia Ice Maker NS-IMP26SS7 Drain Plug Replacement

Replace Drain Plug on Insignia Ice Maker

Written By: Evan Taylor



## INTRODUCTION

How to replace the Drain Plug on Insignia Ice Maker.

### TOOLS:

- [Phillips 3 Screwdriver \(1\)](#)

## Step 1 — Drain Plug



- Remove the screw fixing the plug to the Ice Maker.
- Remove the Drain Plug.

To reassemble your device, follow these instructions in reverse order.