



# Insignia NS-B4111 External Antenna Replacement

Prerequisite Only

Written By: Kristin Yoshioka



 **TOOLS:**

- 64 Bit Driver Kit (1)

## Step 1 — External Antenna



- Set the boombox upright. Remove the 4mm screw and the two 6mm washers with the Phillips PH1 screwdriver.
- Remove the external antenna.

To reassemble your device, follow these instructions in reverse order.