




# Insignia NS-CLOPP2 Batteries Replacement

This guide will show you how to remove and replace the batteries of the Insignia NS-CLOPP2 Digital Alarm Clock and Radio.

Written By: Dilini De Silva




## Step 1 — Batteries

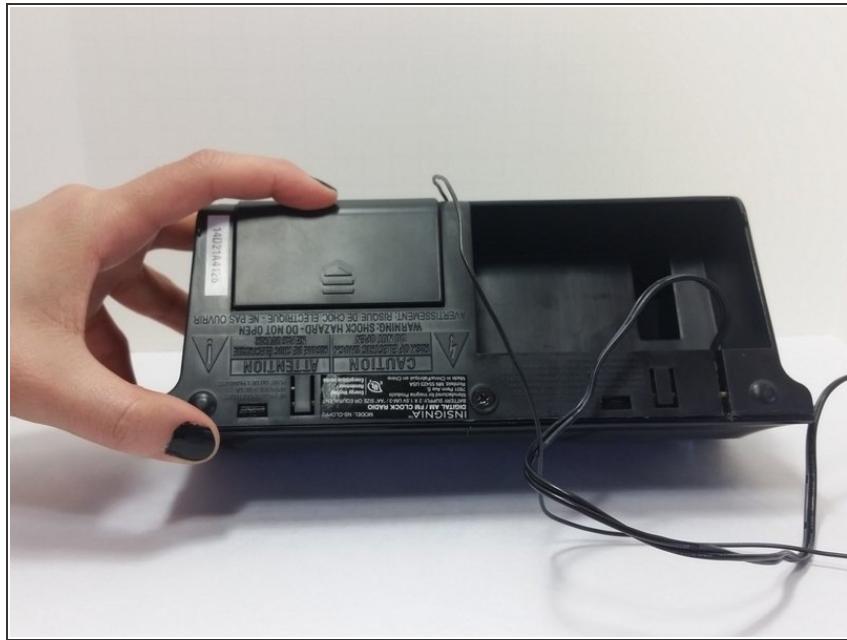


- Flip the clock over to expose battery cover shown in top left corner.

## Step 2

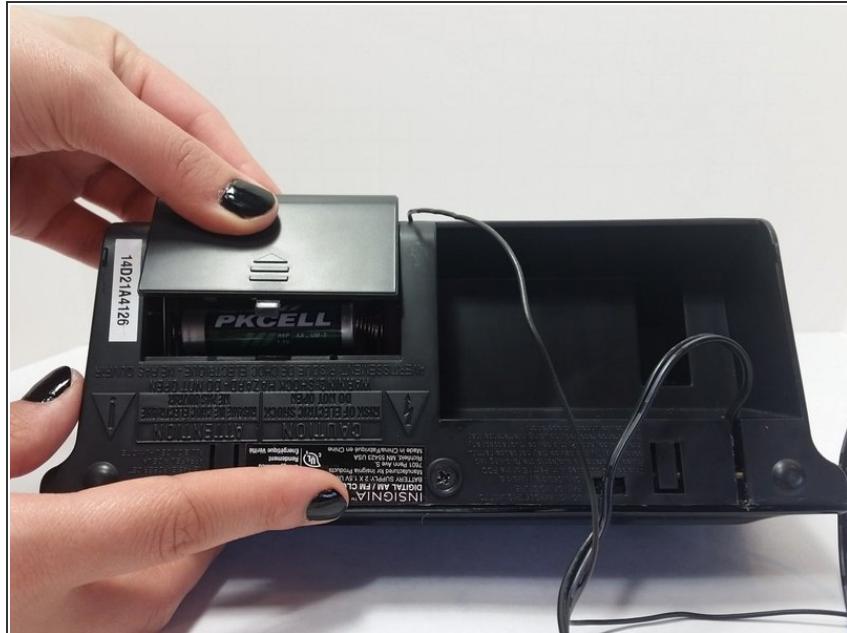

- Remove battery cover by gripping the grooves with thumb and sliding towards the direction the arrow is pointing.

## Step 3

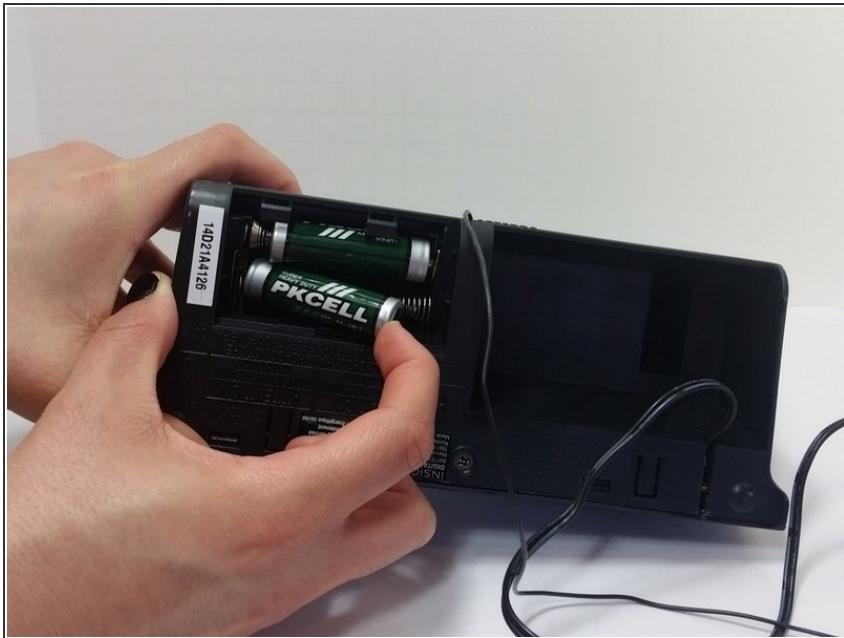

- Carefully push battery towards spring, creating a space to grab the opposite end of the battery and pull it out. Safely discard the old batteries.

## Step 4



- Insert new batteries by matching the (+) and (-) symbols on the battery with the same symbols on the device battery cavity. Push each battery in first by pressing towards the spring and snapping into place on the opposite end.

## Step 5



- Once the batteries have been replaced, slide the battery cover on by pushing the cover downward until it clicks into place.

To reassemble your device, follow these instructions in reverse order.