


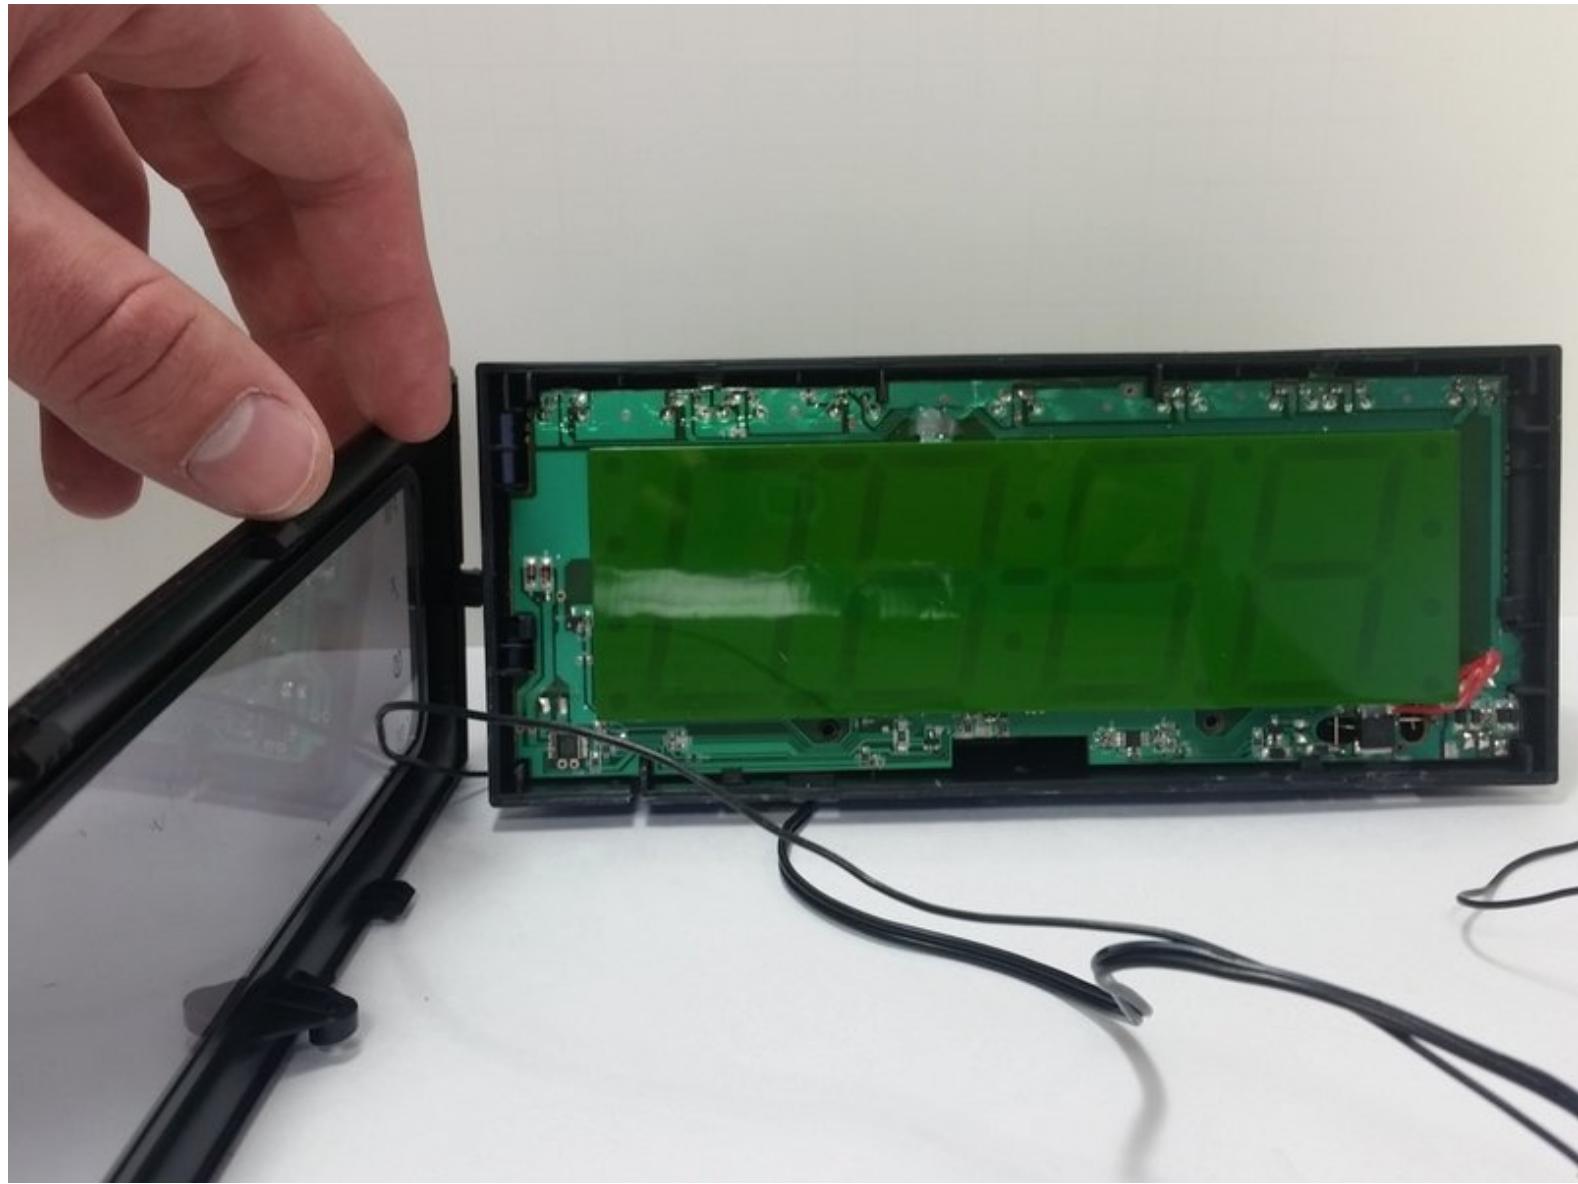

Insignia NS-CLOPP2 Motherboard Replacement

This guide will show viewers how to remove the motherboard from the Insignia NS-CLOPP2 Digital Alarm Clock and AM/FM Radio.

Written By: Dilini De Silva




This document was generated on 2019-09-26 02:51:24 PM (MST).

 **TOOLS:**


- [iFixit Opening Tools \(1\)](#)

Step 1 — Motherboard

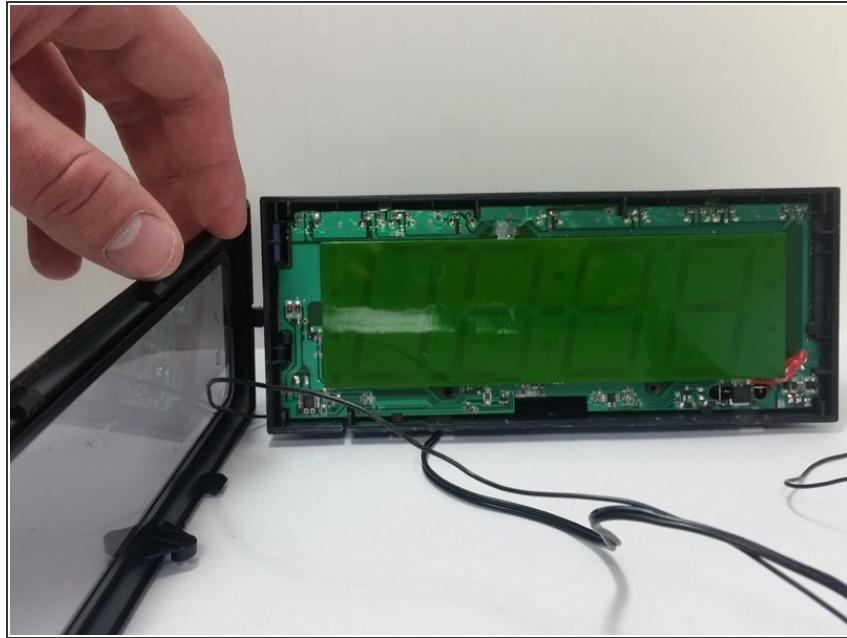


- First, remove the front screen. (See prerequisite screen removal guide.)

Step 2

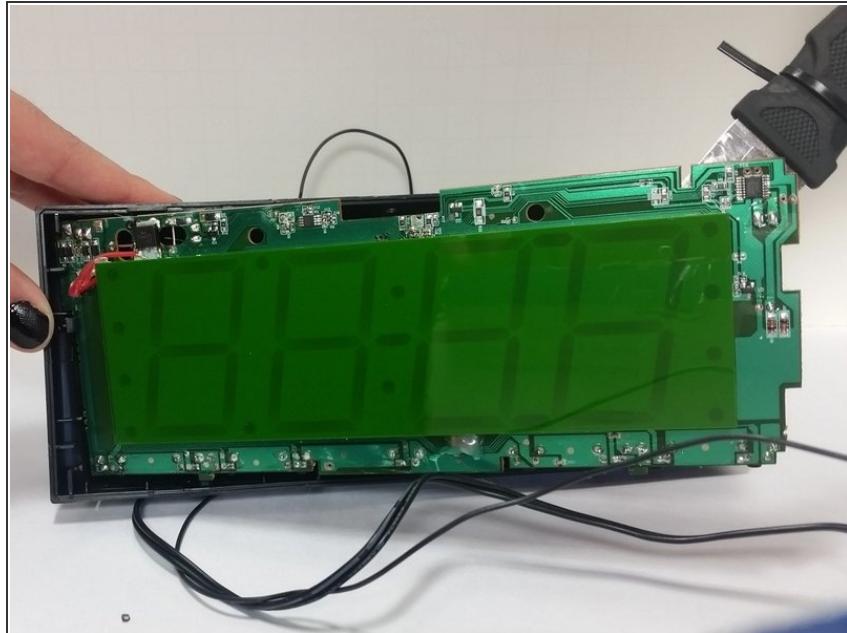


- Use the plastic opening tool to gently pry the motherboard forward and away from the rest of the device.

Step 3

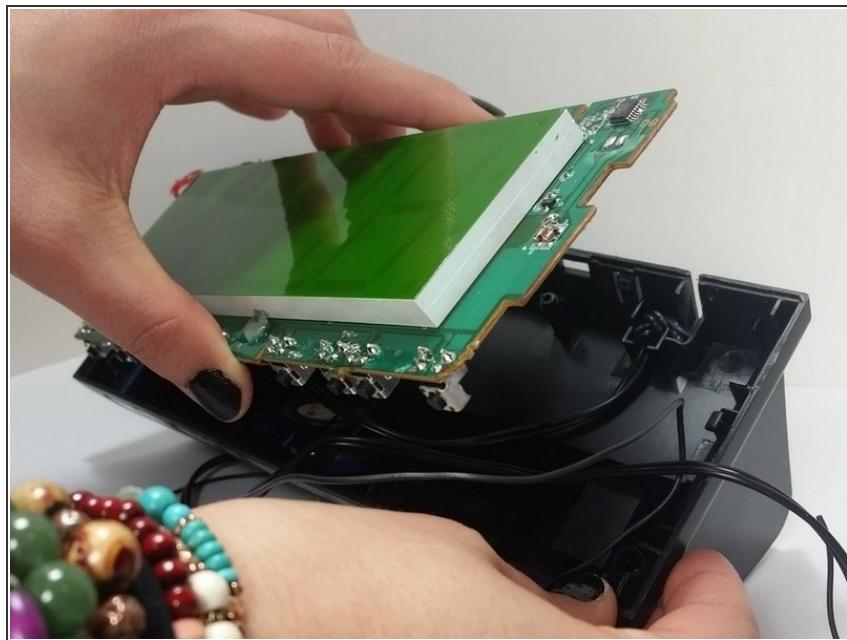

- Gently lift the motherboard up and out, making sure that you don't disassemble any of the wires in place by pulling too hard.

Step 4

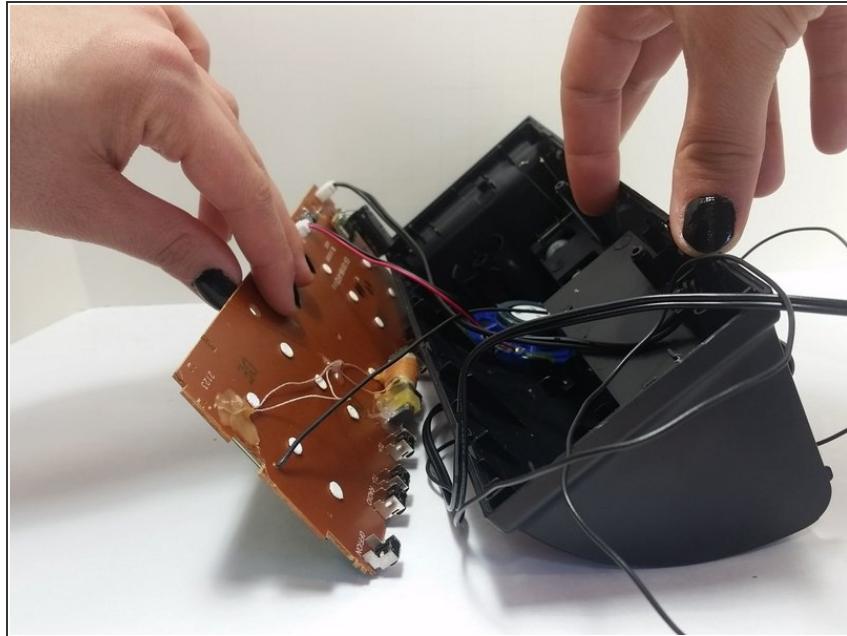

- To fully remove the motherboard from the clock, use wire cutters to carefully sever the connections between the motherboard and the wires attached.
- To reassemble your device, follow these instructions in reverse order.

To reassemble your device, follow these instructions in reverse order.