



Insignia NS-DS9PDVD15 Screen Replacement

This guide shows how to replace the screen for the Insignia NS-DS9PDVD15.

Written By: Johnny Rozo



INTRODUCTION

This guide shows how to replace the screen for the Insignia NS-DS9PDVD15.

TOOLS:

- [JIS #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

Step 1 — Bottom Cover



- Turn the power off. Slide the power button to OFF.

Step 2



- Unplug AC adapter from car cigarette lighter.

Step 3



- Make sure there is no DVD or CD in the disc tray

Step 4



- Unscrew the nine 9mm screws with a JIS #000 screwdriver.

Step 5



- Pry off back panel with prying tool, then remove by hand.

Step 6 — Disc Tray




- After the back is removed and the disk tray is loose from the bottom, locate the two, 3 mm screws that hold the tray to the hinge.
- Unscrew them with the JIS #000 screwdriver.

Step 7




- Slide the tray up and off of the hinge completely.

Step 8 — Screen

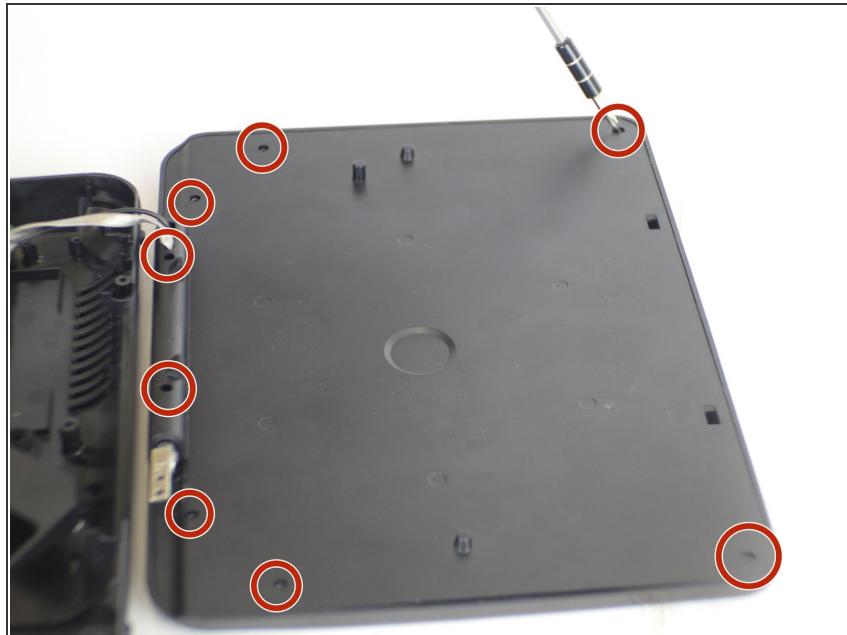



- After the bottom cover and disk tray have been removed, remove the back panel from the top half.
- There are six, 9 mm screws on the bottom cover and 2 screws on the hinge. Remove them with the JIS #000 screwdriver.

Step 9

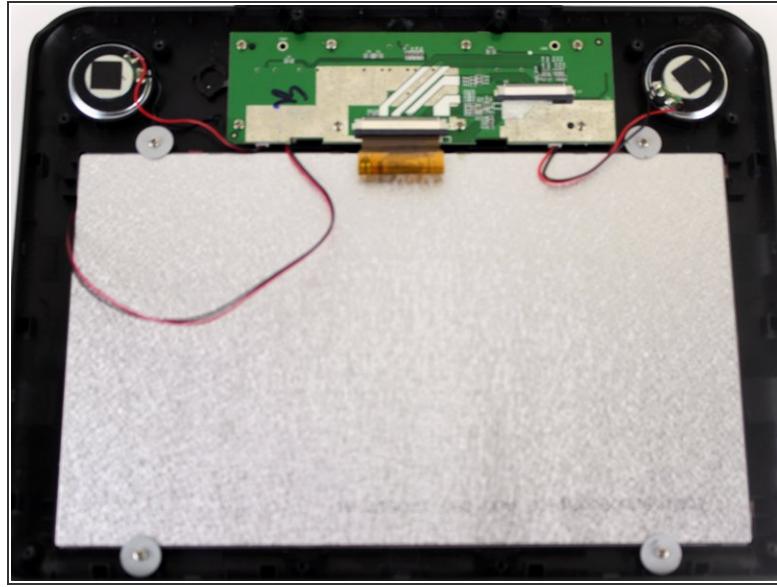


- Once all the screws are removed, pry off the cover with the pry tool.
- (i)* You'll see the PC board, back of the speakers, and the back of the screen.

Step 10

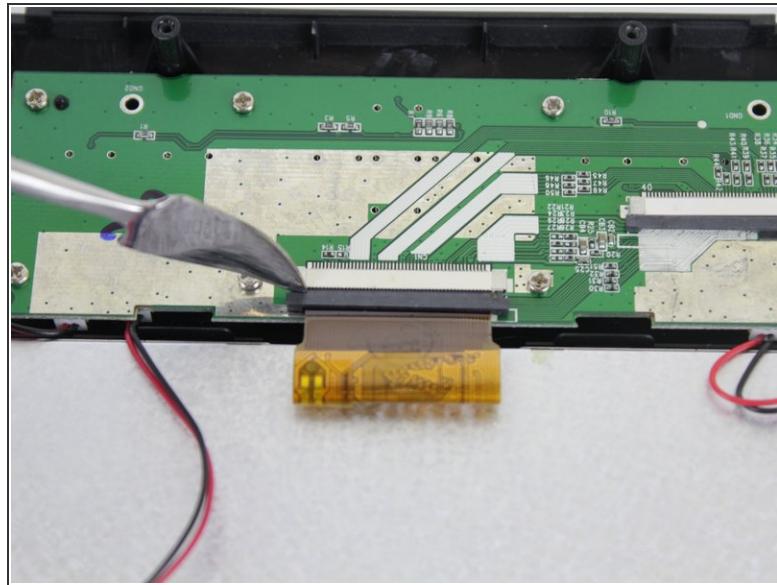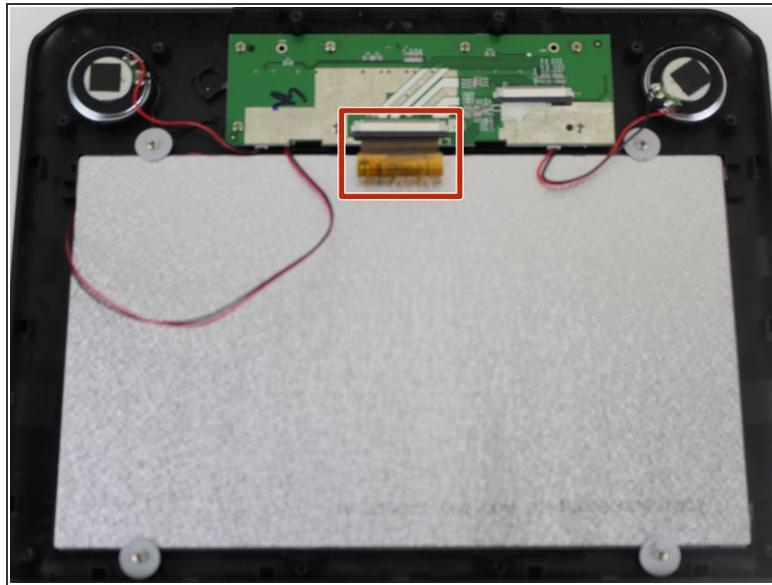


- Remove the ribbon cable carefully with the pry tool.
- First, push out the black portion.

Step 11

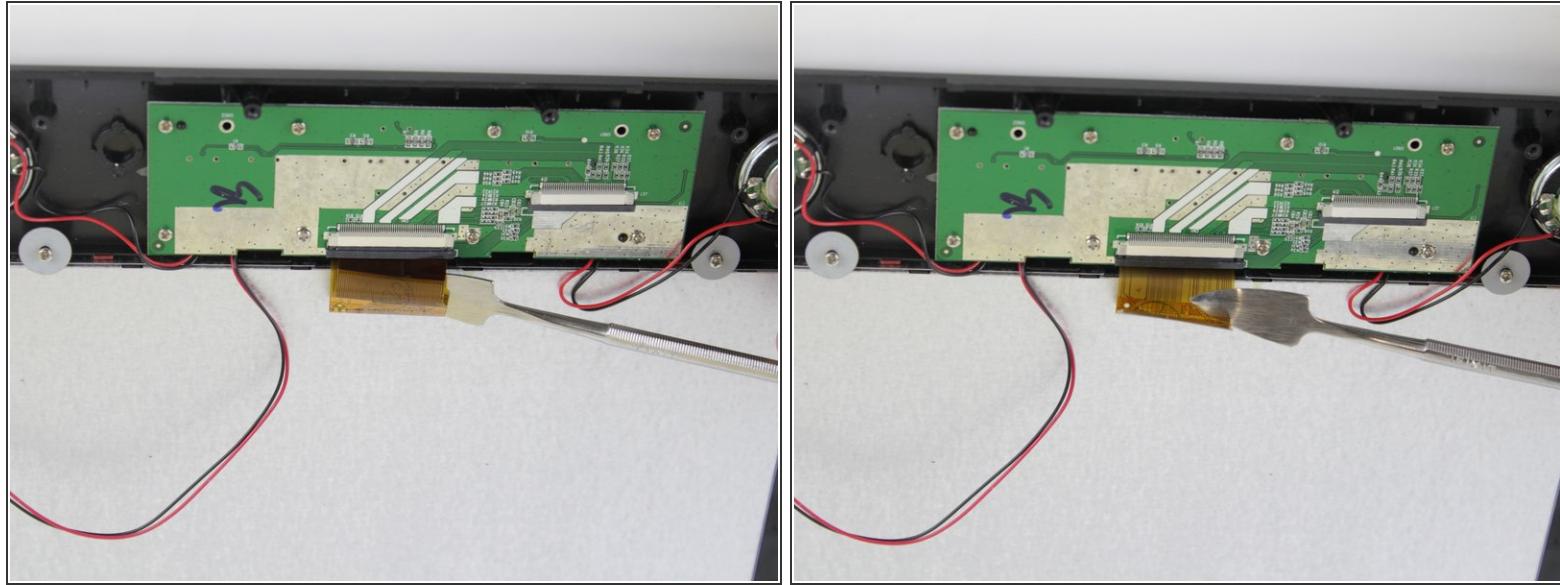


- Next, push out the 'ribbon' with the pry tool.

Step 12

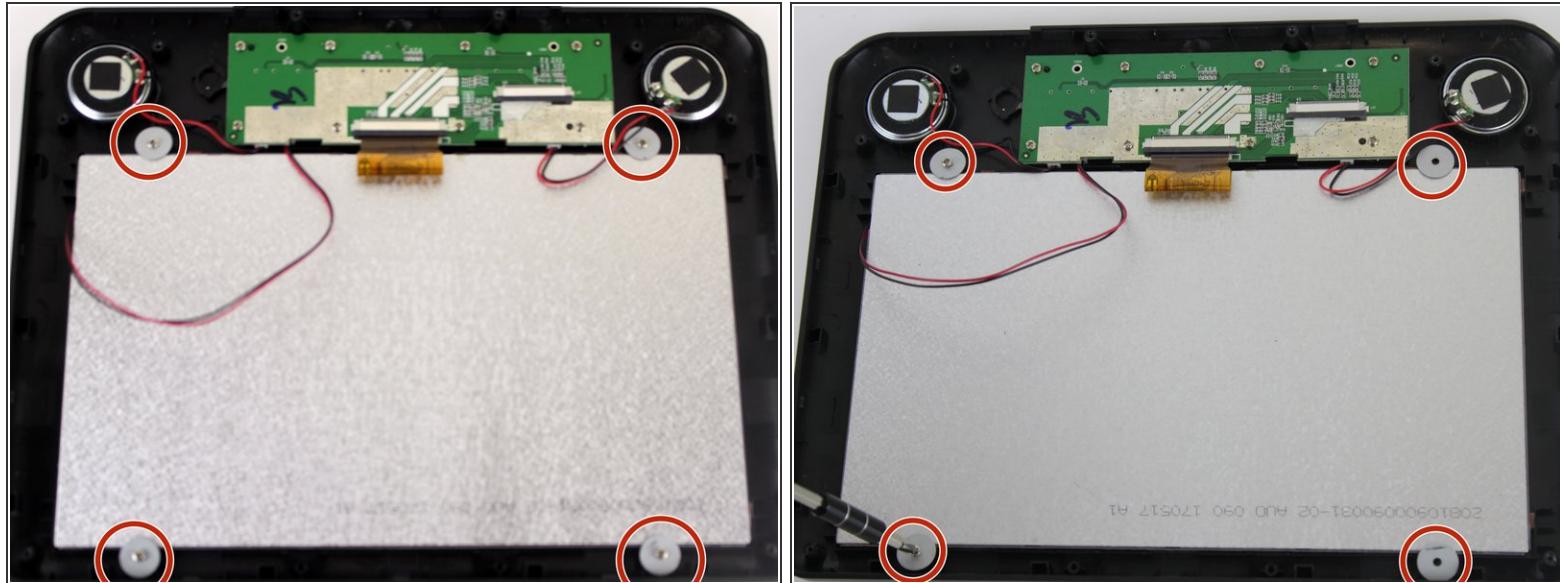

- Unscrew the corners of screen with the JIS #000 screwdriver. There are four, 6 mm screws with washers.

Step 13

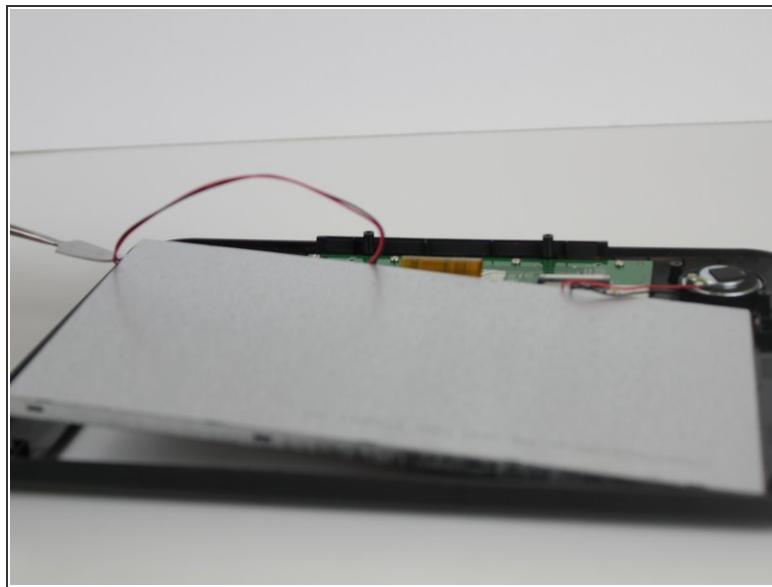

- After the screws and washers are removed, you can lift the screen off with the pry tool.

To reassemble your device, follow these instructions in reverse order.