



Insignia NS-DS9PDVD15 Bottom Cover Replacement

Insignia NS-DS9PDVD15 prerequisite replacement guide.

Written By: Johnny Rozo



INTRODUCTION

This prerequisite guide will explain proper steps to start any replacements safely.

TOOLS:

- [JIS #000 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

Step 1 — Bottom Cover



- Turn the power off. Slide the power button to OFF.

Step 2



- Unplug AC adapter from car cigarette lighter.

Step 3



- Make sure there is no DVD or CD in the disc tray

Step 4



- Unscrew the nine 9mm screws with a JIS #000 screwdriver.

Step 5



- Pry off back panel with prying tool, then remove by hand.

To reassemble your device, follow these instructions in reverse order.