


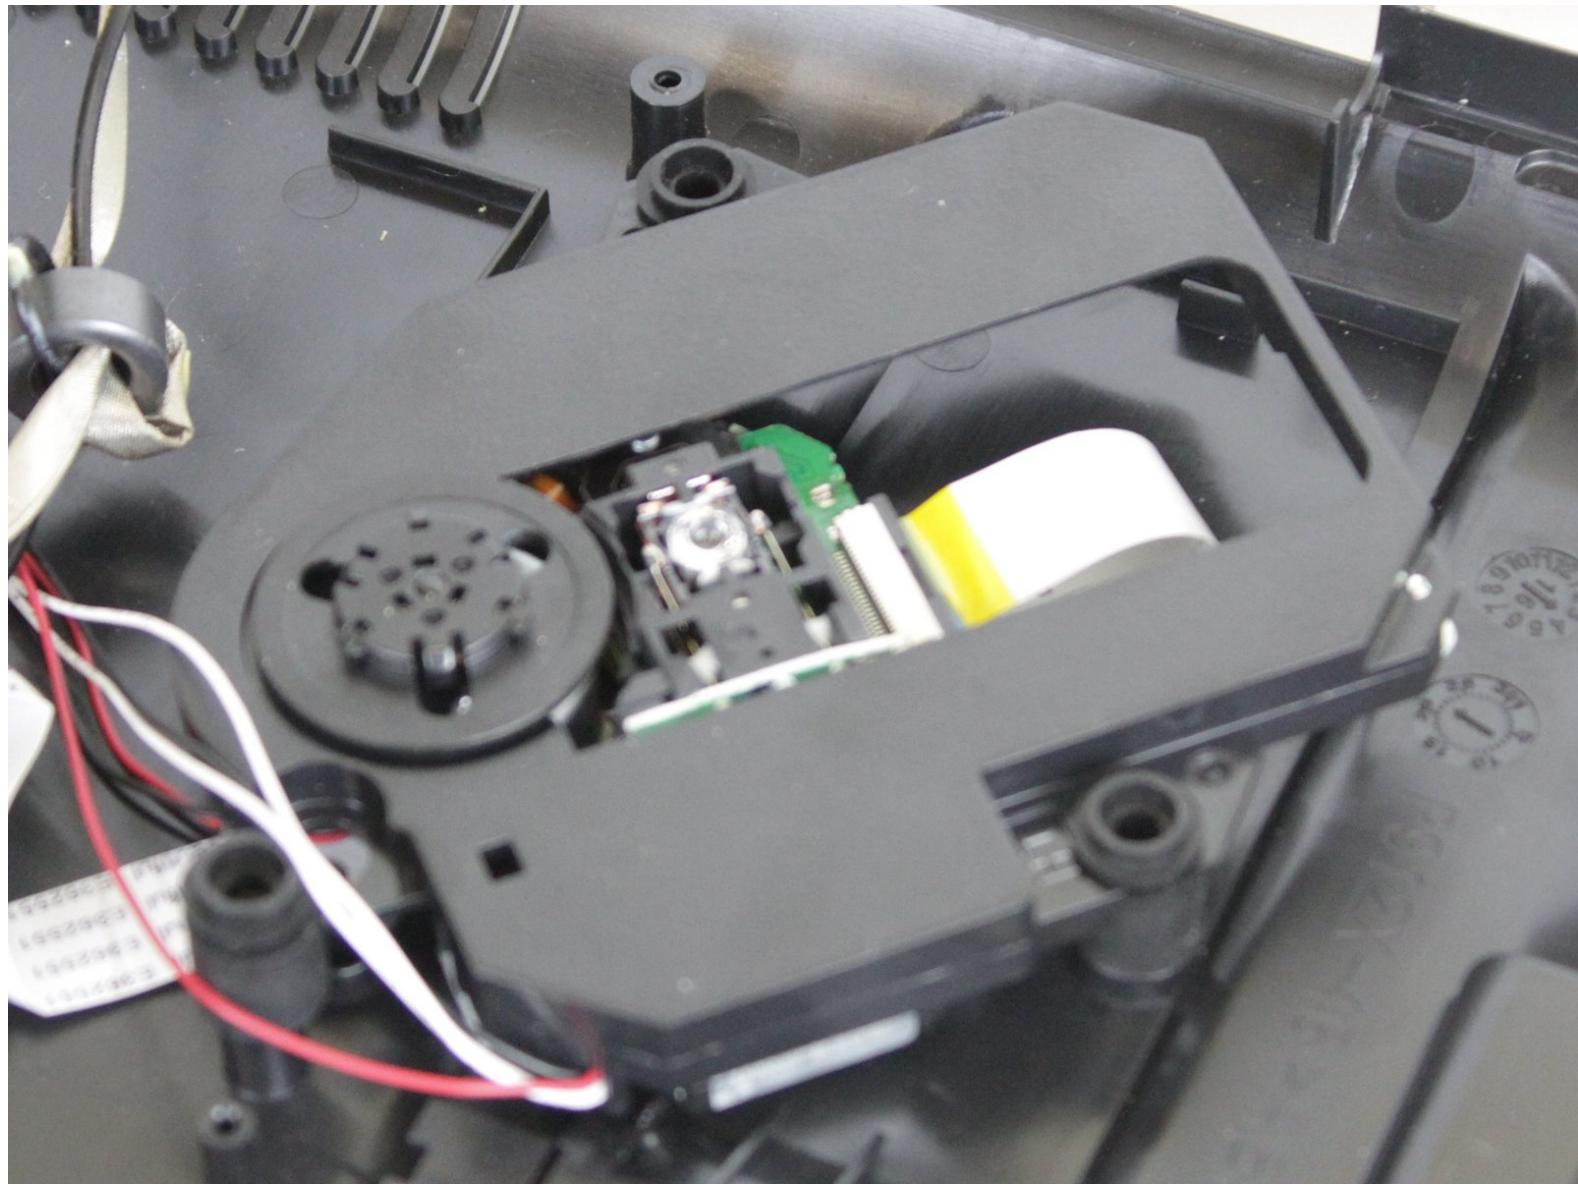

# Insignia NS-DS9PDVD15 Disc Reader Replacement

Step-by-step instructions on how to remove the disc reader from an Insignia NS-DS9PDVD15.

Written By: Johnny Rozo



 **TOOLS:**

- [JIS #000 Screwdriver \(1\)](#)
- [iFixit Opening Tools \(1\)](#)

## Step 1 — Bottom Cover



- Turn the power off. Slide the power button to OFF.

## Step 2



- Unplug AC adapter from car cigarette lighter.

## Step 3



- Make sure there is no DVD or CD in the disc tray

## Step 4



- Unscrew the nine 9mm screws with a JIS #000 screwdriver.

## Step 5



- Pry off back panel with prying tool, then remove by hand.

## Step 6 — Disc Tray




- After the back is removed and the disk tray is loose from the bottom, locate the two, 3 mm screws that hold the tray to the hinge.
- Unscrew them with the JIS #000 screwdriver.

## Step 7




- Slide the tray up and off of the hinge completely.

## Step 8 — Disc Reader

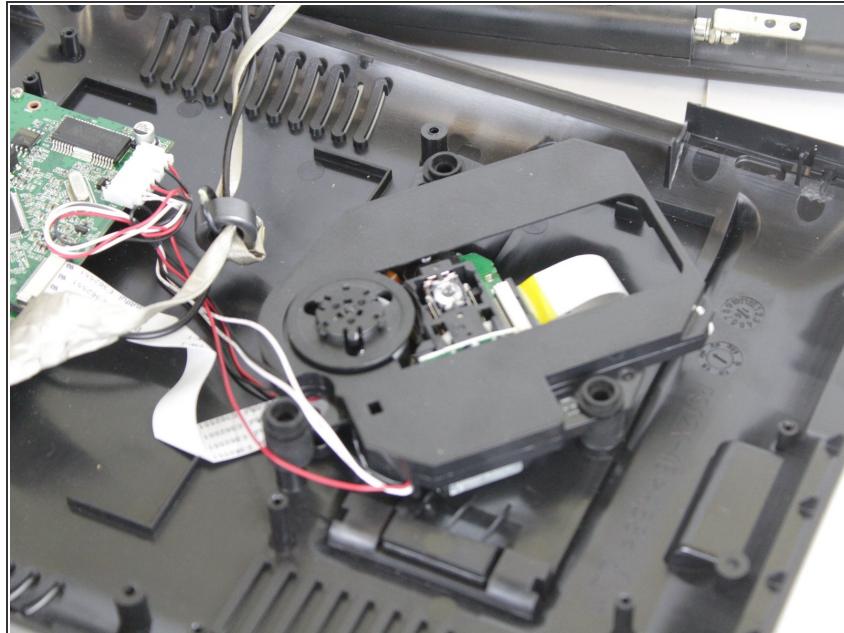


- Locate the disk reader, it will be right under the disk chamber.

## Step 9

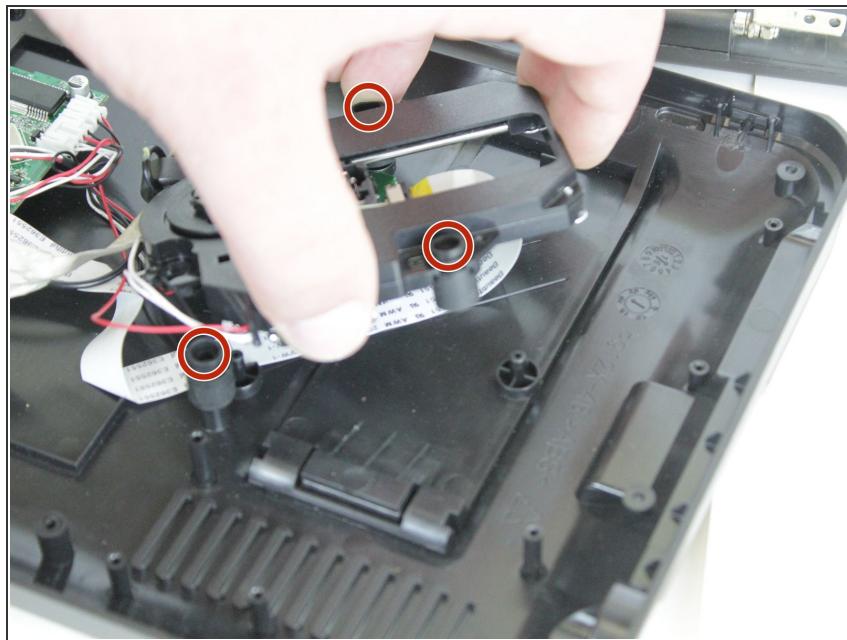

- Pick it straight up, it should slide off the three pegs holding it in place, if not, wiggle each peg individually.

## Step 10

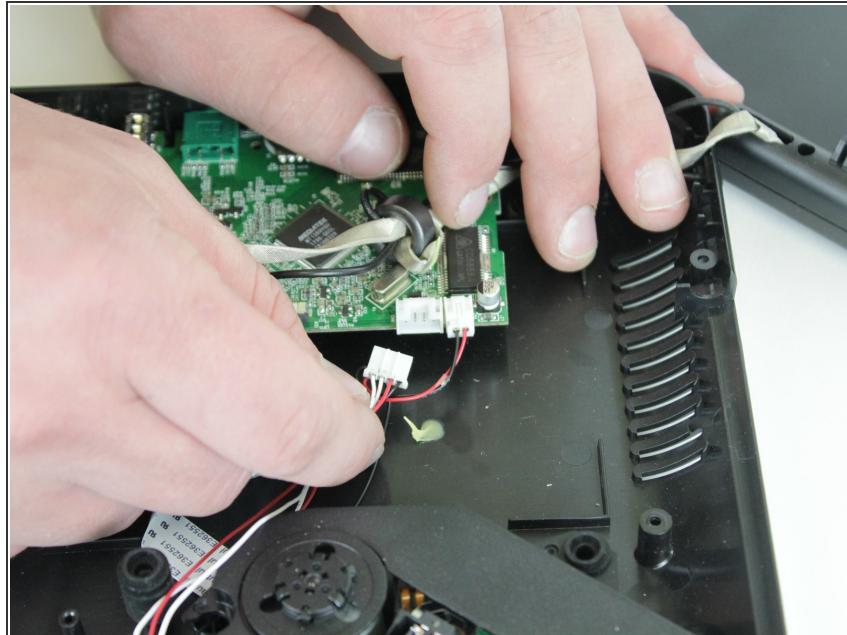

- Once you have it loose, unplug it from the PC Board. Then the disk reader can be removed.

To reassemble your device, follow these instructions in reverse order.