



Insignia NS-VCS14SL7 Stick Vacuum Power Button Replacement

Use this guide to troubleshoot and replace the Insignia NS-VCS14SL7 stick vacuum power button.

Written By: Thibaut Pillot



INTRODUCTION

The Insignia 2-in-1 stick vacuum power button can suddenly stop working or become jammed. In either case, use this guide to fix or replace the power button.

TOOLS:


- [Phillips #2 Screwdriver](#) (1)
- [Soldering Iron](#) (1)

Step 1 — Stick Vacuum Power Button



- Remove the four 12mm Phillips screws , and the one large 32mm Phillips head bolt from the vacuum handle.
- Pull up on the back cover of the vacuum handle and remove it.

Step 2

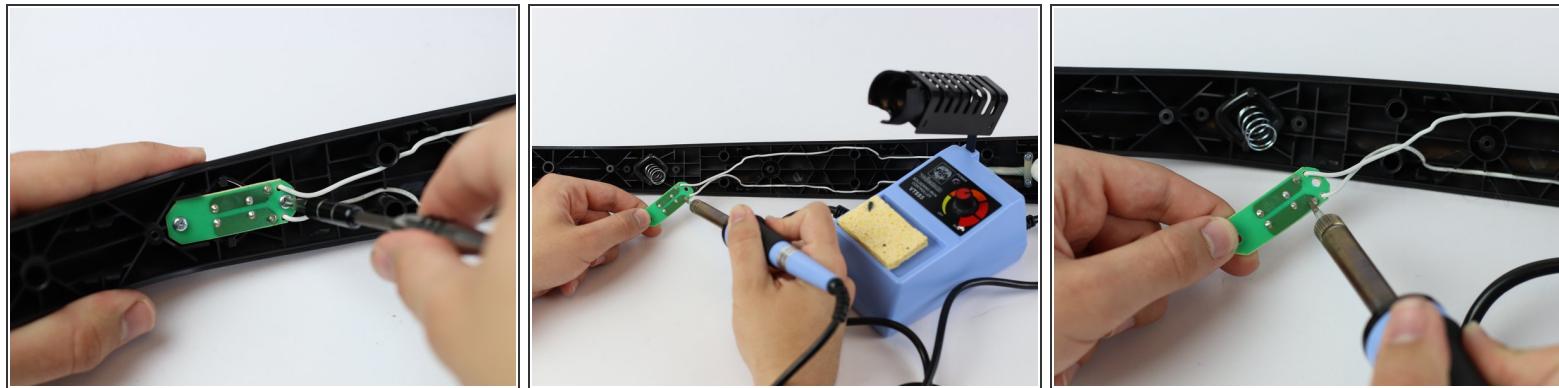

- Remove the two 10mm Phillips #2 screws on the back of the green printed circuit board.

(i) If the circuit board needs to be replaced, locate where the two white wires are soldered to the board, and de-solder the connection.

To reassemble your device, follow these instructions in reverse order.