



Insignia NSD9PDVD15 Screen Replacement

We will explain step by step how to replace the screen for the Insignia NSD9 Portable DVD Player.

Written By: Jen Rodas



 **TOOLS:**

- [Phillips #00 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)

 **PARTS:**


- [Insignia NSD9PDVD15 Replacement Screen](#) (1)

Step 1 — Screen



- Slide the “Open” tab on the top of the device.
- This will allow you to open the device.

Step 2

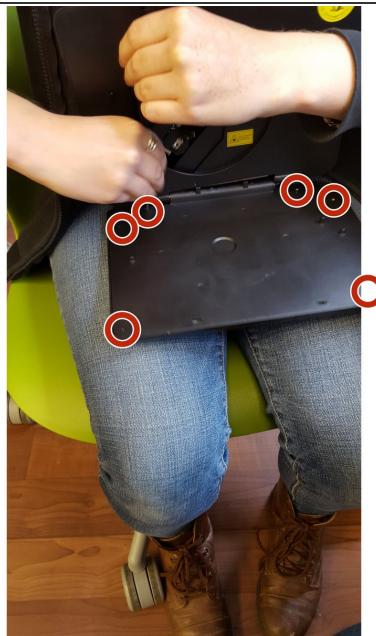

- Remove the six Phillips #00 screws from the screen casing.
- *i* To access two of the screws, first remove 2 small, flat rubber circles from the corners of the screen casing. Use a spudger if necessary.


Step 3



- Remove the two screws from the hinge that holds together the screen casing and the disk panel.


⚠ Abruptly opening the device too wide will break the hinge. To fully access the hinge screws, firmly but gently open the device wider.

Step 4

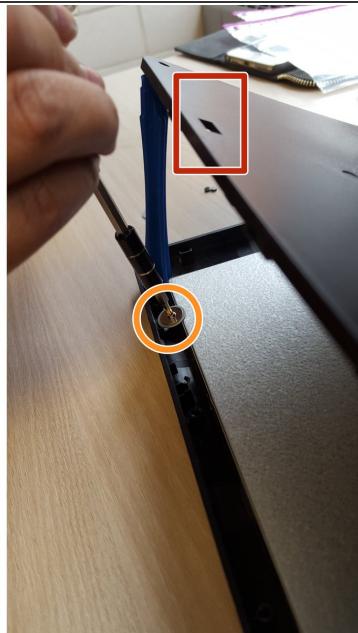

- Insert the plastic opening tool into the rectangular holes and pry open in order to access the interior of the screen casing.
- Remove the four screws and corresponding washers from the edges of the screen.
- Use a plastic opening tool to prop open if necessary.

Step 5

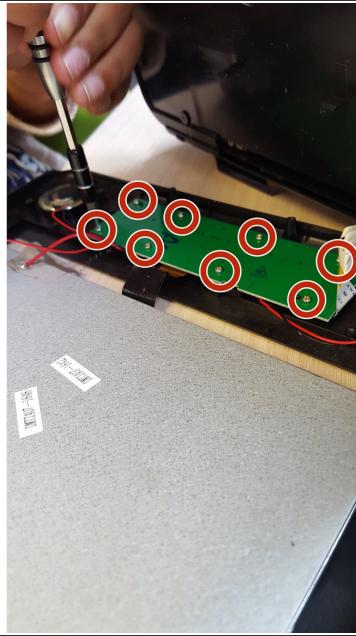


- Remove the eight screws from the green motherboard.

Step 6



- Unplug the red wires from the motherboard by gently pulling them off.
- Then remove the screen.

Step 7

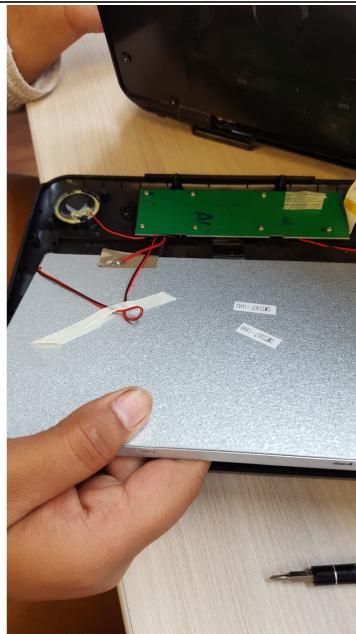

- Set the new screen in place.

To reassemble your device, follow these instructions in reverse order.