



Insignia Sport NS-4V17 Front Case Cover Replacement

These instructions will guide you through installing the Insignia Sport front case cover.

Written By: Wesley Ballar



INTRODUCTION

Does your case have a crack? Want to clean out some dust or dirt trapped underneath the screen?
This guide will help you take the front cover off.

TOOLS:


- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Remove the 3mm Phillips #00 screw on the back of the Insignia NS-4v17.

Step 2

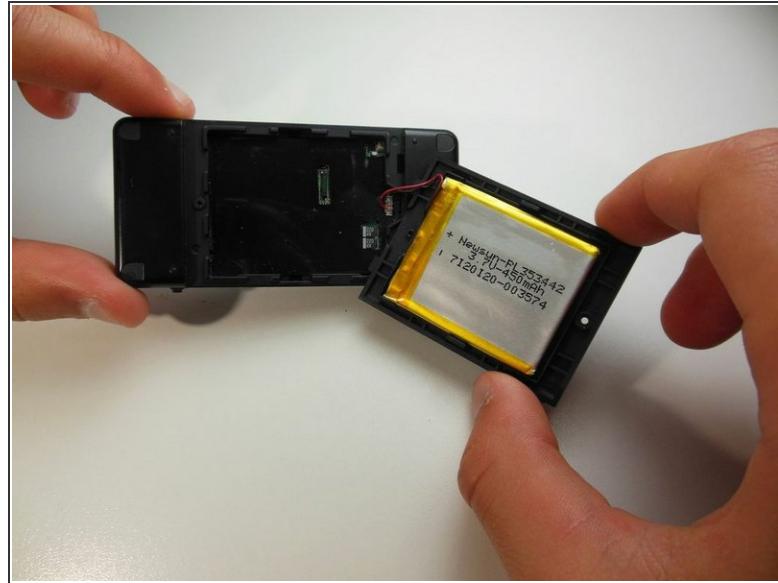

- Detach the back cover by carefully pulling up and out on the back plastic casing.

⚠ Do not pull apart the red wire connecting the battery to the device.


Step 3



- Use the plastic opening tool to reach underneath the battery, opposite from the side with the red wire, and remove it from its plastic case.

 Be careful to not tear the wires while opening the case.


Step 4

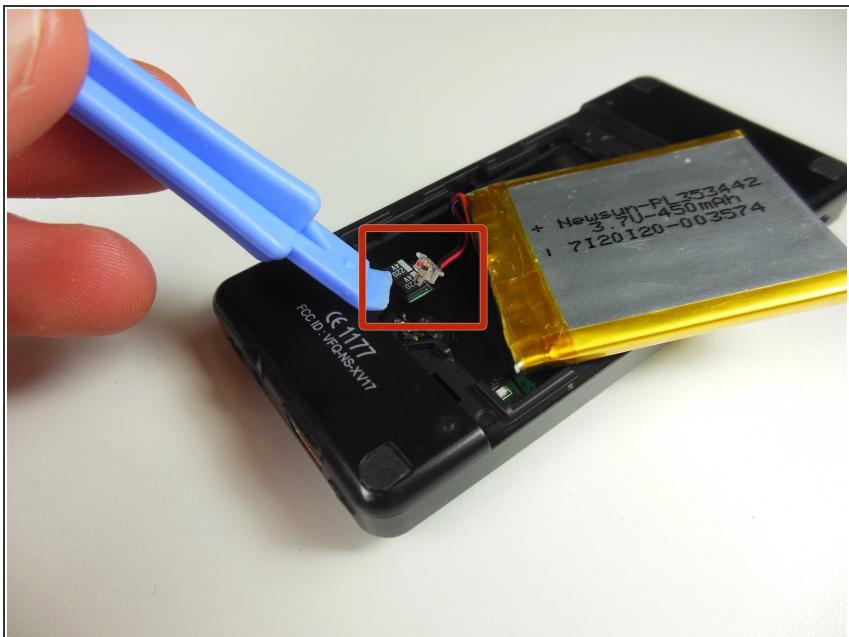

- Reach under the white plastic wire connector using the plastic opening tool and disconnect it from the socket.

 Do not disconnect wires from plastic connector.

Step 5 — Front Case Cover

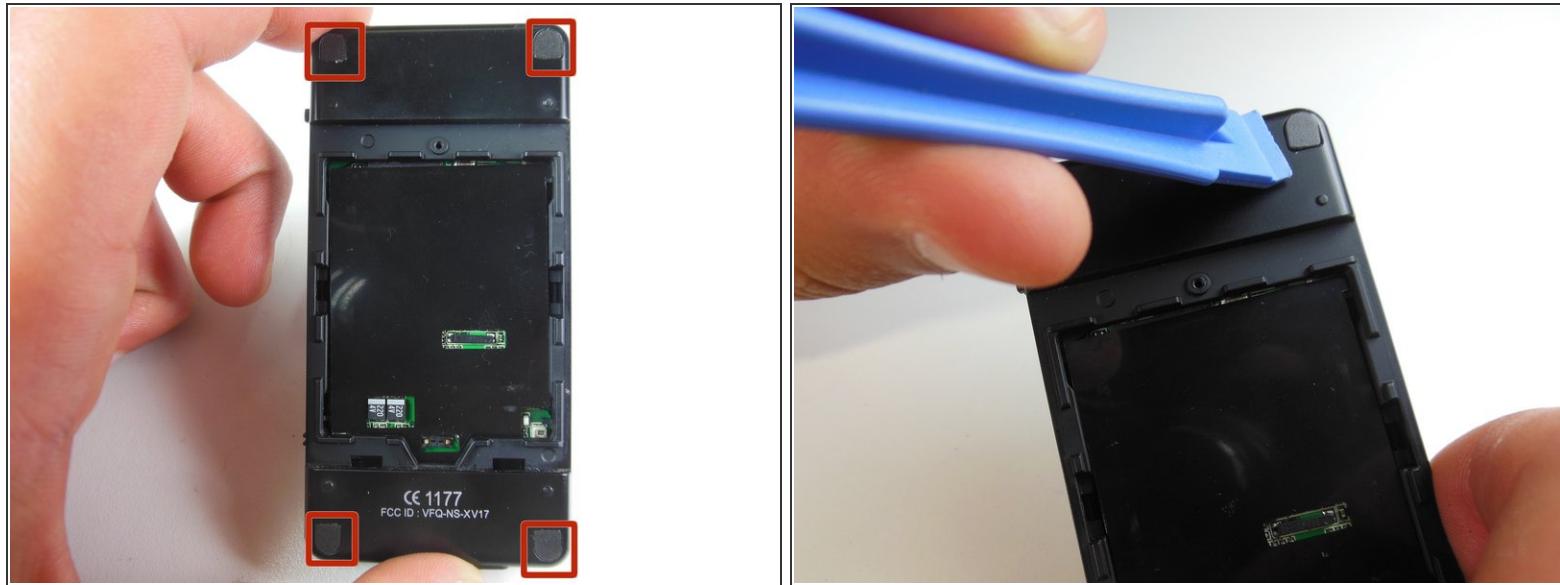


- Remove the four corner plastic covers on the back of the device using the plastic opening tool.

Step 6



- Using a Philips #00 screwdriver remove all four 4.5mm corner screws located underneath the corner pads.

Step 7

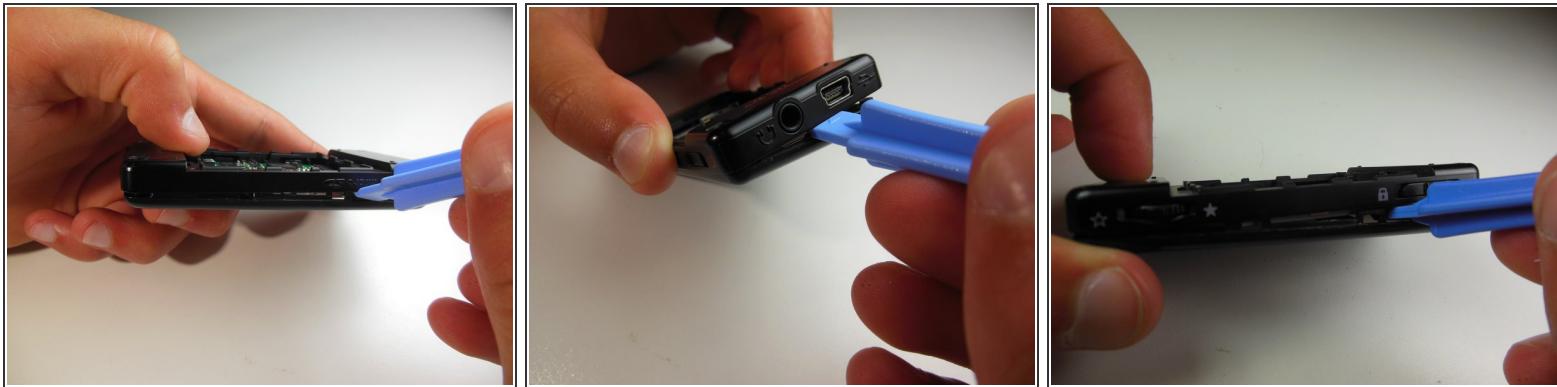

- Carefully wedge the plastic opening tool into either long side of the device.
- Slowly move the plastic opening tool along the side of the device, separating the front and back case covers.
- Repeat these steps on the other side of the device.

Step 8



- Once the front cover is loose, use your fingers to remove the front case cover for a new installation.

To reassemble your device, follow these instructions in reverse order.